# ЛОС

## LCD 顯示器使用手册 AG352UCG6 LED 背光





安全性	4
符號慣例	4
電源	5
安裝	6
清潔	7
其他	8
安裝	9
包裝內容	9
安裝支架與底座	10
調整視角	
連接顯示器	12
系統需求	13
調整	14
設定最佳解析度	14
Windows 10	14
Windows 8	
Windows 7	
快捷鍵	20
OSD Setting (OSD 設定)	21
Luminance (亮度)	
Color Setup (色彩設定)	23
OSD Setup (OSD 設定)	24
Extra (其他)	25
LED 指示燈	
驅動程式	27
顯示器驅動程式	27
Windows 10	27
Windows 8	
Windows 7	
Screen+	
规恰	
旗說線不快式	
· 随插即用	
法境	
FCC 聲明	
WEEE 聲明	
印度電子廢棄物聲明	45
服務	
歐洲地區保固聲明	46

中東與非洲 (MEA)	48
AOC 像素規範	50
ISO 9241-307 CLASS 1	50
北美及南美(不含巴西)適用保固聲明	51
EASE 計畫	53

安全性

## 符號慣例

下列子章節說明本文件中使用的符號慣例。

#### 附註、注意及警告事項

本指南中的文字區塊會伴隨圖示,以粗體或斜體列印。這些區塊屬於附註、注意及警告事項,使用方式如下:



**附註:**「附註」代表重要資訊,可協助您更有效利用電腦系統。



注意:「注意」代表會對硬體造成潛在的損害或資料遺失,並告知您如何避免此類問題。



**警告:**「警告」代表存在人身傷害的可能性,並告知您如何避免此類問題。有些警告可能會以另一格式顯示,也可能 無圖示伴隨顯示。在此情況下,警告會以管理單位規定的特定顯示方式顯示。

## 電源

🗥 本顯示器限制使用標籤所示的電源。如不明住家使用的電源種類,請洽經銷商或當地的電力公司。

▲ 本顯示器配備三腳(第三支接腳用於接地)接地插頭。此種插頭因安全功能,僅適用接地插座。插座如無三腳 接地插孔,可請電工安裝正確插座,或用轉接頭將顯示器妥善安全接地。請勿拆掉接地接腳。

a 雨期或長時間不使用時,請拔掉本顯示器插頭,以防電源突波造成損壞。

🕼 請勿使電源線及延長線過載,否則可能會導致失火或觸電。

**介**市電插座應安裝於設備附近便於插拔的位置。

▲ 僅適用隨附的電源變壓器

> 製造商: TPV ELECTRONICS (FUJIAN) CO., LTD.型號: ADPC2090 (輸出: 20Vdc, 4.5A) (可選) 製造商: TPV ELECTRONICS (FUJIAN) CO., LTD.型號: ADPC20120 (輸出: 20Vdc, 6.0A) (可選)

## 安裝

請勿將顯示器放置在不穩固的推車、底座、三腳架、托架或電腦桌上。若顯示器因不穩而掉落,可能會導致人員受傷並造成本產品嚴重受損。請僅使用製造商建議使用或隨本產品搭售的推車、底座、三腳架、托架或電腦桌。安裝本產品時,請遵循製造商指示,並使用製造商建議的安裝配件。產品放置在推車上時,請小心移動。

▲ 切勿將任何異物塞入顯示器機櫃上的縫隙,否則會破壞電路零件,導致火災或觸電。切勿將液體潑灑在顯示器 上。

▲ 將顯示器安裝於牆壁或架上時,請務必使用原廠核可的安裝套件,並按套件指示進行安裝。

如下圖所示,請在顯示器周圍預留部分空間。否則,會因空氣循環不佳而導致過熱,造成火災或顯示器受損。

顯示器安裝在牆上或底座上時,請參閱以下建議的周圍通風區域:

#### 底座安裝



## 清潔

注 請定時用布清潔機櫃。可使用軟性清潔劑拭除汙垢,但避免使用會腐蝕產品機櫃的強力清潔劑。

在清潔時,請確定切勿讓清潔劑滲入產品內部。避免使用太粗糙的清潔布,以免刮傷螢幕表面。

\_\_\_\_\_\_清潔產品前,請先拔開電源線。







## 其他

<u></u> 若產品散發出強烈的異味、聲音或煙霧,請「立即」拔下電源插頭並聯絡服務中心。

<u>
</u>
請確定通風口未被電腦桌或窗簾擋住。

▲ 請勿在劇烈震動或高衝擊環境下,操作 LCD 顯示器。

在操作或運送期間,請勿碰撞或摔落顯示器。

🌆 警語: 使用過度恐傷害視力。

11注意事項:

- (1) 使用 30 分鐘請休息 10 分鐘。
- (2) 未滿2歲幼兒不看螢幕,2歲以上每天看螢幕不要超過1小時。

## 安裝

包裝內容



★某些訊號線可能只在部份國家或區域提供(DP、HDMI、USB 及麥克風線)。詳情請洽當地經銷商或 AOC 分公司。

安裝支架與底座

請依以下步驟安裝或取下底座。

安裝:



取下:



## 調整視角

要獲得最佳觀看效果,建議先面對螢幕的正面,然後再依您的喜好調整螢幕的角度。 請固定腳架,才不致在改變螢幕角度時推倒螢幕。 可將顯示器角度調整如下: 傾斜角度:-5.5°~28°



び附註: 調整角度時,切勿超過 28 度以防受損。

## 連接顯示器

顯示器及電腦後方接線:



- 1 麥克風輸入
- 2 耳機(合併麥克風)
- 3 USB3.0 下行埠 + 快速充電
- 4 USB3.0 下行埠
- 5 USB3.0 上行埠
- 6 DP
- 7 HDMI
- 8 麥克風輸出(連接至電腦)
- 9 DC 輸入

為保護設備,在連接電腦及 LCD 顯示器前,請務必將電源關閉。

- 1 將電源線連接至顯示器後的 DC 連接埠。
- 2 選擇性步驟-需要具備 HDMI 連接埠的視訊卡) -將 HDMI 纜線兩端分別插入顯示器背面及電腦的 HDMI 連 接埠。
- 3 選擇性步驟-需要具備 DP 連接埠的視訊卡)-將 DP 纜線兩端分別插入顯示器背面及電腦的 DP 連接埠。
- 4 開啟顯示器及電腦。
- 5 視訊內容支援解析度:

DP: 3440x1440@120Hz (最大值)

HDMI: 3440x1440@50Hz (最大值)

若顯示器顯示影像,代表安裝正確完成。若未顯示影像,請參考故障排除資訊。

### 系統需求

1. G-system 功能:

相容繪圖卡: GeForece GTX 650 Ti Boost 或更高階版本(如需相容繪圖卡列表,請造訪

www.nividia.com/G-sync)

- 驅動程式: GeForece 331.58 或
- 更高階 OS: Windows 7/8/8.1

## 調整

## 設定最佳解析度

#### Windows 10

#### Windows 10 環境:

- 在 START (開始)上按一下右鍵。
- 按一下「CONTROL PANEL (控制台)」。



按一下「DISPLAY (顯示器)」。

•

•

All Control Panel Items					– a ×
+ + + T 🖬 > Control Panel >	All Control Panel Items				v b Search Control Panel P
File Edit View Tools Help					
Adjust your computer's settings	s				/ View by: Large icons *
Administrative Tools	AutoPlay	Backup and Restore (Windows 7)	RitLocker Drive Encryption	Color Management	
Credential Manager	Date and Time	Default Programs	Device Manager	Devices and Printers	
Display	Ease of Access Center	<b>Ēlo</b> Elo 触摸屏配置	File Explorer Options	File History	
Flash Player (32-bit)	A Fonts	• HomeGroup	Indexing Options	Internet Options	
Keyboard	🛒 Language	J Mouse	Network and Sharing Center	Personalization	
Phone and Modem	Power Options	Programs and Features	Realtek HD Audio Manager	Recovery	
Region	RemoteApp and Desktop Connections	Security and Maintenance	Sound Sound	Speech Recognition	
Storage Spaces	Sync Center	System	Taskbar and Navigation	Troubleshooting	
User Accounts	Windows Defender	Windows Firewall	Work Folders	邮件 (32-bit)	

按一下「Change display settings (變更顯示設定)」按鈕。

Display		-	×
- → ~ ↑ 💷 > Control	Panel > All Control Panel Items > Display 🗸 🖑	Search Control Panel	م
e Edit View Tools Help	)		
Control Panel Home	Change size of items		
Adjust resolution	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u>		
Calibrate color Change display settings	scaling level (not recommended). Setting custom levels can lead to unexpected behavior on some displays.		
Adjust ClearType text	Change only the text size		
	Instead of changing the size of everything on the desktop, change only the text size for a specific item.		
	Title bars v 9 v Bold		
	Apply		
See also			
Devices and Printers			

• 將解析度 SLIDE-BAR (滑桿)設定為最佳預設解析度。

Screen Resolution			- 0	×
→ ~ ↑ 💷 > Control Par e Edit View Tools Help	el > All Control Panel Items > Display > Screen Resolution	~ ð	Search Control Panel	Q
	Change the appearance of your display	Data		
		Identify		
	Display: 1. B24 v Bacolution: 1920 v 1090 (Recommended) v			
	Orientation: Landscape ~			
		Advanced settings		
	Make text and other items larger or smaller What display settings should I choose?			
		OK Cancel Apply		

#### Windows 8

Windows 8 環境:

٠ 請按一下滑鼠右鍵,再按一下螢幕右下角的 All apps (所有應用程式)。 Start DQETEST-32 e  $\sim$ ---ĨO. :-) **~** •  $\widehat{}$  $\mathbf{\nabla}$ Ó ₩., 

b Bing	Reader		WordPad	Computer
Calendar	SkyDrive	Calculator	XPS Wewer	Control Panel
Camera	🕎 Sports	Character Map		Default Programs
Desktop	a Store	Math Input Panel	Magnifier	The Explorer
Finance	Travel	Notepad	Narrator	Peip and Support
Games	Wideo	👩 Paint	On-Screen Keyboard	2 Run
internet Explorer	Weather	Remote Desitop Connection	Windows Speech Recognition	Insk Manager
Mai		Snipping Tool		Windows Defender
Maps		Sound Recorder	GPUNIew	S Windows Easy Transfer
Messaging		Steps Recorder	GPUMew Help	Vindows Engy Transfer Reports
Music		Sticky Notes	Windows Performance	Windows Powershell
News		Windows Fax and Scan	Windows Performance	
People		Windows Journal		
Photos		Windows Media	Command Prompt	

- 設定「View by (檢視方式)」為「Category (類別)」。
- 按一下「Appearance and Personalization (外觀及個人化)」。



• 按一下「DISPLAY (顯示器)」。

8	Appearance and Personalization			- • ×
🛞 🍥 🝷 🕆 💺 > Control Pa	anel > Appearance and Personalization >	v C	Search Control Panel	Q
Control Panel Home System and Security Network and Internet Hardware and Sound Programs User Accounts and Family Safety • Appearance and Personalization Clock, Language, and Region Ease of Access	Personalization Change the theme       Change desktop background Change sound effects       Change screen saver         Display Make test and other items larger or smaller       Adjust screen resolution         Ease of Access Center Accommodate low vision       Use screen reader       Turn on easy access keys       Turn High Contrast on or off         Folder Options Specify single- or double-click to open       Show hidden files and folders         Preview, delete, or show and hide fonts       Change Font Settings       Adjust ClearType test			

• 將解析度 SLIDE-BAR (滑桿)設定為最佳預設解析度

		Screen Resolution			-	
🛞 🎯 👻 🕈 💆 🕨 Control	Panel > Appearance and Personalization	Display      Screen Resolution		v C	Search Control Panel	م
	Change the app	eearance of your display	Detect			
	Display: Resolution: Orientation: Make text and othes What display setting	1. PLX2780H V 1920 × 1080 (Recommended) V High 1920 × 1080 (Recommended) 1600 × 900	Advanced settings			
		1024 × 768 Low	OK Cancel Apply			

#### Windows 7

Windows 7 環境:

- 按一下 **START (開始)**。
- ・ 按一下「CONTROL PANEL (控制台)」。



按一下「Appearance (外觀)」。

•

diurt your computer's cettings				View by Small icons *	
ajust your computer's settings					
Action Center	C Administrative Tools	AutoPlay	Backup and Restore		
Color Management	Credential Manager	Date and Time	🕐 Default Programs		
Desktop Gadgets	Jevice Manager	a Devices and Printers	👮 Display		
Ease of Access Center	E Folder Options	A Fonts	Getting Started		
& HomeGroup	A Indexing Options	Internet Options	- Keyboard		
Location and Other Sensors	J Mouse	Stewark and Sharing Center	Notification Area lcons		
NVIDIA Control Panel	MVIDIA PhysX	🍂 Parental Controls	/ Pen and Touch		
Performance Information and Tools	Personalization	Shone and Modern	Power Options		
Programs and Features	Realtek HD Audio Manager	Kecovery	Aregion and Language		
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	Sync Center		
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting		
User Accounts	a Windows Anytime Upgrade	Windows CardSpace	Windows Defender		
Windows Firewall	a Windows Update				

• 按一下「DISPLAY (顯示器)」。



• 按一下「Change display settings (改變顯示設定)」按鈕。

G - Control Panel >	All Control Panel Items   Display		• • Search Control Faref
Control Panel Home Adjust resolution Change display settings Adjust Clearly the text Set custom fext size (DPD	Make it easier to read what's C You can change the use of test and oth temporarily enlarge just part of the scre Senser- 190% Medium - 125% (default) Clarger - 150%	on your screen er tens on your screen by choosing one of these options. To ers, use the <u>Magnifier</u> tool. Preview	9
		Apply	
See also Personalization Devices and Printers			

#### • 將解析度 SLIDE-BAR (滑桿)設定為最佳預設解析度

<b>B</b>		Screen Resolution				
🛞 🍥 👻 🕇 📮 ) Control	Panel  > Appearance and Personalization	Display      Screen Resolution		v C	Search Control Panel	م
	Change the ap	Dearance of your display	Detect Identify			
	Display: Resolution: Orientation:	1. PLX2780H V 1920 × 1000 (Recommended) V High 1920 × 1080 (Recommended) 1920 × 1080 (Recommended)	Advanced settings			
	Make text and other What display setting		OK Cancel Apply			
		1024 × 768 Low				

## 快捷鍵



1	音量/-
2	+
3	來源 / 結束
4	選單 / 輸入
5	電源

#### 來源 / 結束

OSD 未關閉時,請按下結束按鈕儲存使用者資料。 若 OSD 關閉,則可按壓「來源」按鈕以執行「來源」快速鍵功能。

#### 音量/-

畫面無 OSD 時,請按一下音量按鈕啟用音量調整桿,再按 - 或 + 鍵調整音量(僅適用配備喇叭的機型)。

#### 選單 / 輸入

按下即可顯示 OSD 或確認所選擇的項目。

#### 電源

按下電源按鈕,顯示器會進入待機模式。 13 分鐘後,顯示器會自動關閉。

## OSD Setting (OSD 設定)

#### 控制鍵的基本及簡易指令。



- 1. 按下 MENU 按鈕啟動 OSD 畫面。
- 按下 或 + 鍵瀏覽各項功能。 所需功能反白顯示後,請按下 MENU 按鈕將其啟動,再按 或 + 鍵瀏覽各項 子選單功能。 所需功能反白顯示時,按一下 MENU 按鈕即可啟動該功能。
- 3. 按 或 + 鍵變更所選功能的設定值。 按下 Exit 鍵退出功能表。重複步驟 2-3 即可調整其他任何功能。

### Luminance (亮度)

Contrast	E		50	*	Luminance	
Brightness			90		Color Setup	
Game color			100	<b>S</b> .	OSD Setup	
Shadow Control			0	$\times$	Extra	
Gamma	•	Gamma1	►			
Overdrive	•	Medium	►			
Game mode	•	Off	►			
Resolution: 3440	)x144	0@60Hz				

- 1. 按下(選單)鍵顯示選單。
- 2. 按 或 + 鍵選擇 🌾 (Luminance (亮度)), 再按 Menu 進入。
- 3. 按 或 + 選擇子功能表, 再按 Menu 進入功能表。
- 4. 按 或 + 鍵進行調整。
- 5. 按下 Exit 鍵退出。

		Contrast (對比)	數位暫存器 的對比。 每按一下會增加 / 減少數值 1	0-100
		<b>Brightness</b> (亮度)	亮度調整。每按一下會增加 / 減少數值 1	0-100
		Game color (遊戲色彩)	調整遊戲色彩	0-200
Luminance	X	Shadow Control (暗場控制)	調整數位亮度偏移	0-3
(亮度)	N.	<b>Gamma</b> (色差補正)	色差補正調整	色差補正 1 (2,2) 色差補正 2 (2,0) 色差補正 3 (2,4)
		<b>Overdrive</b> (加速)	調整反應時間	強 / 中 / 弱 / 亮起 / 關閉
		Game Mode (遊戲模式)	選擇 Game Mode(遊戲模 式)。	FPS RTS Racing (競速) Gamer(玩家) Off (關閉)





- 1. 按下(選單)鍵顯示選單。
- 2. 按 或 + 選擇 (Color Setup (色彩設定)), 再按 Menu 進入。
- 3. 按 或 + 選擇子功能表, 再按 Menu 進入功能表。
- 4. 按 或 + 鍵進行調整。
- 5. 按下 Exit 鍵退出。

		LowBlue Mode (LowBlue 模式)		調整藍色增益偏移	0-20
			Warm (暖色)	從 EEPROM 恢復暖色溫。	不適用
			Normal (正常)	從 EEPROM 恢復正常色溫。	不適用
	0	Color Temp ( 色溫 )	Cool (冷色)	從 EEPROM 恢復冷色溫。	不適用
Color Setup (色彩設定)			sRGB	從 EEPROM 恢復 sRGB 色溫。	不適用
			User (使用	從 EEPROM 恢復使用者色溫。	不適用
		Red (紅色)	不適用	數位暫存器紅色增益值。每按一下會增加 / 減少數值 1	0-100
		Green (綠色)	不適用	數位暫存器綠色增益值。 每按一下會增 加 / 減少數值 1	0-100
		Blue (藍色)	不適用	數位暫存器藍色增益值。 每按一下會增 加 / 減少數值 1	0-100

附註:

(1) sRGB 色溫中,無法調整亮度及對比

(2) OSD 功能表顏色會隨畫面顏色變更而改變

#### OSD Setup (OSD 設定)

Language	•	English	•	*	Luminance
Timeout			120		Color Setup
H.Position			100	<b>S</b>	OSD Setup
V.Position			60	$\times$	Extra
Transparence			25		
Break Reminder	•	Off	•		
Resolution: 3440	Dx144	0@60Hz			

- 1. 按下(選單)鍵顯示選單。
- 2. 按 或 + 選擇 (OSD Setup (OSD 設定)), 再按 Menu 進入。
- 3. 按 或 + 選擇子功能表, 再按 Menu 進入功能表。
- 4. 按 或 + 鍵進行調整。
- 5. 按下 Exit 鍵退出。

	Language (語 言)	將 OSD 顯示語言設為英語(英語 為預設值)。	English、Français、 Español、Português、 Deutsch、Italiano、 Nederlands、Svenska、 Suomi、Polski、Čeština、 Русский、한국어、繁体中 文、简体中文、日本语
	Timeout (逾時)	調整 OSD 逾時。 每按一下會增加 / 減少數值 5	5-120
OSD Setup (OSD 設定)	H. Position (水平位置)	調整 OSD 水平位置。 每按一下會 增加 / 減少數值 25	0-100
	V. Position (垂直位置)	調整 OSD 垂直位置。 每按一下會 增加 / 減少數值 5	0-100
	Transparence (透明度)	調整 OSD 透明度。每按一下會增 加 / 減少數值 25	0-100
	Break Reminder (休息提醒)	使用者持續工作超過 1 小時的休息提醒	ON(開啟) / OFF(關閉)

附註:

- 若顯示器開啟,每小時(1、2、3......24 小時、>24 小時)都會出現休息提醒訊息, 訊息會顯示 10 秒鐘,按下任一功能鍵訊息便會消失。
- 2) 訊息位置位於預設畫面中央, 無法透過 OSD 進行變更。
- 3) 電源開啟 / 關閉、DC 開啟 / 關閉或進入 / 退出節能模式時, 會清除工作時間並重新計算。
- 4) OSD 逾時功能可儲存資料。

Reset	►		ž	<b>X</b>	Luminance	
OverClock	• •				Color Setup	
Deep Slee	p 🖣	ON 🕨			OSD Setup	
USB Charg	ge 🖪	OFF 🕨	. 🎽	×	Extra	
LED Color	•	Blue	•			
LED Inten	sity ┥	OFF 🕨	•			
Resolutio	n: 3440x1440@	060Hz				
<b>1</b> . 按下(選	<b>巽單)鍵顯示選</b> 單	Ξ. 。				-
0 校 式	. 你#?暗+呀	( <b>F</b> uture (甘	(4)、 五校 (			
<ol> <li>Z. 按 · 则</li> <li>3 按 - 或</li> </ol>	+ 鍵選擇 《	(Extra(共 ē 百按 Men	10 <i>门</i> ,冉按Ⅰ □ 谁λ 劢能非	Wenu 進入。 長	3	
<ol> <li>3. 按 - 或</li> <li>4. 按 - 或</li> </ol>	<ul> <li>+ 鍵進行調整。</li> </ul>	C, HIG MEIN	u進八功肥イ	χ		
5. 按下 Ex	it 鍵退出。					
		<b>Reset</b> (重	清除自動設	定的各個舊	状態, 並將色溫設為	是
		置)	暖色 不劫行重罢	近回土中	北丰	不
			小扒打里且	,赵固王功	北水。	
		OverCleak	<b></b>			On(開啟)/ Off(開闭)
		(超頻)	Max Refres	sh rate(最高	高重新整理速率)	120
			Apply & Re	boot(套用)	與重新啟動)	是/否
		熟睡	沒有訊號時 模式	,螢幕將在	15 分鐘後進入睡眠	On (開啟)
	-		沒有訊號時	,螢幕不進	入睡眠模式	Off (關閉)
Extra	1	USB 充電	沒有訊號時	,USB 無法	云援 USB 充電	Off (闢閉)
(共他)			沒有訊號時	,USB 可支	〔援 USB 充電	On (開啟)
		ULMB	停用 G_syi 且 <=120H	nc 功能,時 IZ	序垂直頻率 >=85HZ	On (開啟)
			啟用 G_syi 功能	nc 功能或顯	示卡不支援 G_sync	Off (關閉)
		LED 指示 燈	調整 LED	背光的顏色。	,	Red (紅色) Green (綠色) Blue (藍色)
		LED 背光 強度	調整 LED	背光的強度。		Weak (弱) Medium (中) Strong (強) Off (關閉)
			1			

附註: OSD 語言不可重置。

Extra (其他)

## LED 指示燈

狀態	LED 顏色
Full Power Mode(全電源模式)	藍色
Active-off Mode (主動關閉模式)	橙色

## 驅動程式

## 顯示器驅動程式

#### Windows 10

- 啟動 Windows® 10
- 在 START (開始)上按一下右鍵。
- 按一下「Control Panel (控制台)」。



#### 按一下「Display (顯示器)」圖示。

•



• 按一下「Change display settings (變更顯式設定)」按鈕

	Display		-	×
÷	- 🔿 👻 🛧 📃 > Control Panel	> All Control Panel Items > Display v 🖸	Search Control Panel	9
Fi	le Edit View Tools Help			
	Control Panel Home	Change size of items		?
•	Adjust resolution Calibrate color	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays.		
	<u>Change display settings</u> Adjust ClearType text	Change only the text size		
		Instead of changing the size of everything on the desktop, change only the text size for a specific item.		
		Title bars V 9 V Bold		
		Apply		
	See also			
	Personalization			
	Devices and Printers			

• 按一下「AdvancedSettings(進階設定)」按鈕。

Screen Resolution			
← → ~ ↑ 🗔 > Control Pane File Edit View Tools Help	I > All Control Panel Items > Display > Screen Resolution v 🖉	Search Control Panel	٩
	Change the appearance of your display		
	Detect		
	Display: 1. B24 ~ Resolution: 1920 × 1080 (Recommended) ~ Orientation: Landscape ~		
	Advanced settings		
	Make text and other items larger or smaller What display settings should I choose?		
	OK Cancel Apply		

• 按一下「Monitor (顯示器)」標籤,再按一下「Properties (內容)」按鈕。



• 按一下「Driver (驅動程式)」標籤。

Generic PnF	Seneric PnP Monitor Properties				
General	Driver Details				
	Generic PnP Mo	nitor			
	Driver Provider:	Microsoft			
	Driver Date:	6/21/2006			
	Driver Version:	6.1.7600.16385			
	Digital Signer:	Microsoft Windows			
Driv	ver Details	To view details about the driver files.			
Upd	ate Driver	To update the driver software for this device.			
Roll I	Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.			
[	Disable	Disables the selected device.			
L	Jninstall	To uninstall the driver (Advanced).			
		OK Cancel			

按一下「Update Driver...(更新驅動程式...)」,再按一下「Browse my computer for driver software(瀏覽 電腦上的驅動程式軟體)」按鈕,即可開啟「Update Driver Software-Generic PnP Monitor(更新驅動程式軟

體一通用 PnP 顯示器)」視窗。

•

•	Search automatically for updated driver software Windows will search your computer and the Internet for the latest driver	
	software for your device, unless you've disabled this feature in your device installation settings.	
÷	Browse my computer for driver software Locate and install driver software manually.	

選擇「Let me pick from a list of device drivers on my computer (從電腦上的裝置驅動程式清單中挑選)」。



•

按一下「Have Disk (從磁碟)」按鈕。按一下「Browse (瀏覽)」按鈕,進入下一個目錄:
 X:\Driver\module name(X 是 CD-ROM 光碟機的磁碟機代號)。

	iner Fathuara Conaris DeD Manitar		X
	iver Software - Generic PhP Monitor		
Select the d	evice driver you want to install for this har	rdware.	
Install From	the manufacturer and model of your hardware device : n Disk	and then click Next	€ you
	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel	
	Copy manufacturer's files from: F\Drivers\e936Vw	Browse	
This driver Tell me wh	is digitally signed. and the signing is important	Have Disk	
		Next	incel

- 選擇「xxx.inf」檔案,再按一下「Open (開啟)」按鈕。按一下「OK」按鈕。
- 選擇顯示器型號後,按一下「Next (下一步)」按鈕。檔案便會自 CD 複製到硬碟。
- 關閉所有開啟的視窗後,取出 CD。
- 重新啟動系統。系統會自動選擇最高的重新整理速率及相應的色彩調配設定檔。

### Windows 8

- 啟動 Windows® 8
- 請按一下滑鼠右鍵,再按一下螢幕右下角的 All apps (所有應用程式)。



- 按一下「Control Panel (控制台)」圖示
- 設定「View by (檢視方式)」為「Large icons (大圖示)」或「Small icons (小圖示)」。

		All Control Pan	el Items		- 0
i 🕘 🐘 🕈 🥵 🗸 Control Panel	All Control Panel Items			✓ 6 St	arch Control Panel
idjust your computer's setting	s			View	v by: Large icons *
🔊 Action Center	Administrative Tools	AutoPlay	🍕 BitLocker Drive Encryption	🕺 Color Management	Large icons     Small icons
Credential Manager	Date and Time	Default Programs	Device Manager	Devices and Printers	
💐 Display	🚱 Ease of Access Center	Family Safety	File History	Flash Player (32-bit)	
Folder Options	K Fonts	🝓 HomeGroup	Indexing Options	Internet Options	
Keyboard	🐖 Language	Location Settings	I Mouse	Network and Sharing Center	
Notification Area Icons	NVIDIA Control Panel	Performance Information and Tools	Personalization	Phone and Modem	
Power Options	Programs and Features	Recovery	😥 Region	RemoteApp and Desktop Connections	
Sound	Speech Recognition	Storage Spaces	Sync Center	🌉 System	
Taskbar	Troubleshooting	User Accounts	😻 Windows 7 File Recovery	Windows Defender	
Windows Firewall	Windows Update				

i 🥝 📋 📴		11:16 PM 12/25/2012

• 按一下「Display (**顯示器)」**圖示。

Action Center	ins T
Exist Management     © Ordential Managem     ID Data and Time     © Default Respans       Deals do diadets     ID each Access and Printers     © Data and Time     © Data and Time       Deals do diadets     ID each Access and Printers     © Data and Time     © Data and Time       Deals do diadets     ID each Access and Printers     ID each Access and Printers     ID each Access and Printers       Deals do diadets     ID each Access and Printers     ID each Access and Printers     ID each Access and Printers       Deals do diadets     ID each Access and Printers     ID each Access and Printers     ID each Access and Printers       Deals do diadets     Maxae     ID featured Datas     ID each Access and Printers       Deals do diadets     Maxae     ID featured Datas     ID each Access and Printers       Deals do diadets     Printers do Access     ID each Access and Printers       Deals do diadets     ID each Access and Printers     ID each Access and Printers       Deals do diadets     ID each Access and Printers     ID each Access and Printers       Deals do diadets     ID each Access and Printers     ID each Access and Printers       Deals do diadets     ID each Access and Printers     ID each Access and Printers       Deals do diadets     ID each Access and Printers     ID each Access and Printers       Deals do diadets     ID each Access and Printers     ID	
B Destrop Galagets     B Device Managet     All Devices and Privers     Image Status       Date of Access Center     Image Factory     Factory Options     Factory Options     Image Centers options       Device Managet     Image Status     Image Centers options     Image Centers options     Image Centers options       Lacation and Other Sensors     Image Centers options     Image Centers options     Image Centers options     Image Centers options       Monto Center Device Managet     Image Centers options     Image Centers options     Image Centers options     Image Centers options       Image Center Device Centers     Image Centers options     Image Centers options     Image Centers options     Image Centers options       Image Center Device Centers     Image Centers     Image Centers options     Image Centers options     Image Centers options       Image Center Device Centers     Image Centers     Image Centers options     Image Centers options       Image Center Device Centers     Image Centers     Image Centers options     Image Centers options	
Date of Access Center     IF Folder Options     Forms     If Centing Stanted       HomeRorop     Imbining Options     Imbining Options     Imbining Options     Imbining Options       Location and Dole Sension     Imbining Options     Imbining Options     Imbining Options     Imbining Options       VEXAL Control Famel     Imbining Options     Imbining Options     Imbining Options     Imbining Options       VEXAL Control Famel     Imbining Options     Imbining Options     Imbining Options     Imbining Options       Import Add Control Famel     Imbining Options     Imbining Options     Imbining Options     Imbining Options       Import Add Control Famel     Imbining Options     Imbining Options     Imbining Options     Imbining Options       Import Add Control Famel     Import Add Examples     Imbining Options     Import Add Examples     Imbining Options       Import Add Examples Controls     Import Add Examples     Import Add Models     Import Add Models     Import Add Models       Import Add Examples Controls     Import Add Models     Import Add Models     Import Add Models     Import Add Models       Import Add Examples Controls     Import Add Models     Import Add Models     Import Add Models     Import Add Models       Import Add Examples Controls     Import Add Models     Import Add Models     Import Add Models     Import Add Models	
JumenCorp <ul> <li>Decemp Options</li> <li>Stance Options</li> <li>Stance Options</li> <li>Stance Options</li> <li>Stance Options</li> <li>Stance Options</li> <li>Monte Stance Options</li> <li>Not Active Options</li> <li>Preconstration</li> <li>Note and Mode</li> <li>Note and Mode</li> <li>Note and Mode</li> <li>Preconstration</li> <li>Note and Mode</li> <li>Preconstration</li> <li>Stance Options</li> <li>Stan</li></ul>	
Location and Other Semons               Mouse            MINDEA Control Pavel               MINDEA Control               / Personal Control               / Personal Control               / Personal Control               / Personal Control               // Poss             // Contro               // Poss	
NEDA Control Revel         M WIDEA Preyox         Revenue Controls         / Pens and Touch           Reformance Enformation and Toulo         Reformance And Modern         Revel Options           Reformance Enformation and Revel Reformance And Modern         Revel Options         Revel Options           Reformance Enformation and Revel Reformance And Modern         Revel Options         Revel Options           Reformance Enformation and Revel Reve	
Performance Monitation and Tools          Periodulization               Periodulization             Periodulization               Periodulization               Periodulization               Periodulization               Periodulization               Periodulization               Periodulization               Periodulization               Periodulization	
Programs and Features 🗰 Reatinek HD Audio Manager 💰 Recovery 🦻 Region and Language Remote/app and Desitiop Convections 🔮 Sound 0 Speech Recognition 🚳 Sync Center	
RemoteApp and Desktop Connections 🛞 Sound 🕴 Speech Recognition 🛞 Sync Center	
R Taxa B	
system at lablet HC Settings Lablet AC Settings	
🖁 User Accounts 😽 Windows Anytime Upgrade 🔃 Windows CardSpace 👪 Windows Defender	
🖁 Windows Firewall 🛛 👌 Windows Update	
📽 Windows Firewall 🖉 Windows Update	

• 按一下「Change display settings (變更顯式設定)」按鈕。

Control Panel	All Control Panel Items      Display		Search Control Panel     P
Control Panel Home Adjust resolution Calibrate color	Make it easier to read what's or You can change the size of text and othe temporarily enlarge just part of the scree	n your screen r items on your screen by choosing one of these options. To n, use the <u>Magnificr</u> tool.	Ð
Change display settings Adjust ClearType text	Smaller - 100%	Preview	
Set custom text size (DPI)	Medium - 125% (default)		
	© Larger - 150%		
		Apply	
See also			
Personalization			
Devices and Printers			

• 按一下「AdvancedSettings(進階設定)」按鈕。

😋 🕞 = 💐 + Control Panel + All Control Panel Ite	ns 🕨 Display 🕨 Screen F	Resolution		Search Control Panel
	Change the appear	rance of your display	Detect	
	Display: 1. No	vidia Default Flat Panel	Denury	
	Resolution: 1920 Orientation: Land	0 × 1080 (recommended)	Advanced settings	
	Make text and other item What display settings sho	ns larger or smaller ould I choose?		
		OK Cancel	Apply	

• 按一下「Monitor (顯示器)」標籤,然後按一下「Properties (內容)」按鈕。

ric PnP Monitor and NVIDIA GeForce 9100M G Properties	X
apter Monitor Troubleshoot Color Management @ GeForce 9100M G	
Monitor Type	
Generic PnP Monitor	
Properties	
<b>Tropenes</b>	
Monitor Settings	
Screen refresh rate:	
60 Hertz 💌	
Clearing this check box allows you to select display modes that this monitor cannot display correctly. This may lead to an unusable display and/or damaged hardware.	
Colors:	
True Color (32 bit)	

• 按一下「Driver (驅動程式)」標籤。

	Details	
	Generic PnP Mor	hitor
	Driver Provider:	Microsoft
	Driver Date:	6/21/2006
	Driver Version:	6.1.7600.16385
	Digital Signer:	Microsoft Windows
Driv	er Details	To view details about the driver files.
Upda	ate Driver	To update the driver software for this device.
Roll E	Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.
0	)isable	Disables the selected device.
U	Ininstall	To uninstall the driver (Advanced).

按一下「Update Driver...(更新驅動程式...)」,再按一下「Browse my computer for driver software(瀏覽 電腦上的驅動程式軟體)」按鈕,即可開啟「Update Driver Software-Generic PnP Monitor(更新驅動程式軟



•

٠



選擇「Let me pick from a list of device drivers on my computer (從電腦上的裝置驅動程式清單中挑選)」。



• 按一下「Have Disk (從磁碟)」按鈕。按一下「Browse (瀏覽)」按鈕,進入下一個目錄:

X:\Driver\module name(X 是 CD-ROM 光碟機的磁碟機代號)。



- 選擇「xxx.inf」檔案,再按一下「Open (開啟)」按鈕。按一下「OK」按鈕。
- 選擇顯示器型號後,按一下「Next (下一步)」按鈕。檔案便會自 CD 複製到硬碟。
- 關閉所有開啟的視窗後,取出 CD。
- 重新啟動系統。系統會自動選擇最高的重新整理速率及相應的色彩調配設定檔。

#### Windows 7

- 啟動 Windows®7
- 按一下「Start (開始)」按鈕,再按一下「Control Panel (控制台)」。



點選「Display (**顯示器)」**圖示。

٠

Adjust your computer's settings				View by: Small icons •
Artion Center	C Administrative Tools	AutoPlay	No Backup and Restore	
Color Management	Credential Manager	Date and Time	Default Programs	
Deskton Gadgets	All Device Manager	ma Devices and Printers	Display	
Ease of Access Center	Folder Options	A Fonts	Getting Started	
& HomeGroup	A Indexing Options	C Internet Options	<ul> <li>Keyboard</li> </ul>	
Location and Other Sensors	I Mouse	Stewark and Sharing Center	Notification Area Icons	
NVIDIA Control Panel	WIDIA Physik	Reparental Controls	/ Pen and Touch	
Performance Information and Tools	Personalization	Stone and Modern	Power Options	
Programs and Features	Realtek HD Audio Manager	Kecovery	A Region and Language	
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting	
& User Accounts	S Windows Anytime Upgrade	Windows CardSpace	III Windows Defender	
Windows Firewall	2 Windows Update			

• 按一下「Change display settings (改變顯示設定)」按鈕。



• 按一下「AdvancedSettings (進階設定)」按鈕。

😋 🕞 🗧 🕨 Control Panel 🕨 All Control Panel Ite	ms 🕨 Display 🕨 !	creen Resolution		- + Search Control Panel P
	Change the a	ppearance of your display	Detect	
			Identify	
	Display: Resolution:	1. Nvidia Default Flat Panel • 1920 × 1080 (recommended) •		
	Orientation:	Landscape •		
			Advanced settings	
	Make text and ot	her items larger or smaller		
	What display sett	ings should I choose?		
		СК	Cancel Apply	

按一下「Monitor (顯示器)」標籤,再按一下「Properties (內容)」按鈕。



٠

٠

٠

按一下「Driver (驅動程式)」標籤。



按一下「Update Driver...(更新驅動程式...)」,再按一下「Browse my computer for driver software(瀏覽 電腦上的驅動程式軟體)」按鈕,即可開啟「Update Driver Software-Generic PnP Monitor(更新驅動程式軟 體一通用 PnP 顯示器)」視窗。



選擇「Let me pick from a list of device drivers on my computer (從電腦上的裝置驅動程式清單中挑選)」。



٠

• 按一下「Have Disk (從磁碟)」按鈕。按一下「Browse (瀏覽)」按鈕,進入下一個目錄:





- 選擇「xxx.inf」檔案,再按一下「Open (開啟)」按鈕。按一下「OK」按鈕。
- 選擇顯示器型號後,按一下「下一步」按鈕。檔案便會自 CD 複製到硬碟。
- 關閉所有開啟的視窗後,取出 CD。
- 重新啟動系統。系統會自動選擇最高的重新整理速率及相應的色彩調配設定檔。

### Screen+



歡迎使用 AOC 的「Screen+」軟體。Screen+ 軟體是一套桌面畫面分割工具,可將桌面分割為多個面板,各面板 顯示不同的視窗。 需使用時,只要將視窗拖曳至對應面板即可。多顯示器顯示的支援功能,可讓您的工作更輕鬆。 請按安裝步驟進行安裝。本軟體支援作業系統: Windows 10、Windows 8、Windows 7。



## 故障排除

故障與問題	可能的解決方法
電源 LED 未亮起	請確定電源按鈕在開啟位置,且電源線已妥善插入接地的插座及顯示器。
畫面上無影像	<ul> <li>電源線是否正確連接?</li> <li>請檢查電源線是否妥善插入,以及是否有電源供應。</li> <li>續線是否正確連接?</li> <li>若電源已開啟,請將電腦重新開機,查看初始(登入)畫面。</li> <li>若顯示初始(登入)畫面,請於適用模式下(Windows ME/XP/2000 的安全模式)啟動電腦,接著變更視訊卡頻率。</li> <li>(請參考設定最佳解析度)</li> <li>若未顯示初始(登入)畫面,請洽詢服務中心或經銷商。</li> <li>畫面是否出現「不支援的輸入」?</li> <li>視訊卡訊號超過顯示器可處理的最大解析度及頻率時,會看見此訊息。</li> <li>請調整顯示器可處理的最大解析度及頻率。</li> <li>確保 AOC 顯示器驅動程式已安裝。</li> </ul>
圖片模糊或有虛影問題	調整對比及亮度控制。 按本鍵自動調整。 檢查您是否在使用信號延長線或切換器。建議將顯示器直接插入電腦後方視訊 卡的輸出接孔。
圖片跳動、閃爍或有波紋現象	請將造成電力干擾的電子裝置盡量遠離螢幕。 將再新率設定為顯示器目前解析度下可用的最高頻率。
顯示器卡在 Active Off(主動關 閉)模式	電腦的電源開關應在「開啟」位置。 電腦的視訊卡應插入插槽定位。 檢查顯示器的視訊纜線是否確實連接電腦。 檢查顯示器的視訊纜線及纜線接腳是否正常。 按 CAPS LOCK 鍵看是否出現 CAPS LOCK LED (大寫鍵鎖住燈號),以確 定電腦是否正常。按下 CAPS LOCK 鍵後,LED 應亮起或熄滅。
任一主色(紅、緑或藍色)遺失	檢查顯示器的視訊纜線及纜線接腳是否正常。 檢查顯示器的視訊纜線是否確實連接電腦。
畫面影像未置中或大小錯誤	調整水平或垂直位置。
圖片顏色不正常(白色不白)	調整 RGB 顏色或選擇所要的色溫。
畫面出現水平或垂直干擾	請用 Windows 95/98/2000/ME/XP 關機模式調整時脈及焦距。 按本鍵自動調整。

## 規格

## 一般規格

	型號名稱	AG352UCG6				
	驅動系統	TFT 彩色 LCD				
両桁	可視影像大小	對角線 89.0 cm				
山似	像素間距	0.2382mm (H) x 0.2402mm (V)				
	視訊	HDMI 介面與 DP 介面				
	顯示器色彩	16.7M 色				
	水平掃描範圍	30k-140kHz (HDMI1.4b) 73kHz-180kHz (DP1.2)				
	水平掃描大小(最大)	819.408mm				
	垂直掃描範圍	24-60Hz (HDMI1.4b) 30kHz-120kHz (DP1.2)				
其他	垂直掃描大小(最大)	345.888mm				
	最佳預設解析度	3440x1440@60Hz (DP) 3440x1440@50Hz (HDMI)				
	隨插即用	VESA DDC2B/CI				
	輸入接頭	HDMI, DP, USB3.0x2, 麥克風輸入				
	輸入視訊訊號	TMDS				
	輸出接頭	耳機輸出,麥克風輸出				
	承心	20Vdc,4.5A (ADPC2090)				
	电你	20Vdc <sup>,</sup> 6.0A (ADPC20120)				
		典型(亮度 = 90,對比 = 50)	70W			
	耗電量	最大值(亮度 = 100,對比 =100)	≤100W			
		節能模式	≤ 0.5W			
	Off timer (關機計時器)	0~24 小時				
	接頭類型	HDMI\DP\耳機\麥克風\USB3.0				
	訊號纜線類型	可拆式				
	尺寸與重量:					
實體特性	高度(含底座)	483.5~593.5mm				
	寬度	847mm				
	深度	266.5mm				
	重量(僅顯示器)	11.8Kg				

環境	巡守	操作	0°~ 40°
	/血/支	非操作	-25°~ 55°
	溼度	操作	10%~85%(非冷凝)
		非操作	5%~93%(非冷凝)
	海拔高度	操作	0~ 5000 公尺 (0~ 16404 英尺)
		非操作	0~ 12192 公尺(0~ 40000 英尺)

## 預設顯示模式

標準	解析度	水平頻率 (kHZ)	垂直頻率 (Hz)	信號源
VGA	640x480 60Hz	31.469	59.94	HDMI/DP
SVGA	800x600 60Hz	37.879	60.317	HDMI/DP
XGA	1024x768 60Hz	48.363	60.004	HDMI/DP
UHD	3440x1440 50Hz	73.681	49.99	HDMI/DP
UHD	3440x1440 60Hz	88.819	59.97	DP
UHD	3440x1440 85Hz	127.361	84.96	DP
UHD	3440x1440 100Hz	151	100	DP
UHD	3440x1440 120Hz	180	120	DP



接腳編號	訊號名稱	接腳編號	訊號名稱	接腳編號	訊號名稱
1.	TMDS 數據 2+	9.	TMDS 數據 0-	17.	DDC/CEC 接地
2.	TMDS 數據 2 被覆	10.	TMDS 時頻 +	18.	+5V 電源
3.	TMDS 數據 2-	11.	TMDS 時頻被覆	19.	熱插頭偵測
4.	TMDS 數據 1+	12.	TMDS 時頻-		
5.	TMDS 數據 1 被覆	13.	CEC		
6.	TMDS 數據 1-	14.	保留(N.C. 開啟裝置)		
7.	TMDS 數據 0+	15.	SCL		
8.	TMDS 數據 0 被覆	16.	SDA		



20 針彩色顯示器訊號線

接腳編號	訊號名稱	接腳編號	訊號名稱
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	熱插頭偵測
9	ML_Lane 1 (p)	19	返回 DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

## 隨插即用

#### 隨插即用 DDC2B 功能

本顯示器具備符合 VESA DDC 標準的 VESA DDC2B 性能。即本顯示器可告知主機系統其身分,並依據所用的 DDC 程度,提供有關顯示性能的其他資訊。

DDC2B 是以 I2C 通訊協定為基礎的雙向數據通道。主機可透過 DDC2B 通道要求 EDID 資訊。

法規

## FCC 聲明

#### FCC B 類無線電射頻干擾聲明警告:(僅適用於 FCC 認證機型)

附註:本設備已經通過測試,並符合 FCC 規定第 15 部分 B 類數位裝置的限制。這些限制標準用於確認電氣設備, 不會對住屋內安裝的設備產生有害的干擾。本設備會產生、使用而且能夠釋放無線電頻率能量,若未按照使用手冊中 的指示安裝和使用,可能對無線電通訊造成不良干擾。但是無法保證干擾不會於特定安裝方式中產生。如果本設備對 無線電或電視收訊造成有害干擾(可經由開關設備得知),建議使用者嘗試下列方法以改善干擾情況:

重新調整接收天線的方向或位置。 增加本設備和接收器之間的距離。 將本設備連接至與接收器不同的電源插座上。 向經銷商或經驗豐富的無線電/電視技術人員尋求協助。

#### 聲明:

未經負責製造商明確允許,而對本裝置進行的任何變更或修改,將可能導致使用者無權操作本設備。

若有屏蔽式介面纜線與 AC 電源線,請務必使用以遵守發射限制。

製造商對於未授權修改本設備所造成之無線電或電視干擾概不負責。使用者有責任修正該類干擾。使用者有責任修正該類干擾。

### WEEE 聲明

使用者於歐盟境內私人住所處理棄置設備



產品或其包裝上的此符號,代表本產品不得與其他家用廢棄物一同丟棄。相反的,您有責任將此廢棄設備攜至指定的 收集地點進行廢電子或廢電器設備回收。將廢棄設備送至個別資源回收點,將有助於維護自然資源並確保以保護人類 健康及環境的方式進行回收。有關廢棄設備資源回收的詳細資訊,請洽詢您當地的主管機關、住戶廢棄物處理服務, 或您購買該產品的商店。

### 印度電子廢棄物聲明



產品或其包裝上的此符號,代表本產品不得與其他家用廢棄物一同丟棄。反之,將廢棄設備攜至指定廢電器與電子設備回收站點,是您應負的責任。將廢棄設備送至個別資源回收點,將有助於維護自然資源並確保以保護人類健康及環境的方式進行回收。如需電子廢棄物的詳細資訊,請造訪<u>http://www.aocindia.com/ewaste.php</u>。欲知印度回收廢 棄設備的地點,請見下列聯絡資訊。

諮詢專線: 080-6788-6788 / 080-3323-1313 (周一至周六上午 10 點至下午 6 點。)

電子廢棄物集中收集中心

地址: TPV Technology India Private Limited,

59, Maheswari Nagar, 1st Main Road, Mahadevapura Post, Whitefield Road, Bangalore, Karnataka,PIN: 560048,電話: 080-3023-1000

電子郵件: <u>serviceindia@aoc.com</u>

本產品符合全球所有現行 RoHS 類型法規,包含但不限於歐盟、韓國、日本、美國(如加州)、烏克蘭、塞爾維亞、 土耳其、越南及印度。

我們會持續監控、執行並開發製程,以符合未來提出之 RoHS 類型法規,包含但不限於巴西、阿根廷、加拿大。

#### 減少使用有害物質(印度)

本產品符合「2016 年電子廢棄物(管理)規則」第 V 章第 16 條第 (1) 款。 新的電力電子設備及其組件、消耗品、零件或備品之鉛、汞、鎘、六價鉻、多溴聯苯、多溴二苯醚含量在鉛、汞、六價鉻、多溴聯苯、多溴二苯醚同質 材料中不超過濃度上限值 0.1%,在鎘同質材料中不超過 0.01%,規則附表 2 中的例外情形除外。

## 服務

## 歐洲地區保固聲明

#### 三年有限保固\*

AOC International (Europe) B.V. 擔保 AOC 在歐洲銷售的 AOC LCD 顯示器,在原料及工藝上沒有任何瑕疵,且 自消費者購買原始日起保固三 (3) 年。在此期間,AOC International (Europe) B.V. 將得以自行決定,以新品或重新 裝配之零件維修瑕疵產品,但以下情形\*將免費以新品或重新裝配之產品進行更換。無法出示購貨憑證時,保固期自 產品標示的製造日期後 3 個月起算。

若產品發生故障,請洽詢當地經銷商,或參考 <u>www.aoc-europe.com</u> 網站上符合您國家保固說明的服務與支援章節。保固往返運費已由 AOC 預付。請遵守以下條件,並將購買日期證明連同產品,送至 AOC 認證或授權服務中心:

- 務請將 LCD 顯示器包裝於適當的紙箱內(最好是顯示器的原包裝紙箱,以便在運送過程中提供充分的保護)。
- 將 RMA 號碼貼在地址標籤上
- 將 RMA 號碼貼在包裝箱上

AOC International (Europe) B.V. 將支付在本保固聲明內,指定其一國家境內的回程貨運費用。AOC International (Europe) B.V. 對於產品跨國運輸的相關費用,概不負責,包含歐盟境內之國界。貨運業者取件時,LCD 顯示器如未 準備妥當以致無法取件,將收取取件費用。

\* 下列情況造成的任何遺失或損壞,不涵蓋於本有限保固範圍內:

- 因未正確包裝而在運輸期間造成的損壞
- 未遵守 AOC 使用手册所造成的錯誤安裝或保養
- 誤用
- 任何非一般商用或工業應用之起因
- 由非授權來源調整
- 由任何非 AOC 認證或授權的服務中心的人員維修、修改或安裝的選購項目或零件
- 潮溼、漏水及聚積灰塵的不當環境
- 因施力不當、地震及恐怖攻擊造成的損壞
- 暖氣或空調過強或不足,或電力故障、突波或其他異常

本有限保固不包含您或協力廠商修改或改裝的任何產品韌體或硬體;而您必須承擔該類修改或改裝衍生之個人責任。

AOC LCD 顯示器均按 ISO 9241-307 Class 1 像素規範標準生產製造。

若保固過期,仍可使用所有服務選項,但需支付零件、維修、運費(若有)及稅金等服務費用。 AOC 認證或授權 服務中心會在您同意執行服務前,提供服務估價單供您參考。 本產品所有明示及暗示保固(包括特定目的之適銷性與適用性保固),其適用零件及人工之保固期限,皆自消費者購 買之原始日期起三(3)年。超過此期限後將不適用任何保固(不論明示或暗示)。如下文所述,AOC INTERNATIONAL (EUROPE) B.V. 的責任與在此提供予您之補償,具有唯一性與獨佔性。在產品有瑕疵或受損情況下的索賠,AOC INTERNATIONAL (EUROPE) B.V. 基於合約、侵權、保固、嚴格責任或其他理論下的任何責任,皆不得超出個別產 品單位之價格。在任何情況下 AOC INTERNATIONAL (EUROPE) B.V. 對於任何利益損失、使用損失或設施或設備 損失,或其他間接、意外或後續損失,一概不予負責。某些國家不允許連帶或意外損失的排除或限制或責任條款,因 此上述限制條款可能不適用於您。儘管本有限保固賦予您特定法律權利,但您可能擁有的其他權利在各國間會有差 異。只有在歐盟會員國中購買的產品才適用本有限保固。

本文件中之資訊如有變更,恕不另行通知。如需更多詳細資訊,請上網站:<u>http://www.aoc-europe.com</u>

## 中東與非洲 (MEA)

### 及

獨立國協 (CIS) 適用保固聲明

#### 一至三年有限保固\*

針對於中東及非洲 (MEA) 以及獨立國協 (CIS) 境內銷售的 AOC LCD 顯示器, AOC International (Europe) B.V. 保證本產品原料及工藝上無任何瑕疵,視銷售國家,保固期限為製造日期起一 (1) 至三 (3) 年。在此期間, AOC International (歐洲) B.V. 於 AOC 授權服務中心或適用此選項的經銷商提供送修(送回服務中心)保固支援,以新品或重新裝配零件維修故障產品,或除以下說明之情形\* 外,免費以新品或重新裝配之產品進行更換。依據標準政策,保固期自產品 ID 序號上的製造日期開始計算,但視銷售國家,總保固期自 MFD (製造日期)起為十五 (15) 個月 至三十九 (39) 個月。超出產品 ID 序號保固期限的保固服務將視為例外案例,此類例外案例務必提供原發票/購買 證明收據。

若產品發生故障,請洽詢 AOC 授權經銷商,或參考 AOC 網站上符合您國家保固說明的服務與支援章節。

- 埃及:<u>http://aocmonitorap.com/egypt\_eng</u>
- CIS 中亞: <u>http://aocmonitorap.com/ciscentral</u>
- 中東:<u>http://aocmonitorap.com/middleeast</u>
- 南非:<u>http://aocmonitorap.com/southafrica</u>
- 沙烏地阿拉伯:<u>http://aocmonitorap.com/saudiarabia</u>

請遵守以下條件,並將購買日期證明連同產品送至 AOC 授權服務中心或經銷商:

- 務請將 LCD 顯示器包裝於適當的紙箱內(最好是顯示器的原包裝紙箱,以便在運送過程中提供充分的保護)。
- 將 RMA 號碼貼在地址標籤上
- 將 RMA 號碼貼在包裝箱上
- \* 下列情況造成的任何遺失或損壞,不涵蓋於本有限保固範圍內:
  - 因未正確包裝而在運輸期間造成的損壞
  - 未遵守 AOC 使用手册所造成的錯誤安裝或保養
  - 誤用
  - 疏忽
  - 任何非一般商用或工業應用之起因
  - 由非授權來源調整
  - 由任何非 AOC 認證或授權的服務中心的人員維修、修改或安裝的選購項目或零件
  - 潮溼、漏水及聚積灰塵的不當環境
  - 因施力不當、地震及恐怖攻擊造成的損壞
  - 暖氣或空調過強或不足,或電力故障、突波或其他異常

本有限保固不包含您或協力廠商修改或改裝的任何產品韌體或硬體;而您必須承擔該類修改或改裝衍生之個人責任。

AOC LCD 顯示器均按 ISO 9241-307 Class 1 像素規範標準生產製造。

若保固過期,仍可使用所有服務選項,但需支付零件、維修、運費(若有)及稅金等服務費用。 AOC 認證、授權 服務中心或經銷商會在您同意執行服務前,提供服務估價單供您參考。

本產品所有明示及暗示保固(包括特定目的之適銷性與適用性保固),其適用零件及人工之保固期限,皆自消費者購買之原始日期起一(1)至三(3)年。超過此期限後將不適用任何保固(不論明示或暗示)。如下文所述,AOC INTERNATIONAL (EUROPE) B.V. 的責任與在此提供予您之補償,具有唯一性與獨佔性。在產品有瑕疵或受損情況下的索賠,AOC INTERNATIONAL (EUROPE) B.V. 基於合約、侵權、保固、嚴格責任或其他理論下的任何責任,皆不得超出個別產品單位之價格。在任何情況下 AOC INTERNATIONAL (EUROPE) B.V. 對於任何利益損失、使用損失或設施或設備損失,或其他間接、意外或後續損失,一概不予負責。某些國家不允許連帶或意外損失的排除或限制或責任條款,因此上述限制條款可能不適用於您。儘管本有限保固賦予您特定法律權利,但您可能擁有的其他權利在各國間會有差異。只有在歐盟會員國中購買的產品才適用本有限保固。

本文件中之資訊如有變更,恕不另行通知。如需更多詳細資訊,請上網站:<u>http://www.aocmonitorap.com</u>



AOC International (Europe) B.V. Prins Bernhardplein 200 / 6<sup>th</sup> floor, Amsterdam, The Netherlands 電話:+31 (0)20 504 6962 • 傳真: +31 (0)20 5046933

## AOC 像素規範

## ISO 9241-307 CLASS 1

2013 年 7 月 25 日

AOC 竭盡所能將最高品質產品送至客戶手中。本公司使用業界最先進製程,並執行嚴格的品質控制。但是,平面顯 示器使用的 TFT 顯示器面板,有時仍無法避免像素或子像素瑕疵。沒有一個製造商能夠保證所有面板都不會出現像 素瑕疵問題,但 AOC 能夠擔保在保固期限內,若任何顯示器上的瑕疵量超過接受範圍,可維修或更換。此像素規 範說明了不同類型的像素瑕疵,並針對各類型定義可接受的瑕疵程度。在保固期限內,若要具備維修或更換資格, TFT 顯示器面板上的像素瑕疵量須超過可接受程度。

#### 像素及子像素定義

像素或圖片元素是由紅、綠、藍主色的三個子像素組成。像素的所有子像素皆亮起時,三色子像素便會顯示為一個白色像素。所有子像素皆暗下時,三色子像素便會顯示為一個黑色像素。



#### 像素瑕疵類型

- 亮點瑕疵:顯示器顯示暗色圖案,子像素或像素恆亮或「開啟」
- 黑點瑕疵:顯示器顯示淺色圖案,子像素或像素恆暗或「關閉」。

ISO 9241-307	瑕疵類型 1	瑕疵類型 2	瑕疵類型 3	瑕疵類型 4
像素瑕疵類別	亮像素	黑像素	亮子像素	黑子像素
			2 -	+ 1
第1類	1	1	1 -	+ 3
			0 -	+ 5

AOC International (Europe) B.V.

## 北美及南美(不含巴西)適用保固聲明

保固聲明

#### 適用 AOC 彩色螢幕

#### 包括指定於北美境內銷售之產品

Envision Peripherals, Inc. 擔保本產品在原料及工藝上無任何瑕疵,且零件與人工自消費者購買原始日起保固三(3) 年,而 CRT 映像管或 LCD 面板則保固一(1)年。在此期間,EPI(EPI為 Envision Peripherals, Inc. 之縮寫)將 自主決定是否以新品或重新裝配之零件維修有瑕疵之產品,或除以下說明之情形\*外,免費以新品或重新裝配之產品 進行更換。被更換之零件或產品即屬於 EPI 之財產。

若在美國要獲得本有限保固之服務,請致電 EPI 詢問最接近您所在區域之授權服務中心。請預先支付運費及標示日期的購買證明,再將產品送至 EPI 授權服務中心。若您無法親自交付產品:

請將產品裝回原本裝運的容器中(或相同的容器)

- ▪將 RMA 號碼貼在地址標籤上
- ▪將 RMA 號碼貼在包裝箱上
- •為產品保險(或承擔運送期間遺失/受損的風險)
- 支付所有運送費用

EPI 對於未正確包裝送回產品之損傷,概不負責。 EPI 將支付在本保固聲明內指定國家之一境內的回程貨運費用。EPI 對於任何與跨國產品運輸相關之費用概不負 責,包括本保固聲明內國家的國際邊界。

在美國及加拿大,請聯絡您的經銷商或 EPI 客戶服務部門,可撥打免付費電話 (888) 662-9888 洽詢 RMA 部門, 或者可至 www.aoc.com/na-warranty 網站線上要求 RMA 號碼。

- \* 下列情況造成的任何遺失或損壞,不涵蓋於本有限保固範圍內:
- 運輸或不當安裝或保養
- 誤用
- 疏忽
- 任何非一般商用或工業應用之起因
- 由非授權來源調整
- •由任何非 EPI 授權服務中心的人員維修、修改或安裝的選購項目或零件
- 不適當的環境
- •暖氣或空調過強或不足,或電力故障、突波或其他異常

本三年有限保固不包含您或協力廠商修改或改裝的任何產品韌體或硬體;而您必須承擔該類修改或改裝衍生之個人責任。

本產品所有明示及暗示保固(包括特定目的之適銷性與適用性保固),其適用零件及人工之保固期限,自消費者購買 之原始日期起三 (3) 年;其適用 CRT 映像管或 LCD 面板之保固期限,自消費者購買之原始日期起一 (1) 年。超 過此期限後將不適用任何保固(不論明示或暗示)。在美國,部分州政府不允許限制暗示保固持續之時間,因此以上 限制可能不適用於您。

EPI 之責任與提供您在此之補償,皆具有唯一性與獨佔性。在產品有瑕疵或受損情況下的索賠,EPI 基於合約、侵權、保固、嚴格責任或其他理論下的任何責任,皆不得超出個別產品單位之價格。在任何情況下 ENVISION PERIPHERALS, INC.對於任何利益損失、使用損失或設施或設備損失,或其他非直接、意外或間接損害,一概不予負責。在美國,部分州政府不允許意外或間接損害之排除條款或限制。因此以上限制可能不適用於您。儘管本有限保 固賦予您特定的法律權利,但您可能擁有的其他權利在各國間會有差異。

在美國,本有限保固僅適用於美國本土、阿拉斯加與夏威夷購買之產品。 在美國以外地區,本有限保固僅適用於加拿大購買的產品。

本文件中之資訊如有變更恕不另行通知。 有關詳細資訊,請造訪:

美國:http://us.aoc.com/support/warranty 阿根廷:http://ar.aoc.com/support/warranty 波利維亞: http://bo.aoc.com/support/warranty 智利: http://cl.aoc.com/support/warranty 哥倫比亞: http://co.aoc.com/warranty 哥斯大黎加: http://cr.aoc.com/support/warranty 多明尼加: http://do.aoc.com/support/warranty 厄瓜多:http://ec.aoc.com/support/warranty 薩爾瓦多: http://sv.aoc.com/support/warranty 瓜地馬拉:http://gt.aoc.com/support/warranty 宏都拉斯: http://hn.aoc.com/support/warranty 尼加拉瓜:http://ni.aoc.com/support/warranty 巴拿馬:http://pa.aoc.com/support/warranty 巴拉圭:http://py.aoc.com/support/warranty 秘魯:http://pe.aoc.com/support/warranty 烏拉圭: http://pe.aoc.com/warranty 委内瑞拉: http://ve.aoc.com/support/warranty 若屬未列出之國家: http://latin.aoc.com/warranty

## EASE 計畫



僅限在美國本土銷售的 AOC 顯示器。

任何 AOC 顯示器均已納入 EASE 計畫。顯示器在前三個月出現任何異常時,AOC 將在您證 實符合本計畫的 72 小時之內,提供替換顯示器。顯示器如符合 EASE 計畫的要求,AOC 將 負擔來回的運費。

 步驟 1:請電治 TECH 部門,號碼為 888.662.9888

 步驟 2:以郵件或傳真填寫並寄回 EASE 註冊單。

 步驟 3:驗證符合本計畫後,我們會寄發 Return Authorization Number(退貨授權碼)。

 步驟 4:會先寄送一台顯示器給您。

 步驟 5:我們會寄發 UPS 取件標籤給您取回有瑕疵的產品。

 步驟 6:請參考下表,有關 EASE 計畫資格的說明。

保固	免收費	客戶	
期限	範圍	收費	
	- 新的 AOC 顯示器		
購買後前三個月內:EASE 負責	- 經 UPS 寄發取件標籤及收取退	- 無*	
	貨運費		
	- 包括 CRT 映像管及 LCD 面板	- UPS 退回至 AOC 的運費	
4 個月主 「 牛肉	在內的任何零件及維修費		
1 2 年間・ 一進右阳 伊田 走田	- CRT 映像管及 LCD 面板除外的	- UPS 退回至 AOC 的運費	
Ⅰ-3 十间・悰华月胚休回熥埕	任何零件及維修費		

\*如需 AOC 的服務中心收到退回的瑕疵產品前,先寄送 AOC 顯示器給您,請提供您的信用卡號碼。否則,AOC 將在 AOC 服務中心收到退回的瑕疵產品後,才寄送新顯示器給您。



	設備名稱	: 液晶显示器,	型號(型式):	350LM00005,/	AG352UCG6	
	限用物質及其化學符號					
単元	全几 亚口	汞	<b>今</b> 戸 <b></b> 朝	六價鉻	多溴聯苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	$(Cr^{+6})$	(PBB)	(PBDE)
塑料外框	0	0	0	0	0	0
後殼	0	0	0	0	0	0
LCD panel	_	0	0	0	0	0
電路板組件	_	0	0	0	0	0
底座	0	0	0	0	0	0
電源線	_	0	0	0	0	0
其他線材	_	0	0	0	0	0
備考1. "O"係指該項限用物質之百分比含量未超出百分比含量基準值。 備考2. "一"係指該項限用物質為排除項目。						