

LCD Monitor User Manual

C4008VU8 LED backlight

Safety	4
National Conventions	4
Power	5
Installation	6
Cleaning	7
Other	8
Setup	9
Contents in Box	9
Setup Base	10
Wall Mounting	11
Adjusting Viewing Angle	12
Connecting the Monitor	13
Adjusting	14
Setting Optimal Resolution	14
Windows 10	14
Windows 8	16
Windows 7	18
Hotkeys	20
Using "MHL(Mobile High-Definition Link)"	22
OSD Setting	23
Luminance	24
Image Setup	25
Color Setup	26
Picture Boost	27
OSD Setup	28
PIP Setting	29
Extra	
Exit	31
LED Indicator	
Driver	
Monitor Driver	
Windows 10	
Windows 8	
Windows 7	41
i-Menu	45
e-Saver	46
Screen+	47
Troubleshoot	48
Specification	50
General Specification	50
Preset Display Modes	51
Pin Assignments	52
Plug and Play	54
Regulation	55
FCC Notice	55
WEEE Declaration	56

W	/EEE Declaration for India	56
EF	PA Energy Star	57
EF	PEAT Declaration	57
Service	e	58
W	/arranty Statement for Europe	58
W	/arranty Statement for Middle East and Africa (MEA)	60
AC	OC International (Europe) B.V.	62
	Warranty Statement for North & South America (excluding Brazil)	63
EA	ASE PROGRAME	65

Safety

National Conventions

The following subsections describe notational conventions used in this document.

Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

A The wall socket shall be installed near the equipment and shall be easily accessible.

Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.


Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Lo not place the front of the product on the floor.


If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or with the stand:

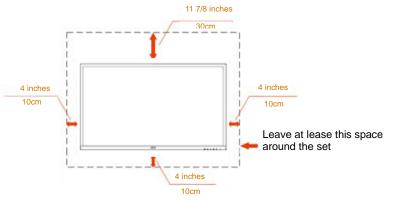

Installed on the wall

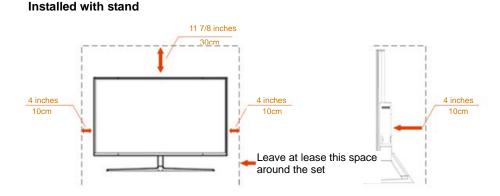

Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.



Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

All Make sure that the ventilating openings are not blocked by a table or curtain.


Do not engage the LCD monitor in severe vibration or high impact conditions during operation.

Do not knock or drop the monitor during operation or transportation.

For display with glossy bezel the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

Setup

Contents in Box

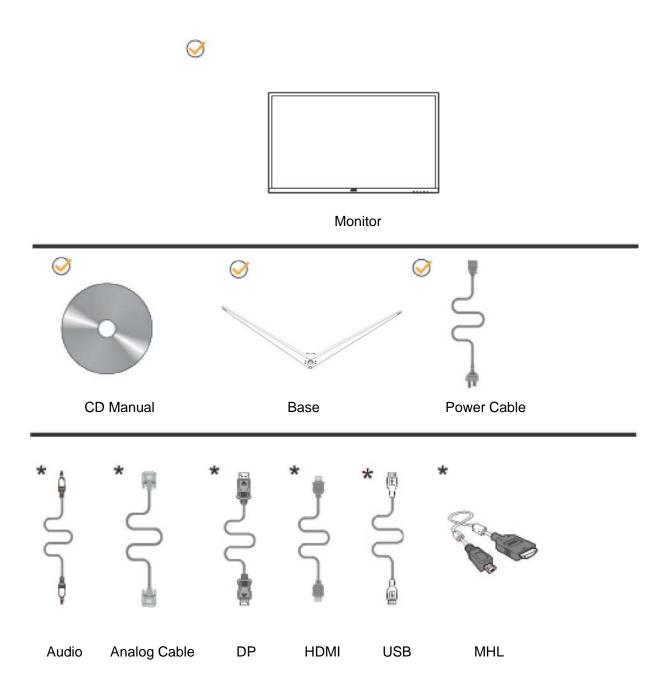


Not all signal cables (Audio, Analog, DP, HDMI, MHL and USB cables) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.

Setup Base


Please setup or remove the base following the steps as below. Please place the monitor on a soft and flat surface to prevent the scratch.

Setup:



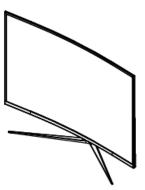


Remove:

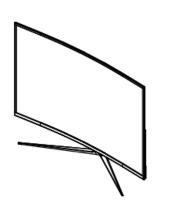



Wall Mounting

 Preparing to install an optional wall mount arm.



This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

- 1. Remove the base.
- 2. Follow the manufacturer's instructions to assemble the wall mounting arm.
- 3. Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.
- 4. Insert the 4 screws into the holes and tighten.
- 5. Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.


Noted: VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

Adjusting Viewing Angle

For optimal viewing, it is recommended to look at the full face of the monitor, and then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.


You are able to adjust the monitor's angle from -6.5° to 15 °.

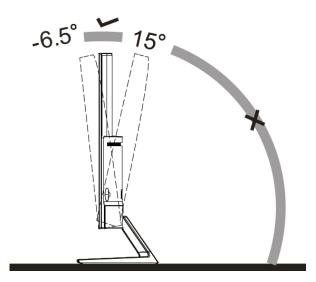

Do not adjust the viewing angle over 15 degrees in order to avoid damage.

Connecting the Monitor

Cable Connections In Back of Monitor and Computer:

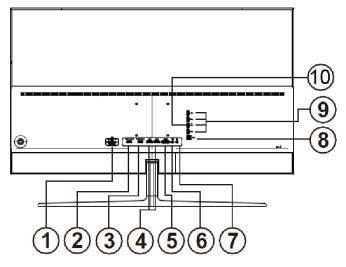

- 1 Power
- 2 HDMI1.4b/MHL
- 3 HDMI2.0/MHL
- 4 DisplayPortx2
- 5 D-SUB
- 6 AUDIO IN
- 7 Earphone out
- 8 USB-PC(USB3.0 upstream)
- 9 USB 3.0x4
- 10 USB3.0+ charger function

To protect equipment, always turn off the PC and LCD monitor before connecting.

- 1 Connect the power cable to the AC port on the back of the monitor.
- 2 Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.
- 3 Optional (Requires a video card with HDMI port) Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.
- 4 Optional (Requires a video card with DP port) Connect one end of the DP cable to the back of the monitor and connect the other end to the computer's DP port.
- 5 Turn on your monitor and computer.
- 6 Video content supporting resolution (Maximum):
 - (1) VGA/MHL: 1920 x 1080/60Hz
 - (2) HDMI1.4: 3840 x 2160/30Hz; HDMI2.0: 3840 x 2160/60Hz
 - (3) DP1.1: 3840 x 2160/30Hz; DP1.2: 3840 x 2160/60Hz

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.


Adjusting

Setting Optimal Resolution

Windows 10

For Windows 10:

- Right click **START.**
- Click "CONTROL PANEL".

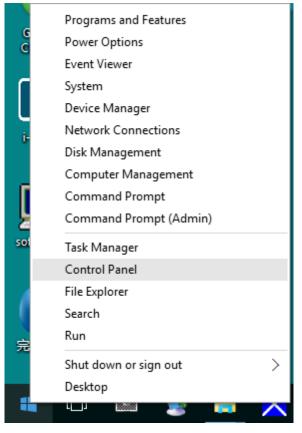

Click "DISPLAY".

All Control Fand Iberrs					- 0 ×
T 🛄 > CentrolPanel >	All Control Panel Items				v 👌 🛛 Search Control Panel 🖉 🔎
File Edit View Tools Help					
Adjust your computer's setting	e.				These Bays - Lange Loons +
Administrative Tools	Lo AutoPlay	Backup and Restore (Windows 7)	RitLacker Drive Encryption	Color Management	
Credential Manager	Dete and Time	Default Programs	Device Manager	Contraction Devices and Printers	
Display	Ease of Access Center	EIO EIo 被摸屏配置	File Explorer Options	File History	
/ Flash Player (32-bit)	A Fonts	• HomeGroup	A Indexing Options	Res Internet Options	
 Keyboard 	Arguage	J Mouse	Network and Sharing Center	Versonalization	
Phone and Modern	Power Options	Programs and Features	Realtek HD Audio Manager	a Recovery	
😥 Region	RemoteApp and Desktop Connections	Y Security and Maintenance	Scund	General Speech Recognition	
Storage Spaces	Sync Center	System	Taskbar and Navigation	Troubleshooting	
Se User Accounts	Windows Defender	Windows Firewall	Work Folders	(32-45/4)	

• Click on the "Change display settings" button.

💷 Display		-	×
← → ∽ ↑ 🚍 > Control Pane	el > All Control Panel Items > Display 🗸 🖑	Search Control Panel	ρ
File Edit View Tools Help			
Control Panel Home	Change size of items		?
Adjust resolution Calibrate color	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays.		
<u>Change display settings</u> Adjust ClearType text	Change only the text size		
	Instead of changing the size of everything on the desktop, change only the text size for a specific item. Title bars 9 Bold		
	Apply		
See also			
Personalization			
Devices and Printers			

• Set the resolution **SLIDE-BAR** to Optimal preset resolution.

Screen Resolution					×
← → ~ ↑ 🛄 > Control Pane File Edit View Tools Help	I → All Control Pa	nel Items > Display > Screen Resolution	ٽ ~	Search Control Panel	Q
	Change the	appearance of your display	Detect Identify		
	Display: Resolution: Orientation:	1. B24 ~ 1920 × 1080 (Recommended) ~ Landscape ~			
		ther items larger or smaller ttings should I choose?	Advanced settings		
			OK Cancel Apply		

Windows 8


For Windows 8:

• Right click and click All apps at the bottom-right of the screen.




Apps				
D P	E Brazer		Rostine .	Computer
Caindar	Statute -	Catcheor	XPS Variet	Cartol front
Canara	torn 💽	Overator Map		Default Programs
Cestow .	10 tan	Math read fined	Sagutar	The Laplace
and Impute	Tana and a second se	Canal Reference	Tarrator 1	2 Herp and Support
Cares -		and they	Co-Spien Regional	E **
internet byzone	Carlos Carlos	Reviver Dentrap Correction	Mindow Speech Recognition	👿 tait Mesope
🖂 ^{Mai}		Sraping Test		Windows Defender
Real Mark		Sound Recorder	(Polies	Windows Easy Sandre
Conceptor Conceptor		Tops Accostr	CPUNes Help	Vinitum Lap Transfer Experts
CO Musc		🔤 taxity Notes	Renzons Performance	without Powerchest
E hrus		Windows Fee and Scan	Misson Peterseret	
The second second		Windows Journal		
Parts -		Wedness Mada	Command Tronge	

- Set the "View by" to "Category".
- Click "Appearance and Personalization".

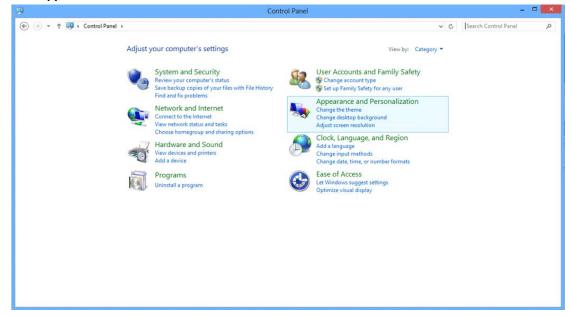

• Click "DISPLAY".

٠

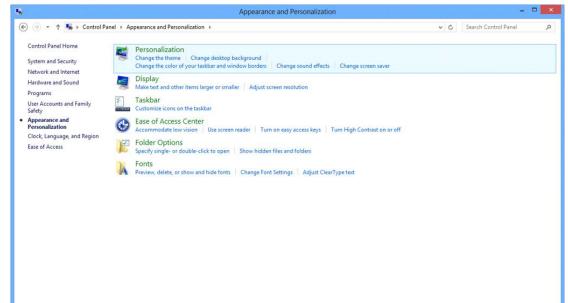

Set the resolution SLIDE-BAR to Optimal preset resolution

Screen Resolution	1	-	
Appearance and Personalization + Display + Screen Resolution Change the appearance of your display	Detect Identify	♥ C Search Control Panel	Q
Display: 1. PLX2780H V Resolution: 1920 × 1080 (Recommended) V Orientation: High 1920 × 1080 (Recommended) Make text and other What display setting	Advanced settings		
1024 × 768 Low	OK Cancel Apply		

Windows 7

For Windows 7:

- Click START.
- Click "CONTROL PANEL".




• Click "Appearance".

Device Device	Manager Options	 Date and Time ap Devices and Printers Fonts 	Default Programs	
Ease of Access Center E Folder HomeGroup Ja Indexin Location and Other Sensors If Noise	Options	Fores		
HomeGroup Ja Indexis Location and Other Sensors J Nouse			Getting Stanted	
Location and Other Sensors 3 Mouse	ng Options			
		Internet Options	- Keyboard	
		Network and Sharing Center	Districution Area loom	
WIEGA Control Panel 🗰 WIEGA	a Physix	Panintal Controls	/ Pen and Touch	
Performance Information and Tools 🛛 🖉 Person	alization	B Phone and Modern	Power Options	
Programs and Features 🖉 Realter	+HD Audim Manager	K Recovery	👂 Region and Language	
RemoteApp and Desitop Connections 🛛 🕑 Sound		0 Speech Recognition	Syne Center	
System Tablet	PC Settings	Taskbar and Start Menu	A Troubleshooting	
User Accounts 🦉 Windo	ws Anytime Upgrade	Windows CardSpace	Ne Windows Defender	
Windows Forwall 🖉 Windo	ws. Update			

Click "DISPLAY".


•

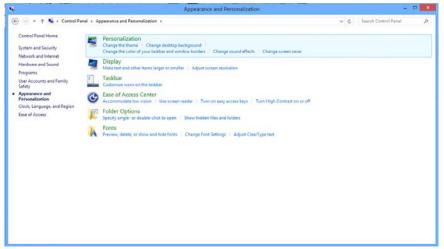


• Click on the "Change display settings" button.



• Set the resolution **SLIDE-BAR** to Optimal preset resolution

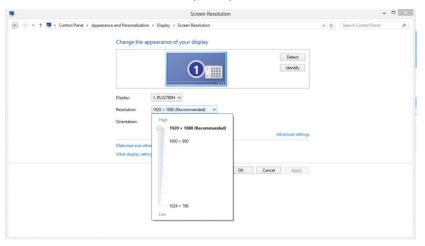

Hotkeys

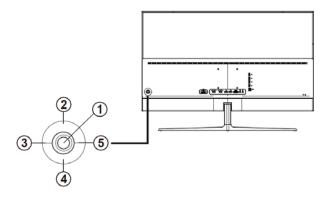

1	Power/MENU/Enter
2	Source/Auto/Exit/Up
3	Volume/Right
4	ECO Mode/DCR/Down
5	Clear Vision/Left

Power/MENU/Enter

when monitor is off mode, press the Power button to turn on the monitor. when monitor is on mode, press to display the OSD or confirm the selection. when there is no OSD, press the Power button continuously about 2 seconds to turn off the monitor.

Source hotkey/Auto/Exit/Up

When there is no OSD in D-SUB input, press Up contimuously about 2 seconds to do auto configure. When there is no OSD,press Up will be source hot key function. Press Source button continuously to select the input source showed in the message bar, press Menu/Enter button to change to the source selected. When there is OSD, press UP button to exit OSD.

Volume/Right


When there is no OSD, press Right to adjust volume.

ECO Mode/DCR/Down

When there is no OSD, press Down to adjust ECO mode/DCR.

Clear Vision

- 1. When there is no OSD, Press the "Left" button to activate Clear Vision.
- 2. Use the "Left" or "Right" buttons to select between weak, medium, strong, or off settings. Default setting is always "off".

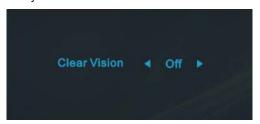

3. Press and hold "Left" button for 5 seconds to activate the Clear Vision Demo, and a message of "Clear Vision Demo: on" will be display on the screen for a duration of 5 seconds. Press Menu or Exit button, the message will disappear. Press and hold "Left" button for 5 seconds again, Clear Vision Demo will be off.



Clear Vision function provides the best image viewing experience by converting low resolution and blurry images into clear and vivid images.

Using "MHL(Mobile High-Definition Link)"

 
1."MHL" (Mobile High-Definition Link)

This feature allows you to enjoy videos and photos (imported from a connected mobile device that supports MHL) on the screenof the product.

- To use the MHL function, you need an MHL-certified mobile device. You can check if your mobile device is MHL certified on the device manufacturer's website. To find a list of MHL-certified devices, visit the official MHL website (http://www.mhlconsortium.org).
- To use the MHL function, the latest version of software must be installed on the mobile device.
- On some mobile devices, the MHL function may not be available depending on the device's performance or functionality.
- Since the display size of the product is larger than those of mobile devices, the picture quality may degrade.
- This product is officially MHL-certified. If you encounter any problem when using the MHL function, please contact the manufacturer of the mobile device.
- The picture quality may degrade when content (imported from the mobile device) with a low Resolution is played on the product.

Using "MHL"

1. Connect the micro USB port on the mobile device to the [HDMI / MHL] port on the product using the MHL cable.



- When the MHL cable is used, [HDMI / MHL] is the only port on this monitor that supports the MHL function.
- Mobile device must be purchased separately.
- 2. Connect the AC power cord to the product and a power outlet.
- 3. Press the source button and switch to HDMI /MHL to activate MHL mode.
- 4. After about 3 seconds, the MHL screen will be displayed if MHL mode is active.

Remark: The indicated time "3 sec later" may vary depending on the mobile device.

When the mobile device is not connected or does not support MHL

• If MHL mode is not activated even though the mobile device supports MHL, check if mobile device MHL port is MHL standard port otherwise an additional MHL-enabled adapter is required.

OSD Setting

Basic and simple instruction on the control keys.

< Constructions	Image Setup	Color Setup	Picture Be		Sp OSD Se		PIP PIP Setting	× Extra	Exit
Contrast									
Brightness			DCR		OFF				
Eco mode	 Standard 	•	OverDrive	•	Medium	×			

- 1. Press the **MENU-button** to activate the OSD window.
- Press Left or Right to navigate through the functions. Once the desired function is highlighted, press the MENU-button to activate it. If there is a sub-menu, press Left or Right to navigate through the sub-menu functions.
- 3. Press Left or Right to change the settings of the selected function. Press AUTO to exit. If you want to adjust any other function, repeat steps 2-3.
- 4. OSD Lock Function: To lock and un-lock the OSD, press and hold the Down button continuously 10seconds.

Notes:

- 1. If the product has only one signal input, the item of "Input Select" is disabled.
- 2. If the product screen size is 4:3 or input signal resolution is native resolution, the item of "Image Ratio" is disabled.
- 3. One of Clear vision, DCR, Color Boost, and Picture Boost functions is activated; the other three functions are turned off accordingly.

Luminance

	Image Setup	Color Setup	Picture Bo	ost	OSD Se	PIP PIP Setting	× Extra	Exit
Contrast								
Brightness			DCR		OFF			
Eco mode			OverDrive					

- 1 Press **MENU** (Menu) to display menu.
- 2 Press Left or Right to select (Luminance), and press MENU to enter.
- 3 Press Left or Right to select submenu.
- 4 Press Left or Right to adjust.
- 5 Press AUTO to exit.

	Contrast	0-100		Contrast from Digital-register.		
	Brightness	0-100		Backlight Adjustment		
	Eco mode	Standard		Standard Mode		
		Text	Т	Text Mode		
		Internet	e	Internet Mode		
		Game		Game Mode		
		Movie	ø	Movie Mode		
- O -		Sports	R	Sports Mode		
		Uniformity		Uniformity Mode		
	Gamma	Gamma1		Adjust to Gamma 1		
		Gamma2		Adjust to Gamma 2		
		Gamma3		Adjust to Gamma 3		
		Off		Disable dynamic contrast ratio		
	DCR	On		Enable dynamic contrast ratio		
		Weak				
	Over Drive	Medium		Adjust the response time.		
	Over Drive	Strong				
		Off				

Image Setup

(The second sec	Color Setup	Picture Boost	OSD Setup	PIP PIP Setting	× Extra	Exit	Luminance
Clock	50		Position	50			
Phase	50) V. I	Position	50			
Sharpness	50						

1 Press **MENU** (Menu) to display menu.

2 Press Left or Right to select (Image S

(Image Setup), and press **MENU** to enter.

- 3 Press Left or Right to select submenu.
- 4 Press Left or Right to adjust.
- 5 Press AUTO to exit.

	Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.			
	Phase 0-100		Adjust Picture Phase to reduce Horizontal-Line noise.			
	Sharpness	0-100	Adjust picture sharpness.			
· · · ·	H.Position	0-100	Adjust the horizontal position of the picture.			
	V.Position	0-100	Adjust the vertical position of the picture.			

Color Setup

<	Pi	cture Boost	CSD Setup	PIP PIP Setting	× Extra	E	kit	Luminand	:e	Image	Setup
Color Temp.				Red			Low BI	ue Light		OFF	
DCB Mode		OFF		Green							
DCB Demo		OFF		Blue							

- 1 Press **MENU** (Menu) to display menu.
- 2 Press Left or Right to select

(Color Setup), and press **MENU** to enter.

- 3 Press Left or Right to select submenu.
- 4 Press Left or Right to adjust.
- 5 Press AUTO to exit.

		Warm		Recall Warm Color Temperature from EEPROM.
		Normal		Recall Normal Color Temperature from EEPROM.
	Color Temp.	Cool		Recall Cool Color Temperature from EEPROM.
		sRGB		Recall SRGB Color Temperature from EEPROM.
		User		Recall User Color Temperature from EEPROM
	DCB Mode	Full Enhance	ON/OFF	Disable or Enable Full Enhance Mode.
		Nature Skin	ON/OFF	Disable or Enable Nature Skin Mode.
		Green Field	ON/OFF	Disable or Enable Green Field Mode.
		Sky-blue	ON/OFF	Disable or Enable Sky-blue Mode.
		AutoDetect	ON/OFF	Disable or Enable AutoDetect Mode.
	DCB Demo		ON/OFF	Disable or Enable Demo.
	Red		0-100	Red gain from Digital-register.
	Green		0-100	Green gain from Digital-register.
	Blue		0-100	Blue gain from Digital-register.
			Off/Weak/	
	Low Blue Light		Medium/Str	Decrease blue light wave by controlling color temperature.
			ong	

Picture Boost

C C C C C C C C C C C C C C C C C C C	OSI	Setup	PIP Setting)X Extra	Exit	Luminance	The second secon	etup	Color Setup
Bright Frame		OFF	Brig	htness					
Frame Size			Con	ıtrast 🛛					

1 Press **MENU** (Menu) to display menu.

- 2 Press Left or Right to select (Picture Boost), and press MENU to enter.
- 3 Press Left or Right to select submenu.
- 4 Press Left or Right to adjust.
- 5 Press AUTO to exit.

	Bright Frame	ON/OFF	Enable/Disable Bright Frame		
	Frame Size	14-100	Adjust the Size of the Frame		
	Brightness	0-100	Brightness Adjustment for Enhance Area		
N	Contrast	0-100	Contrast Adjustment for Enhance Area		
	H. position	0-100	Adjust the horizontal position of the Frame		
	V. position	0-100	Adjust the vertical position of the Frame		

Note:

Adjust the brightness, contrast, and position of the Bright Frame for better viewing experience.

OSD Setup

< 🏡 > OSD Setup	PIP PIP Setting) Extra	a Exit	- Lumina	ance	The setup	Color Setup	Pictur	e Boost
Language			H. Position				Transparence		
Timeout							Break Reminder ◀	OFF	
DP Capability			HDMI						

- 1 Press **MENU** (Menu) to display menu.
- 2 Press Left or Right to select

(OSD Setup), and press **MENU** to enter.

- 3 Press Left or Right to select submenu.
- 4 Press Left or Right to adjust.
- 5 Press AUTO to exit.

Language	English, France , Spanish, Portugues,German, Italian,Dutch,Swedish, Finnish, Polish ,Czech, Russia,Korea, TChina, SChina,Japanese.	Select the OSD language		
Timeout	5-120	Adjust the OSD timeout.		
H. Position	0-100	Adjust the horizontal position of the OSD.		
V. Position	0-100	Adjust the vertical position of the OSD.		
Transparence	0-100	Adjust the OSD		
Break Reminder	ON/OFF	Break Reminder if the user continuely work for mare than 1 hurs		
DP Capability	1.1/1.2	If the DP video content supports DP1.2, please select DP1.2 for DP Capability; otherwise, please select DP1.1.		
HDMI	1.4/2.0	The factory default setting is at HDMI 2.0.But HDMI 1.4 supports most Blu-Ray/DVD players on the market.		

PIP Setting

< PIP > PIP seting	X Extra	Exit	Luminance	Image	setup	Color Setup	Picture	e Boost) Setup
	Off								Off	
	D-SUB									
Sub Source					Off					

- 1 Press **MENU** (Menu) to display menu.
- 2 Press Left or Right to select PIP, and press MENU to enter.
- 3 Press Left or Right to select submenu.
- 4 Press Left or Right to adjust.
- 5 Press AUTO to exit.

	PIP	OFF / PIP / PBP	Disable or Enable PIP or PBP.		
	Main Source	D-SUB/DVI/HDMI/MHL/D P	Select main screen source.		
	Sub Source	D-SUB/DVI/HDMI/MHL/D P	Select sub screen source.		
	Size	Small / Middle / Large	Select screen size.		
		Right-up			
PIP	Position	Right-down	Set the screen location.		
		Left-up			
		Left-down			
	Audio	On: PIP Audio	Disable or Enable Audio Setup.		
	Addio	Off: Main Audio	Disable of Eliable Audio Setup.		
	Swap	On: Swap	Swap the screen source.		
	Οιναρ	Off: non action	Swap the screen source.		

Please refer below table for compatibility of main/sub input source.

		Main Source						
P	IP	D-sub	DVI	HDMI/MHL	DP			
	D-sub	\vee	\vee	\vee	\vee			
SUB Source	DVI	\vee	\vee	\vee	\vee			
SOB Source	HDMI/MHL	\vee	\vee	\vee	\vee			
	DP	\vee	\vee	\vee	\checkmark			

PBP		Main Source						
		D-sub	DVI	HDMI/MHL	DP			
	D-sub	\vee	\vee	\lor	\vee			
SUB Source	DVI	\vee	\vee	\vee	\vee			
SOB Source	HDMI/MHL	\vee	\vee	\vee	\vee			
	DP	\vee	\vee	\vee	\vee			

Extra

$\langle \sum_{i=1}^{N} \rangle_{i}$	Exit	Lu	 Image Setup	Co	lor Setup	Picture Boost	OSD Setup	PIP PIP Setting
Input Select					Full screen		Resolution : 1024(H)X7	68(V)
Auto Config			DDC/Cl				H. Frequency : 60KHz	
Off Timer							V. Frequency : 60Hz	

1 Press **MENU** (Menu) to display menu.

- 2 Press Left or Right to select X (Extra), and press MENU to enter.
- 3 Press Left or Right to select submenu.
- 4 Press Left or Right to adjust.
- 5 Press AUTO to exit.

		Auto	Auto Detect input signal
		D-SUB	Select D-SUB signal source as input
	Input Select	DVI	Select DVI signal source as input
		HDMI/MHL	Select HDMI/MHL signal Source as input
		DP	Select DP signal Source as input
	Auto Config.	Yes / No	Auto adjust.the picture to default.
2/	Off Timer	0-24 hrs	Select DC off time.
		Wide	16:9 or 16:10
		4:3	4:3 or 5:4
	Image Ratio	Movie 1	over scan: Top 9% ; Down 9%
		Movie 2	over scan: Top 9% ; Down 17%.
		1:1	Native resolution
	DDC/CI	Yes / No	Turn on or off DDC/CI Support.
	Reset	Yes / No	Reset the menu to default.

Notes:

- 1. If the DP video content supports DP1.2, please select DP1.2 for DP Capability; otherwise, please select DP1.1.
- 2. movie1 and movie2 only support digital source.
- 3. Image Ratio and PIP/PBP can be only one.
- 4. movie1 and movie2 only support Video Timing(example:480I,480P,576I,576P,720P,1080i,1080P)

Exit							
< 🏹 > -	Luminance	The setup	Color Setup	Picture Boost	CSD Setup	PIP PIP Setting) Extra

1 Press **MENU** (Menu) to display menu.

- 2 Press Left or Right to select (Exit), and press MENU to enter.
- 3 Press AUTO to exit.

LED Indicator


Status	LED Color
Full Power Mode	White
Power Saving	Yellow


Driver


Monitor Driver

Windows 10

 - Start Windows® 10
- Right click START.
- Click "Control Panel".

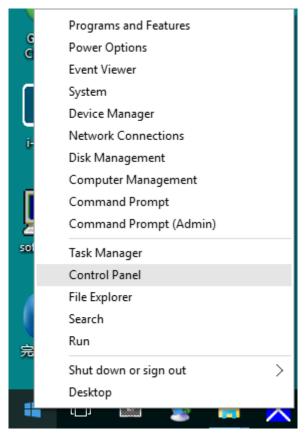



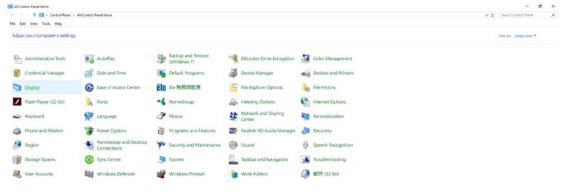


Click on the "Change display settings" button

💷 Display		-	Х
← → ∽ ↑ 🗔 > Control Pa	nel > All Control Panel Items > Display 🗸 🗸	Search Control Panel	P
File Edit View Tools Help			
Control Panel Home	Change size of items		?
Adjust resolution Quibrate color	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays.		
<u>Change display settings</u> Adjust ClearType text	Change only the text size		
	Instead of changing the size of everything on the desktop, change only the text size for a specific item. Title bars 9 Bold		
	Apply		
See also			
Personalization			
Devices and Printers			

Click the "Advanced Settings" button.

Screen Resolution			-	×
← → ~ ↑ 🗔 > Control Par File Edit View Tools Help	nel > All Control Panel Items > Display > Screen Resolution	v 0	Search Control Panel	Q
	Change the appearance of your display			
		Detect Identify		
	Display: 1. B24 ~ Resolution: 1920 × 1080 (Recommended) ~ Orientation: Landscape ~			
	La constanta da	Advanced settings		
	Make text and other items larger or smaller What display settings should I choose?			
]	OK Cancel Apply		

• Click the "Monitor" tab and then click the "Properties" button.

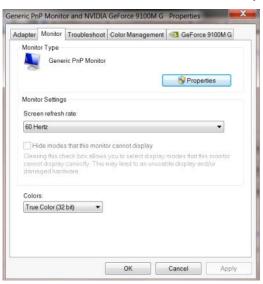

• Click the "Driver" tab.


General	Driver	Details	
	Gene	ric PnP Mo	nitor
	Drive	Provider	Microsoft
	Drive	Date:	6/21/2006
	Drive	Version:	6.1.7600.16385
	Digita	I Signer:	Microsoft Windows
Dr	iver Deta	ails	To view details about the driver files.
Up	date Driv	er	To update the driver software for this device.
Rol	Back D	river	If the device fails after updating the driver, roll back to the previously installed driver.
	Disable		Disables the selected device.
	Uninstal		To uninstall the driver (Advanced).

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... "and then


click the "Browse my computer for driver software" button.

+	Search automatically for updated driver software Windows will search your computer and the Internet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.	
•	Browse my computer for driver software Locate and install driver software manually.	

• Select "Let me pick from a list of device drivers on my computer".

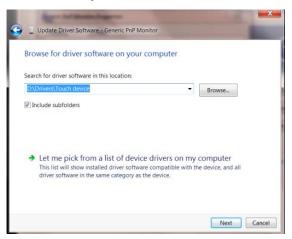

• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

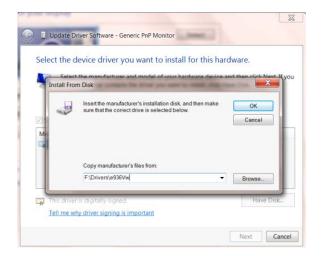

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk

drive.


- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Windows 8

- Start Windows® 8
- Right click and click **All apps** at the bottom-right of the screen.



- Click on the "Control Panel" icon
- Set the "View by" to "Large icons" or "Small icons".

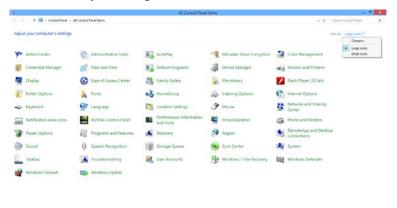

6 🗎 📆

9 % 6 1150M

• Click on the "Display" icon.

Action Center	C Administrative Tools	#2 Automay	Backup and Restore	
Color Management	2 Credential Manager	all Date and Time	Celast Programs	
Ucustop Gadgets	J Device Manager	mg Devices and Printers	Chiqmay	
Ease of Access Center	E Hokder Options	A FORS	Getting Started	
& HomeGroup	Jà Indexing Options	C: Internet Options	- Keyboard	
Location and Other Sensors	J Mouse	Stetwork and Sharing Center	Notrication Area loons	
WIDIA Control Panel	MUESA Physix	🍓 Parental Controls	/ Pen and Touch	
Performance beformation and Tools	E Personalization	Phone and Modern	Power Options	
Programs and Features	Eestek HD Audie Manager	A Recovery	👂 Region and Language	
RemoteApp and Desitop Connectors	@ sound	Ø Speech Recognition	Syne Center	
System	Tablet PC Settings	Tankbar and Start Menu	A Troubleshooting	
L User Accounts	St. Windows Anytime Upgrade	Windows CardSpace	Ne Windows Defender	
Windows Forewall	2 Windows Update			

• Click on the "Change display settings" button.

			Cold Inc.
🚱 🕘 = 🔍 + Control Panel -	All Control Panel Items + Display		• • Isante Commithenel A
Control Panel Home Adjust resolution © Calibrate color	Make it easier to read what's o You can change the size of text and othe temporarily enlarge just part of the scree	r items on your scieen by choosing one of these options. To	•
Overge display settings Adjust ClearType test	©Snate 18%	Preview	
Set outtom text size (DPD)	Medium - 125% (default)		
	🖱 Lørger - 150%		
		Authy	
Set also Personalization Devices and Printers			

• Click the "Advanced Settings" button.

🚱 🕢 - 🍳 • Control Panel + All Control Panel Items + Display + Scree	Alisolution	• • Search Control Parket P
Change the appe	arance of your display	
	1 O Banty	
Resolution: 15	Noosa Defaut fila Parel • 20 = 1080 (recommended) • ndrcape •	
	Advanced settings	
Make text and other in What display settings		
	OK Cancel Apply	

• Click the "Monitor" tab and then click the "Properties" button.




Click the "Driver" tab.

•

General	Driver	Details	
	Gene	rric PnP Mo	nitor
	Drive	r Provider.	Microsoft
	Drive	r Date:	6/21/2006
	Drive	r Version:	6.1.7600.16385
	Digita	al Signer:	Microsoft Windows
Dr	iver Det	ails	To view details about the driver files.
Up	date Driv	ver	To update the driver software for this device.
Rol	Back D	tiver	If the device fails after updating the driver, roll back to the previously installed driver.
	Disable	•	Disables the selected device.
	Uninstal		To uninstall the driver (Advanced).

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver..." and

then click the "Browse my computer for driver software" button.

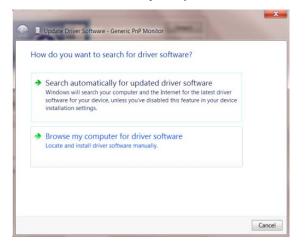

• Select "Let me pick from a list of device drivers on my computer".



• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

Install Fro	t the manufacturer and model of your hardware device an m Disk	d than click Ne
3	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
	Copy manufacturer's files from: F\Drivers\e936Vw	Browse

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Windows 7

- Start Windows® 7
- Click on the "Start" button and then click on "Control Panel".



• Click on the "Display" icon.

P Accon Center: C: Advances trainer Toche: R Advances Descent Temp Exclusion Center C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Control Center: C: Con	2 Odor Management Contact Laborts Division Laborts Div					
Example State Environ Manager 44 Division and Rheem Example Example France Chemic Environ Manager 44 Division and Rheem C Espany Example France Chemic Environ Manager A Internet Options	Disstanty Example Stategets	Action Center	C Administrative Tools	Ka Automay	1 Backup and Restore	
East of Access Centre Plane Options Plane Options EventSystem Plane Options Plane Options Options EventSystem Plane Options Plane Options Controls Controls EventSystem Mone Status EventSystem EventSystem EventSystem WIDEXA Control Mone EventSystem Free Option Free Option Free Options Free Options Free Options Free Options	Ease of Access Center If Mater Options A form If ontring Stanted Interedicions All Interim Options Chemic Actions Arborn Actions Exaction and Once Sensors Movies Thermit Actions Arborn Actions VADIA Control Interim Movies Thermit Actions Arborn Actions Material Control Interim Movies Arborn Actions Arborn Actions Material Control Interim Movies Arborn Actions Arborn Actions Material Control Interim Movies Arborn Actions Arborn Actions Material Control Interim False Arborn Actions Arborn Actions Arborn Actions Material Control Interim Table Arborn Actions Arborn Actions Arborn Actions Material Control Interime Material Control Interime Material Control Interime	Color Management	2 Credential Manager	Date and Time	Default Programs	
Anomediosa Al Indeemo Outron Anomediosa Anomedi	Benerificazi Jal Indense Options Processor Captional Addition Service Destination Area Manuella Lanatoloui Ad Otter Service Processor	University Campets	J Device Manager	wig Devices and Printers	Chiqmay	
Lacatoria and Other Senson If Mouse If Metanons and Sharing Center International Area Econ MODELA Control Invent Mouse Invent A Center Invent A Center Modela Control Invent Mouse Invent A Center Invent A Center Modela Control Invent Mouse Invent A Center Invent A Center Professional Information and Tools Mouse Invent A Modelance Invent A Modelance Professional Information and Tools Restance A Control Invent A Modelance Invent A Modelance Professional Information and Tools Restance A Control Invent A Modelance Invent A Modelance Professional Information Restance A Control Invent A Modelance Invent A Modelance Professional Information Restance A Control Invent A Modelance Invent A Modelance Restance A Control Invent A Modelance Invent A Modelance Invent A Modelance Restance A Control Invent A Modelance Invent A Modelance Invent A Modelance Restance A Control Invent A Modelance Invent A Modelance Invent A Modelance	Lacatoria do Other Senson	Ease of Access Center	E Holder Options	A Form	Gentriq Stanted	
DVEXA Lotes have All VXEXA Physic Presental controls Z / Instand Society Reformance Informations and Tools The presental controls The Anno Doctors The Anno Doctors Reformance Informations and Tools The presental controls The Anno Doctors The Anno Doctors The Anno Doctors Reformance Informations and Tools The Anno Doctors The Anno Doctors The Anno Doctors The Anno Doctors Representation Controls The Anno Doctors The Anno Doctors The Anno Doctors The Anno Doctors Representation Controls The Anno Doctors The Anno Doctors The Anno Doctors The Anno Doctors Representation Controls The Anno Doctors The Anno Doctors The Anno Doctors The Anno Doctors Representation Controls The Anno Doctors	VICUAL Control Funder Image: Control Funder // Forsund Liture Reformance Information and Tool Image: Control Funder Image: Prove Outcome Reformance Information and Tool Image: Prove Outcome Image: Prove Outcome Reformance Information Image: Prove Outcome Image: Prove Outcome Image: Prove Outcome B Image: Prove Outcome B Image: Prove Outcome B Image: Prove Outcome B Image: Prove Outcome B Image: Prove Outcome B Image: Prove Outcome B Image: Prove Outcome Image: Prove Outcome Image: Pr	HomeGroup	Ja Indexing Options	C: Internet Options	- Keyboard	
		Location and Other Sensors	I Mouse	Network and Sharing Center	Districution Area kons	
Program and Features Be Rockets HO Autor Manager Angenery Proposed part Districts Provide Constraint Provide Co	() Fragmens and Features ■ Reastale HD Audio Managae & Renovey	NVIDIA Control Panel	NVIESA Physix	📥 Parential Controls	/ Pen and Touch	
g Benerskip and Desting Convertions	g Benorskeps and Destrep Convections	Performance Information and Tools	Rensonalization	Phone and Modern	Power Options	
N Sofern 🖉 Tablet PC Settings 🛄 Tablet and Start Menu 🛞 Truckenhooding B, Line Accounts 🛠 Windows Anythme Upgrade 🕅 Windows Cardibater Nat Windows Definitien	K Sjohen 🕅 Tabler KC Settings. 🛄 Tabler Weit Start Menu 🤉 Finabler ind Start Menu 🖡 Finableringstopping E. Uar Accounts 💱 Windows Anytime Upgrade 👔 Windows Cardialaxer Mat Windows Defender	E Programs and Features	🖀 Reates HD Audie Manager	Kecowery	👂 Region and Language	
🖁 Liver Accounts 🕴 Windows Anythme Upgrade 🔢 Windows CardSpace 🛛 Nal Windows Defender	🖞 Liver Accounts 🥂 Windows Anytime Lipgrade 🚺 Windows CardSpace Nat Windows Defender	RemoteApp and Desitop Connectors	@ sound	Ø Speech Recognition	Sync Center	
		System	Tablet PC Settings	Tashbar and Start Meny	Troubleshooting	
	Windows Forwall 🖉 Windows Optite	L User Accounts	🦉 Windows Anytime Upgrade	Windows CardSpace	Net Windows Defender	
🔮 Windows Toywall 💦 Windows Update		Windows Feewall	2 Windows Update			

• Click on the "Change display settings" button.

	All Control Panel Items + Display		
Control Panel Home Adjust resolution Calibrate color	Make it easier to read what's or	items on your scieen by choosing one of these options. To	and and any other
Change display settings Adjust ClearType text	©Smaller 1975	Preview	
Set cuttom text size (DPD)	🖉 Medium - 125% (default)		
	🗢 Larger - 150%		
		Apply	
See also Personalization			
Devices and Printers			

• Click the "Advanced Settings" button.

Change the appearance of your display	
	Detect Adentify
Display 1. Nextia Default Flat Panel + Resolution 1000 (recommended) +	
Orientation: Landscape •	Advanced antimos
Male feet and other item larger or smaller What display settings (mount mount	
OK Canori	Apply

• Click the "Monitor" tab and then click the "Properties" button.




• Click the "Driver" tab.



• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... " and

then click the "Browse my computer for driver software" button.

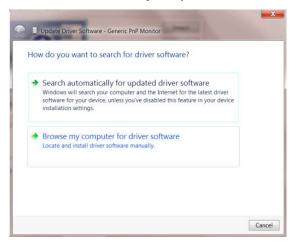

• Select "Let me pick from a list of device drivers on my computer".



• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

Install Fro	t the manufacturer and model of your hardware device a m Disk	nd then click Nev
9	Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
	Copy manufacture's files from: F\Drivers\e936Vw •	Browse

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

i-Menu	Lumi	nance	9 😣
		×	
🕕 Contrast γ Gamma 📴 DCR	0 37 ∢ Gamma 1 ♪	🔆 Brightness '∲ Eco Mode	0 36 ∢ ♥ ▶
	/10	C	\$

e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC statuses, you may choose the desired time (in minutes) from the pull-down menu for your monitor to automatically shutdown. The example below illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.




You can click "RESET" to set the e-Saver to its default settings like below.



Screen+



Welcome to "Screen+" software by AOC. Screen+ software is a desktop screen splitting tool; it splits the desktop into different panels, and each panel displays a different window. You only need to drag the window to a corresponding panel when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it.

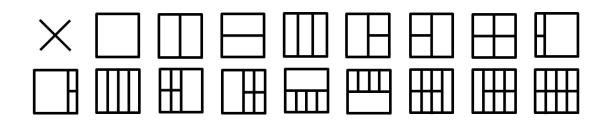

Troubleshoot

Problem & Question	Possible Solutions
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.
No images on the screen	 Is the power cord connected properly? Check the power cord connection and power supply. Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection. * DVI input is not available on every model. If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen. If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/2000) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer. Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Adjust the maximum resolution and frequency that the monitor can handle properly. Make sure the AOC Monitor Drivers are installed.
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back.
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution you are using.

Monitor Is Stuck In Active Off-Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME shut-down mode to adjust CLOCK and PHASE. Press to auto-adjust.

Specification

General Specification

	Model name	C4008VU8		
	Driving system	TFT Color LCD		
	Viewable Image Size	101.6 mm diagonal		
	Pixel pitch	0.230(H)mm x 0.230(V)mm		
	Video	R, G, B Analog Interface & Digital Interface		
Panel	Separate Sync.	H/V TTL		
	Display Color	1.07B Colors		
	Pixel Clock	210MHz(D-SUB) 300MHz(HDMI1.4,MHL) 600MHz(DP,HDMI2.0)		
	Horizontal scan range	30~99KHz (D-SUB, MHL,HDMI1.4) 30~160KHz(DP,HDMI2.0)		
	Horizontal scan Size(Maximum)	884.736 mm		
	Vertical scan range	23Hz ~ 80Hz		
	Vertical scan Size(Maximum)	497.664 mm		
	Optimal preset resolution	1920x1080@60Hz(D-SUB,MHL) 3840x2160@30Hz(HDMI1.4) 3840x2160@60Hz(DP,HDMI2.0)		
Others	Plug & Play	VESA DDC2B/CI		
	Input Connector	VGA/ HDMI/MHL/DP/Audio in/ Earphone out/USB3.0x4		
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive, TMDS		
	Speaker	5 W x 2		
	Power Source	100-240V~, 50/60Hz, 1.5A		
		Typical (Brightness = 90,Contrast = 50) 50W		
	Power Consumption	(Brightness = 100,Contrast = 100) 110W		
		Power saving ≤0.5W		
	Off timer	0-24 hrs		
	Connector Type	VGA\ HDMI\DP \ Line in\Earphone out\ USB2.0x2\USB3.0x4		
	Signal Cable Type	Detachable		
Dhusiaal	Dimensions & Weight:			
Physical Characteristics	Height (with base)	631.8mm		
	Width	906.8mm		
	Depth	245.8 mm		
	Weight (monitor only)	11.85 kg		
	Temperature:			
	Operating	0° to 40°C		
	Non-Operating	-25° to 55°C		
Environmental	Humidity:			
	Operating	10% to 85% (non-condensing)		
	Non-Operating	5% to 93% (non-condensing)		
	Altitude:			
	Operating	0~ 5000m(0~ 16404 ft)		


Non-Operating	0~ 12192m (0~ 40000 ft)

Since the MHL provides mobile phone charging function and share the same connector with HDMI, Whether the MHL is set to On, Off or Standby mode, the MHL port provides power to charge the connected device simultaneously. In Standby and Off energy saving of ErP not applicable for the MHL charging functionality.

Preset Display Modes

Standard	Resolution	H. Frequency (kHz)	V. Frequency (Hz)
VGA	640x480@60Hz	31.469	59.94
VGA	640x480@67Hz	35	66.667
VGA	640x480@72Hz	37.861	72.809
VGA	640x480@75Hz	37.5	75
DOS MODE	720x400@70Hz	31.469	70.087
SVGA	800x600@56Hz	35.156	56.25
SVGA	800x600@60Hz	37.879	60.317
SVGA	800x600@72Hz	48.077	72.188
SVGA	800x600@75Hz	46.875	75
MAC MODE	832x624@75Hz	49.725	74.551
XGA	1024x768@60Hz	48.363	60.004
XGA	1024x768@70Hz	56.476	70.069
XGA	1024x768@75Hz	60.023	75.029
SXGA	1280x1024@60Hz	63.981	60.02
SXGA	1280x1024@75Hz	79.976	75.025
WXGA+	1440x900@60Hz	55.935	59.887
WSXGA	1680x1050@60Hz	64.674	59.954
FHD	1920x1080@60Hz	67.5	60
HD	1280x960@60HZ	60	60
HD	1280x720@60HZ	44.772	59.885
QWHD	2560x1440@60Hz	88.786	59.9
UHD	3840X2160@30Hz	67.5	30
UHD	3840X2160@60Hz	133.32	60

 Pin Assignments




15-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	Video-Red	9	+5V
2	Video-Green	10	Ground
3	Video-Blue	11	N.C.
4	N.C.	12	DDC-Serial data
5	Detect Cable	13	H-sync
6	GND-R	14	V-sync
7	GND-G	15	DDC-Serial clock
8	GND-B		



Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2+	11	TMDS Clock Shield
2	TMDS Data 2 Shield	12	TMDS Clock
3	TMDS Data 2	13	CEC
4	TMDS Data 1+	14	Reserved (N.C. on device
5	TMDS Data 1Shield	15	SCL
6	TMDS Data 1	16	SDA
7	TMDS Data 0+	17	DDC/CEC Ground
8	TMDS Data 0 Shield	18	+5V Power
9	TMDS Data 0	19	Hot Plug Detect
10	TMDS Clock +		

 

20-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	Hot Plug Detect
9	ML_Lane 1 (p)	19	Return DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

Plug and Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

Regulation

FCC Notice

FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

NOTICE:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

WEEE Declaration

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

This product complies with all implemented RoHS type regulations worldwide, including but not limited to, EU, Korea, Japan, US States (e.g. California), Ukraine, Serbia, Turkey, Vietnam and India. We continue to monitor, influence and develop our processes to comply with upcoming proposed RoHS type regulations, including but not limited to, Brazil, Argentina, Canada.

WEEE Declaration for India



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit http://www.aocindia.com/ewaste.php and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 080-6788-6788 / 080-3323-1313 (Monday to Saturday, 10 a.m. to 6 p.m.)

Centralized E-waste collection center

Address: TPV Technology India Private Limited, 59, Maheswari Nagar, 1st Main Road, Mahadevapura Post, Whitefield Road, Bangalore, Karnataka, PIN: 560048, Tel: 080-3023-1000

E-mail: serviceindia@aoc.com

Restriction on Hazardous Substances statement (India)

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTER V, rule 16, sub-rule (1) . Whereas

New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

EPA Energy Star



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) BV and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency. (FOR EPA CERTIFIED MODELS)

EPEAT Declaration



EPEAT is a system to help purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products. (FOR EPEAT CERTIFIED MODELS)

AOC believes in protecting the environment. With a key concern for the conservation of natural resources, as well as landfill protection, AOC announces the launch of AOC monitor's packaging recycling program. This program is designed to help you discard of your monitor carton and filler materials properly. If a local recycling center is not available, AOC will recycle the packaging material for you, including foam filler and carton. AOC Display solution will only recycle AOC monitor packaging. Please refer to the following website address:

Only for North and South American, excluding Brazil:

http://us.aoc.com/aoc-corporation/?page=environmental-impact

For Germany:

http://aoc-europe.com/de/content/environment

For Brazil:

http://www.aoc.com.br/pg/embalagem-verde

Service

Warranty Statement for Europe

LIMITED THREE-YEAR WARRANTY*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section on <u>www.aoc-europe.com</u> for the warranty instructions in your country. The freight cost for the warranty is pre-paid by AOC for the delivery and return. Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquake and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified or Authorized Service Center will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: http://www.aoc-europe.com

Warranty Statement for Middle East and Africa (MEA)

And

The Commonwealth of Independent States (CIS)

LIMITED ONE to THREE YEARS WARRANTY*

For AOC LCD Monitors sold within the Middle East and Africa (MEA) and the Commonwealth of Independent States (CIS), AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of One (1) to Three (3) years from the manufacture date depending on sale country. During this period, AOC International (Europe) B.V. offers a Carry-In (return to Service Center) Warranty Support at an AOC's Authorized Service Center or Dealer and at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. As a Standard Policy, the warranty will be calculated from the manufacture date identified from the product ID serial number, but the total warranty will be Fifteen (15) months to Thirty Nine (39) months from MFD (manufacture date) depending on sale country. Warranty will be considered for exceptional cases that are out of warranty as per the product ID serial number and for such exceptional cases; Original Invoice/Proof Of Purchase Receipt is mandatory.

If the product appears to be defective, please contact your AOC authorized dealer or refer to the service and support section on AOC's website for the warranty instructions in your country:

- Egypt: <u>http://aocmonitorap.com/egypt_eng</u>
- CIS Central Asia: <u>http://aocmonitorap.com/ciscentral</u>
- Middle East: <u>http://aocmonitorap.com/middleeast</u>
- South Africa: <u>http://aocmonitorap.com/southafrica</u>
- Saudi Arabia: <u>http://aocmonitorap.com/saudiarabia</u>

Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Authorized Service Center or Dealer under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to
 protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source

- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquakes and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified, Authorized Service Center or dealer will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF ONE (1) to THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: http://www.aocmonitorap.com



AOC International (Europe) B.V.

Prins Bernhardplein 200 / 6th floor, Amsterdam, The Netherlands Tel: +31 (0)20 504 6962 • Fax: +31 (0)20 5046933


AOC Pixel Policy ISO 9241-307 Class 1

July 25th, 2013

AOC strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but AOC guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This Pixel Policy explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels.

Pixels and Sub Pixel Definition

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. When all sub pixels of pixel are lit, the three colored sub pixel together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel.

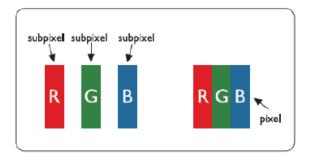

Types of Pixel Defects

- Bright Dot Defects: the monitor displays a dark pattern, sub pixels or pixels are always lit or "on"
- Black Dot Defects: the monitor displays a light pattern, sub pixels or pixels are always dark or "off".

ISO 9241-307	Defect Type 1	Defect Type 2	Defect Type 3	Defect Type 4 Black
Pixel Defect Class	Bright Pixel	Black Pixel	Bright Sub pixel	Sub pixel
			2	+ 1
Class 1	1	1	1	+ 3
			0	+ 5

AOC International (Europe) B.V.

Warranty Statement for North & South America (excluding Brazil)

WARRANTY STATEMENT

for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- · Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/find_service_center ARGENTINA: http://ar.aoc.com/support/find_service_center BOLIVIA: http://bo.aoc.com/support/find_service_center CHILE: http://cl.aoc.com/support/find service center **COLOMBIA:** http://co.aoc.com/support/find_service_center COSTA RICA: http://cr.aoc.com/support/find_service_center DOMINICAN REPUBLIC: http://do.aoc.com/support/find_service_center ECUADOR: http://ec.aoc.com/support/find_service_center EL SALVADOR: http://sv.aoc.com/support/find_service_center GUATEMALA: http://gt.aoc.com/support/find_service_center HONDURAS: http://hn.aoc.com/support/find_service_center NICARAGUA: http://ni.aoc.com/support/find_service_center PANAMA: http://pa.aoc.com/support/find_service_center PARAGUAY: http://py.aoc.com/support/find_service_center PERU: http://pe.aoc.com/support/find_service_center **URUGUAY:** http://pe.aoc.com/support/find_service_center VENEZUELA: http://ve.aoc.com/support/find_service_center IF COUNTRY NOT LISTED: http://latin.aoc.com/support/find_service_center

EASE PROGRAME

5	Е	A	S	Е
	120	(O G	6.6.0	N

Only for AOC branded monitors sold within the continental United States.

All AOC branded monitors are now covered by the EASE Program. If your monitor malfunctions at any time during the first three months, AOC will provide a replacement monitor within 72 hours after you are approved for our program. If your monitor qualifies for the EASE program, AOC will pay for freight both

ways.

Step 1: Phone our TECH Department at 888.662.9888.

Step 2: Fill out and return EASE registration forms by mail or fax.

Step 3: We will issue a Return Authorization Number upon verification into the program.

Step 4: A monitor will be advance shipped to your location.

Step 5: We will issue a UPS Call Tag to pick up the defective unit.

Step 6: Please review the following chart to see your EASE program qualifications.

WARRANTY	COVERAGE AT	CUSTOMER
PERIOD	NO CHARGE	CHARGES
Within the first three months of	- New AOC monitor - Call tag	- None*
purchase: Covered by EASE	dispatched and return freight	
	charges via UPS	
Between 4 months – 1 Year	- All Parts & Labor Including CRT	- UPS Return Freight to AOC
	Tube & LCD Panel	
Between 1 Year - 3 Years: Covered	- Parts & Labor (excluding CRT	- UPS Return Freight to AOC
by standard limited warranty	Tube & LCD Panel)	

*AOC will need to obtain a credit card number if you would like to get a new AOC monitor advanced shipped to your location, prior to the defective unit arriving at AOC's service center. If you do not wish to supply a credit card, AOC will only ship the new monitor, once the defective unit arrives at the AOC service center.

