

# LCD Monitor User Manual

U4308V LED backlight



©2019 AOC. All Rights Reserved.

Safety	4
National Conventions	4
Power	5
Installation	6
Cleaning	7
Other	8
Setup	9
Contents in Box	9
Setup Base	
Adjusting Viewing Angle	
Connecting the Monitor	12
Adjusting	13
Setting Optimal Resolution	13
Windows 10	13
Windows 8	15
Windows 7	17
Hotkeys	19
OSD Setting	21
Luminance	22
Image Setup	23
Color Setup	
Picture Boost	
OSD Setup	
PIP Setting	27
Extra	
Exit	
LED Indicator	
Driver	
Monitor Driver	
Windows 10	
Windows 8	
Windows 7	
i-Menu	
e-Saver	
Screen+	45
Troubleshoot	
Specification	
General Specification	
Preset Display Modes	
Pin Assignments	
Plug and Play	52
Regulation	53
FCC Notice	53
WEEE Declaration	54
WEEE Declaration for India	54
RoHS Declaration for India	54

EPA Energy Star	55
Service	56
Warranty Statement for Europe	56
Warranty Statement for Middle East and Africa (MEA)	58
AOC International (Europe) B.V.	60
Warranty Statement for North & South America (excluding Brazil)	61
EASE PROGRAME	63
TCO DOCUMENT	64

# Safety

# **National Conventions**

The following subsections describe notational conventions used in this document.

#### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

## Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

The wall socket shall be installed near the equipment and shall be easily accessible.

## Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.


Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Lo not place the front of the product on the floor.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed with the stand:

#### Installed with stand

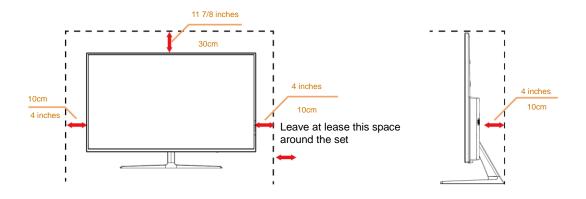


# Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

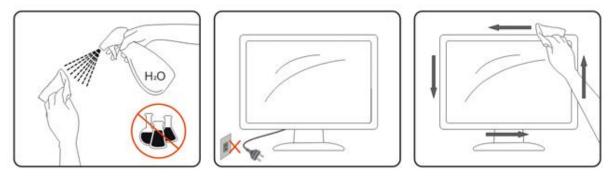

## Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

All Make sure that the ventilating openings are not blocked by a table or curtain.


L Do not engage the LCD monitor in severe vibration or high impact conditions during operation.

LO not knock or drop the monitor during operation or transportation.

For display with glossy bezel the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

# Setup

# **Contents in Box**

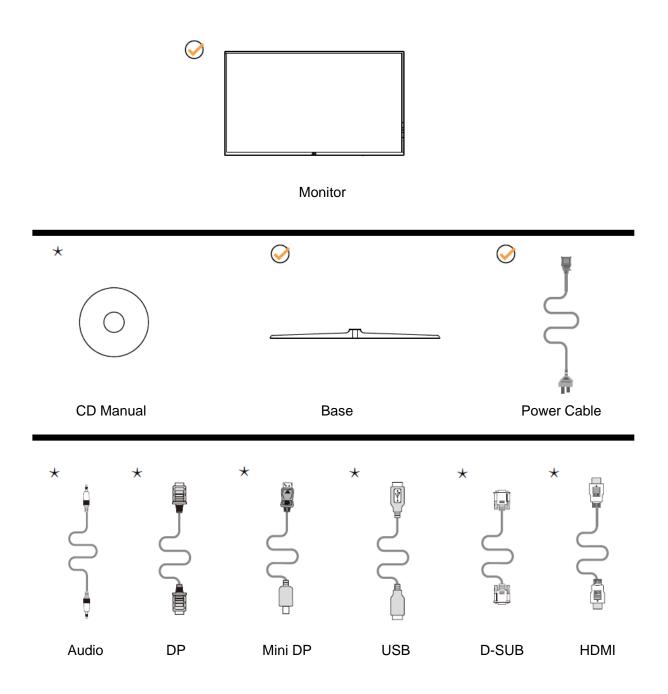


\* Not all signal cables (Audio, D-SUB, DP, Mini DP, HDMI and USB cables) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.


# Setup Base

Please setup or remove the base following the steps as below. Please place the monitor on a soft and flat surface to prevent the scratch.

Setup:

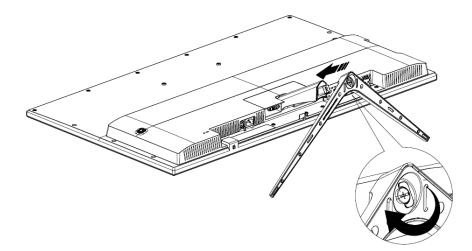


Remove:

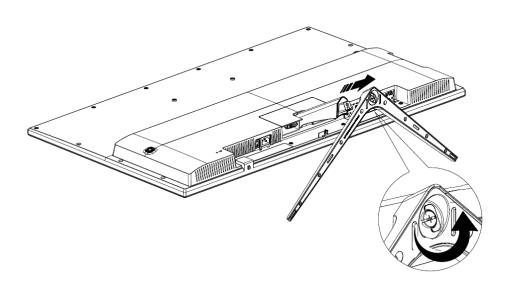

# **Adjusting Viewing Angle**

For optimal viewing, it is recommended to look at the full face of the monitor, and then adjust the monitor's angle to your own preference.


Hold the stand so you will not topple the monitor when you change the monitor's angle.

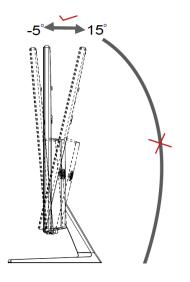

Do not adjust the viewing angle over 15 degrees in order to avoid damage.

# **Connecting the Monitor**

Cable Connections In Back of Monitor and Computer:

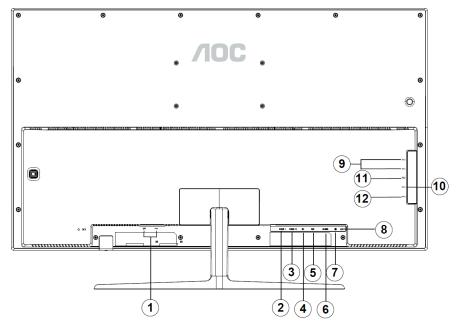

- 1 Power
- 2 HDMI1
- 3 HDMI2
- 4 Mini DP
- 5 DP
- 6 D-SUB
- 7 AUDIO IN
- 8 Earphone out
- 9 USB3.1 Gen1
- 10 USB3.1 Gen1
- 11 USB3.1Gen1+Quick Charging
- 12 USB-PC upstream

To protect equipment, always turn off the PC and LCD monitor before connecting.

- 1 Connect the power cable to the AC port on the back of the monitor.
- 2 Optional (Requires a video card with HDMI port) Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.
- 3 Optional (Requires a video card with DP port) Connect one end of the DP cable to the back of the monitor and connect the other end to the computer's DP port.
- 4 Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port
- 5 Turn on your monitor and computer.


# Adjusting

# **Setting Optimal Resolution**

### Windows 10

#### For Windows 10:

- Right click START.
- Click "CONTROL PANEL".

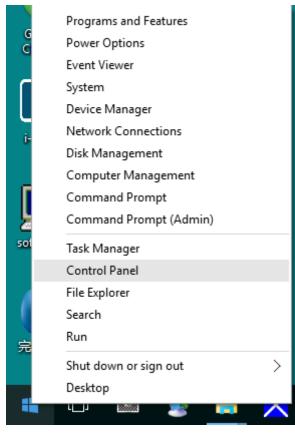

#### Click "DISPLAY".

٠

All Control Panel Items					- ¤ ×
+ + + T II > Control Panel >	All Control Panel Items				v 👌 Search Control Panel 🖉
File Edit View Tools Help Adjust your computer's settings					View by: Large icons *
Administrative Tools	AutoPlay	Backup and Restore (Windows 7)	RitLocker Drive Encryption	Color Management	
Credential Manager	Date and Time	Default Programs	Device Manager	Devices and Printers	
Display	Ease of Access Center	Elo 触摸屏配置	File Explorer Options	File History	
Flash Player (32-bit)	A Fonts	• HomeGroup	Indexing Options	Internet Options	
Keyboard	🚰 Language	J Mouse	Network and Sharing Center	Personalization	
Phone and Modem	Power Options	Programs and Features	Realtek HD Audio Manager	a Recovery	
Region	RemoteApp and Desktop Connections	Security and Maintenance	Sound	Speech Recognition	
Storage Spaces	3 Sync Center	System	Taskbar and Navigation	Troubleshooting	
Ser Accounts	Windows Defender	Windows Firewall	Work Folders		

• Click on the "Change display settings" button.

💷 Display		-	×
← → ∽ ↑ 🛄 > Control Pane	el > All Control Panel Items > Display 🗸 🗸	Search Control Panel	P
File Edit View Tools Help			
Control Panel Home	Change size of items		•
Adjust resolution Calibrate color	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays.		
<u>Change display settings</u> Adjust ClearType text	Change only the text size		
	Instead of changing the size of everything on the desktop, change only the text size for a specific item.		
	Title bars 9 Bold		
	Apply		
See also			
Personalization			
Devices and Printers			

• Set the resolution **SLIDE-BAR** to Optimal preset resolution.

Screen Resolution			o x
← → ~ ↑ ➡ > Control Pane File Edit View Tools Help	I > All Control Panel Items > Display > Screen Resolution v 🖉	Search Control Panel	٩
	Change the appearance of your display		
	Detect Identify		
	Display:     1. B24       Resolution:     1920 × 1080 (Recommended)       Orientation:     Landscape		
	Advanced settings		
	Make text and other items larger or smaller What display settings should I choose?		
	OK Cancel Apply		

### Windows 8


#### For Windows 8:

• Right click and click All apps at the bottom-right of the screen.




Apps				
Eing	Reader Reader		WordPad	Computer
Calendar	styCrive	Calculator	XPS Viewer	Econtrol Panel
Camera	Sports	Character Map		Default Programs
Desktop	5tore	Math Input Panel	Magnifier	The balancer
Finance	Travel	Notepad	Navrator	Peip and Support
Garnes	Wideo	🧭 Paint	On-Screen Keyboard	Run
internet Explorer	Weather	Remote Desitop Connection	Windows Speech Recognition	Tisk Manager
Mal		Snipping Tool		Windows Defender
Maps		Sound Recorder	GPUMew	S Windows Lasy Transfer
Messaging		Eleps Recorder	GPUNiew Help	Windows Easy Transfer Reports
Music		Sticky Notes	Windows Performance	Windows PowerShell
News		Windows Fax and Scan	Windows Performance	
People		Windows Journal		
Photos		Vindows Media Player	Command Prompt	

- Set the "View by" to "Category".
- Click "Appearance and Personalization".

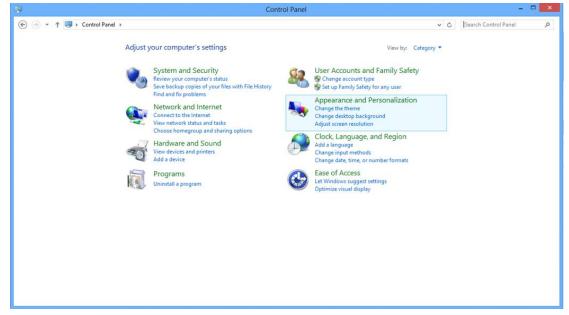

Click "DISPLAY".

٠

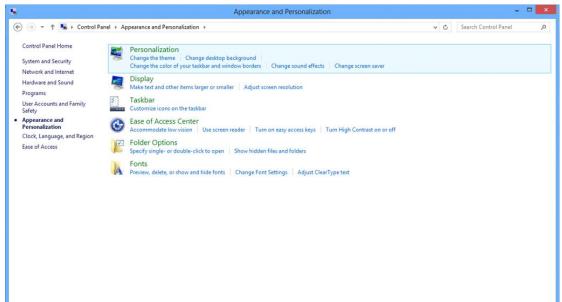


Set the resolution **SLIDE-BAR** to Optimal preset resolution

<b>a</b>	Screen Resolution		- 5	×
(€) (⇒) * ↑ ♥ + Control Panel + Appearance and Personalization Change the app		× ¢	Search Control Panel	ρ
Resolution: Orientation: Make text and other What display setting	1920 × 1080 (Recommended)         V           High         1920 × 1080 (Recommended)           1600 × 900         Advanced settings			
	ОК Сапсе! Арр!у 1024 × 768 Low			

#### Windows 7

For Windows 7:

- Click START.
- Click "CONTROL PANEL".

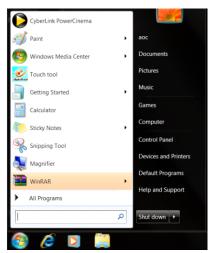


• Click "Appearance".


<ul> <li>Action Center</li> </ul>	C Administrative Tools	AutoPlay	Backup and Restore	
Color Management	Credential Manager	Date and Time	😨 Default Programs	
Desktop Gadgets	Device Manager	ma Devices and Printers	Display	
Ease of Access Center	Folder Options	A Fonts	Getting Started	
	Indexing Options	Internet Options	Keyboard	
S Location and Other Sensors	J Mouse	Network and Sharing Center	Notification Area Icons	
NVIDIA Control Panel	🚳 NVIDIA PhysX	🍓 Parental Controls	/ Pen and Touch	
Performance Information and Tools	Personalization	Phone and Modern	Power Options	
Programs and Features	Realtek HD Audio Manager	📽 Recovery	Region and Language	
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu.	Troubleshooting	
User Accounts	🍇 Windows Anytime Upgrade	Windows CardSpace	Ill Windows Defender	
Windows Firewall	💐 Windows Update			

#### Click "DISPLAY".

•

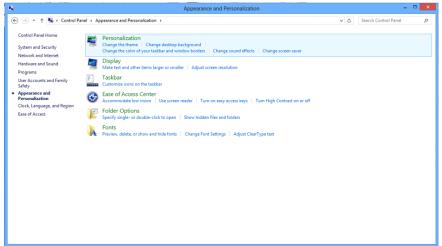


• Click on the "Change display settings" button.

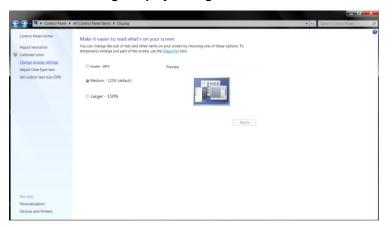


Set the resolution SLIDE-BAR to Optimal preset resolution

•

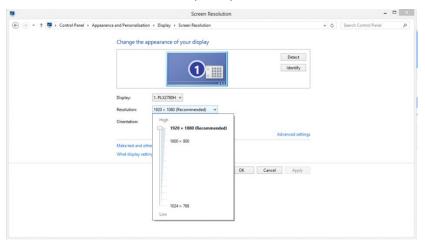

## Hotkeys

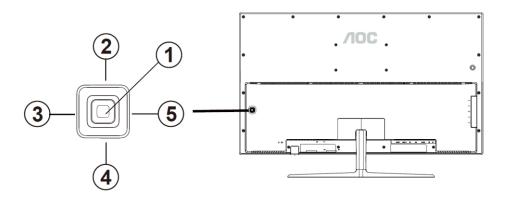

1	Menu/Enter/ Power				
2	Source/Auto/Exit				
3	Volume				
4	ECO				
5	Clear Vision				

#### Source/Auto/Exit

When the OSD is closed, press "up" button will be Source hot key function. When the OSD is closed, press "up" button continuously about 2 second to do auto configure (Only for the models with D-Sub).

#### Volume

When there is no OSD, press " $\blacktriangleright$ " to active volume adjustment bar, press  $\triangleleft$  or  $\blacktriangleright$  to adjust volume (Only for the models with Audio)

#### ECO

When there is no OSD, press "down" to active ECO adjustment bar, press left or right to adjust ECO mode.


#### Power/Menu/Enter

Press the Power button to turn on the monitor.

When there is no OSD, Press to display the OSD or confirm the selection. Press about 2 second to turn off the monitor

#### **Clear Vision**

- 1. When there is no OSD, Press the "<" button to activate Clear Vision.
- Use the "<" or ">" buttons to select between weak, medium, strong, or off settings. Default setting is always "off".

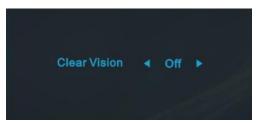

3. Press and hold "<" button for 5 seconds to activate the Clear Vision Demo, and a message of "Clear Vision Demo: on" will be display on the screen for a duration of 5 seconds. Press Menu or Exit button, the message will disappear. Press and hold "<" button for 5 seconds again, Clear Vision Demo will be off.</p>



Clear Vision function provides the best image viewing experience by converting low resolution and blurry images into clear and vivid images.

# **OSD Setting**

Basic and simple instruction on the control keys.

< 🔆 >	lma	<b>Z</b> Ige Setup	Co	olor Setup	e Boost	S OSD S	<b>b</b> Setup	PIP PIP Setting	× Extra	Exit
Contrast										
Brightness						Off				
Eco mode						Off				

- 1. Press the **MENU-button** to activate the OSD window.
- Press 
   or 
   to navigate through the functions. Once the desired function is highlighted, press the 
   to activate it. If there is a sub-menu, press 
   //▲/▼ to navigate through the sub-menu functions.
- 3. Press ◀ or ▶ to change the settings of the selected function. Press ▲ to exit. If you want to adjust any other function, repeat steps 2-3.
- 4. OSD lock function: When the OSD menu is closed, press and hold the "Down" key for about 10 seconds to lock or unlock the OSD menu.

#### Notes:

- 1. If the product has only one signal input, the item of "Input Select" is disabled.
- 2. If the product screen size is 4:3 or input signal resolution is native resolution, the item of "Image Ratio" is disabled.
- 3. One of Clear vision, DCR, Color Boost, and Picture Boost functions is activated; the other three functions are turned off accordingly.

### Luminance

< <u>•</u> >	I	mage Setup	Color Setup		e Boost	OSD S	ALC: NOT	PIP PIP Setting	X Extra	Exit
				DCR		Off				
				Overdrive		Off				

1 Press **MENU** (Menu) to display menu.

2 Press < or > to select (Luminance), and press **MENU** to enter.

3 Press  $\leq$  or > to select submenu.

4 Press  $\leq$  or > to adjust.

5 Press AUTO to exit.

	Contrast	0-100		Contrast from Digital-register.		
	Brightness	0-100		Backlight Adjustment		
		Standard		Standard Mode		
		Text	T	Text Mode		
		Internet	C	Internet Mode		
	Eco mode	Game 🧯		Game Mode		
		Movie	0	Movie Mode		
-0-		Sports	R	Sports Mode		
		Reading		Reading Mode		
		Uniformity		Uniformity Mode		
		Gamma1		Adjust to Gamma 1		
	Gamma	Gamma2		Adjust to Gamma 2		
		Gamma3		Adjust to Gamma 3		
		Off		Disable dynamic contrast ratio		
	DCR	On	DCR	Enable dynamic contrast ratio		
		Weak				
	OverDrive	Medium		Adjust the response time		
	OverDrive	Strong		Adjust the response time.		
		Off				

### Image Setup

	Color Setup	Picture Boost	OSD Setup	PIP PIP Setting	X Extra	Exit	Luminance
Clock	5		Position	50			
Phase	5		Position	50			
Sharpness	5						

1 Press **MENU** (Menu) to display menu.

2 Press < or > to select (Image Setup), and press **MENU** to enter.

3 Press  $\leq$  or > to select submenu.

4 Press  $\leq$  or > to adjust.

5 Press AUTO to exit.

Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise.
Sharpness	0-100	Adjust picture sharpness.
 H.Position	0-100	Adjust the horizontal position of the picture.
V.Position	0-100	Adjust the vertical position of the picture.

### **Color Setup**

<	Picture Boc	ost	OSD Setup	PIP PIP Setting	) Extra	Exit	Luminance	Image S	Setup
				_	50			Off	
DCB Mode	Off			-	50				
DCB Demo	Off			_	50				

1 Press **MENU** (Menu) to display menu.

- 2 Press  $\lt$  or > to select  $\checkmark$  (Color Setup), and press **MENU** to enter.
- 3 Press  $\leq$  or > to select submenu.
- 4 Press  $\leq$  or > to adjust.
- 5 Press AUTO to exit.

		Warm		Recall Warm Color Temperature from EEPROM.	
		Normal		Recall Normal Color Temperature from EEPROM.	
	Color Temp.	Cool		Recall Cool Color Temperature from EEPROM.	
		sRGB		Recall SRGB Color Temperature from EEPROM.	
		User		Recall User Color Temperature from EEPROM	
		Full Enhance	ON/OFF	Disable or Enable Full Enhance Mode.	
		Nature Skin	ON/OFF	Disable or Enable Nature Skin Mode.	
	DCB Mode	Green Field ON/OFF		Disable or Enable Green Field Mode.	
		Sky-blue	ON/OFF	Disable or Enable Sky-blue Mode.	
		AutoDetect	ON/OFF	Disable or Enable AutoDetect Mode.	
	DCB Demo	ON/OFF		Disable or Enable Demo.	
	Red		0-100	Red gain from Digital-register.	
	Green		0-100	Green gain from Digital-register.	
	Blue		0-100	Blue gain from Digital-register.	
		Multimedia			
		Internet			
	LowBlue Mode	Office		Decrease blue light wave by controlling color temperature.	
		Reading			
		Off			

### **Picture Boost**

lor Setup

1 Press **MENU** (Menu) to display menu.

- 2 Press < or > to select (Picture Boost), and press **MENU** to enter.
- 3 Press < or > to select submenu.
- 4 Press  $\leq$  or > to adjust.
- 5 Press AUTO to exit.

	Bright Frame	ON/OFF	Enable/Disable Bright Frame
	Frame Size	14-100	Adjust the Size of the Frame
	Brightness	0-100	Brightness Adjustment for Enhance Area
<b>N</b>	Contrast	0-100	Contrast Adjustment for Enhance Area
	H. position	0-100	Adjust the horizontal position of the Frame
	V. position	0-100	Adjust the vertical position of the Frame

#### Note:

Adjust the brightness, contrast, and position of the Bright Frame for better viewing experience.

### **OSD Setup**

< 😪 >	PIP PIP Setting	X Extra	Exit	- 🔆 - Luminance	Image Setup	Color Setup	Picture Boost
Language	< English	•	H. Position	_	50	Transparence	25

1 Press **MENU** (Menu) to display menu.

- 2 Press  $\lt$  or  $\gt$  to select (OSD Setup), and press **MENU** to enter.
- 3 Press < or > to select submenu.
- 4 Press  $\leq$  or > to adjust.
- 5 Press AUTO to exit.

Language		Select the OSD language
Timeout	5-120	Adjust the OSD timeout.
DP Capability	1.1/1.2	If the DP video content supports DP1.2, please select DP1.2 for DP Capability; otherwise, please select DP1.1.
H. Position	0-100	Adjust the horizontal position of the OSD.
V. Position	0-100	Adjust the vertical position of the OSD.
 USB charge	When no signal, USB cannot support USB charge	OFF
USB charge	When no signal, USB can support USB charge	ON
Transparence	0-100	Adjust the OSD
Break Reminder	ON/OFF	Break Reminder if the user continuely work for more than 1 hours

### **PIP Setting**

< PIP >	) Extra	Exit	Luminance	Image	Setup	Color Setup	Picture	Boost	S OSD S	setup
	Off									
									Off	

1 Press **MENU** (Menu) to display menu.

2 Press < or > to select PIP, and press **MENU** to enter.

3 Press < or > to select submenu.

4 Press  $\leq$  or > to adjust.

5 Press AUTO to exit.

	PIP	OFF / PIP / PBP / PBP 4WIN	OFF
	Main Source	Follow Input Select Content	D-SUB
	Sub Source 1	Follow Input Select Content	D-SUB
	Sub Source 1	Follow Input Select Content	D-SUB
PIP	Sub Source 1	Follow Input Select Content	D-SUB
	Size	Small, Middle, Large	Small
	Position	Right-Up, Right-Down, Left-Down, Left-Up,	Right-Up
	Audio	Main/Sub Source 1/Sub Source 2/Sub Source 3	Main
	Swap		

#### Extra

< 📉 >	E	Exit	Luminance	Image Setup	Color Setup	Picture Boost	OSD Setup	PIP PIP Setting
				DDC/CI				
Off Timer								

1 Press **MENU** (Menu) to display menu.

2 Press < or > to select × (Extra), and press **MENU** to enter.

3 Press  $\leq$  or > to select submenu.

4 Press  $\leq$  or > to adjust.

5 Press AUTO to exit.

		Auto	Auto Detect input signal	
		D-SUB	Select D-SUB signal source as input	
	Innut Coloct	HDMI1	Select HDMI1 signal source as input	
	Input Select	HDMI2	Select HDMI2 signal source as input	
		DP1	Select DP1 signal Source as input	
		DP2	Select DP2 signal Source as input	
31	Auto Config.	Yes / No	Auto adjust.the picture to default.	
	Off Timer	0-24 hrs	Select DC off time.	
		Wide	16:9 or 16:10	
		4:3	4:3 or 5:4	
	Image Ratio	1:1	Native resolution	
		Movie 1	over scan: Top 9% ; Down 9%	
		Movie 2	over scan: Top 9% ; Down 17%.	
	DDC/CI	Yes / No	Turn on or off DDC/CI Support.	
	Reset	Yes / No	Reset the menu to default.	

Notes:

- 1. If the DP video content supports DP1.2, please select DP1.2 for DP Capability; otherwise, please select DP1.1.
- 2. movie1 and movie2 only support digital source.
- 3. Image Ratio and PIP/PBP can be only one.
- 4. movie1 and movie2 only support Video Timing(example:480I,480P,576I,576P,720P,1080i,1080P)

Exit								
< 🎦	>	Luminance	Image Setup	Color Setup	Picture Boost	OSD Setup	PIP PIP Setting	) Extra

1 Press **MENU** (Menu) to display menu.

2 Press < or > to select (Exit), and press **MENU** to enter.

3 Press **AUTO** to exit.

# **LED Indicator**


Status	LED Color
Full Power Mode	White
Power Saving	Blinking white

# Driver

## **Monitor Driver**


### Windows 10

- Start Windows® 10
- Right click START.
- Click "Control Panel".

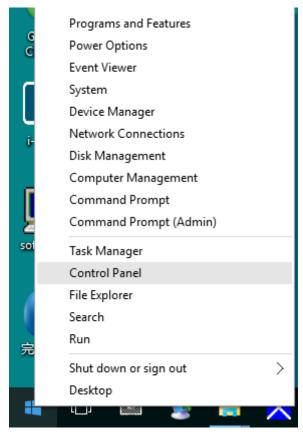

Click on the "Display" icon.

٠

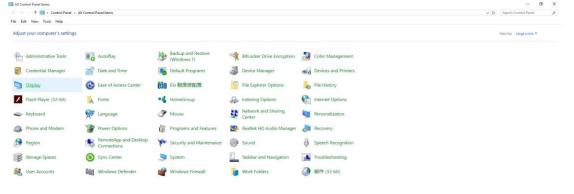

Click on th	he " <mark>Chan</mark>	de displa	<mark>ly settings</mark> "	button
Onor on ti	<b>Onu</b>	ige disple	iy settings	Dutton

٠

🛄 Display	-	×
← → · ↑  □ · Control	Panel > All Control Panel Items > Display v 🖉 Search Control Panel	P
File Edit View Tools Help	1	_
Control Panel Home	Change size of items	?
Adjust resolution Calibrate color	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays.	
<u>Change display settings</u> Adjust ClearType text	Change only the text size	
	Instead of changing the size of everything on the desktop, change only the text size for a specific item.           Title bars         9         □         Bold	
	Apply	
See also Personalization		
Devices and Printers		

### Click the "Advanced Settings" button.

Screen Resolution				-	×
← → ~ ↑ 🛄 > Control Pane File Edit View Tools Help	el → All Control Pa	nel Items » Display » Screen Resoluti	ion v ඊ	Search Control Panel	Q
	Change the	appearance of your display	Detect		
	Display: Resolution:	1. B24 ~ 1920 × 1080 (Recommended) ~			
	Orientation:	Landscape V	Advanced setting		
		ther items larger or smaller tings should I choose?			
			OK Cancel Apply		

• Click the "Monitor" tab and then click the "Properties" button.



Click the "Driver" tab.

٠


Generic PnP Monitor Proper	ties	X
General Driver Details		
Generic PnP Mo	nitor	
Driver Provider:	Microsoft	
Driver Date:	6/21/2006	
Driver Version:	6.1.7600.16385	
Digital Signer:	Microsoft Windows	
Driver Details	To view details about the driver files.	
Update Driver	To update the driver software for this device.	
Roll Back Driver	If the device fails after updating the driver, roll be to the previously installed driver.	ack
Disable	Disables the selected device.	
Uninstall	To uninstall the driver (Advanced).	
	OK Can	cel

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... "and then


click the "Browse my computer for driver software" button.

<b>→</b>	Search automatically for updated driver software Windows will search your computer and the Internet for the latest driver	
	software for your device, unless you've disabled this feature in your device installation settings.	
*	Browse my computer for driver software Locate and install driver software manually.	

Select "Let me pick from a list of device drivers on my computer".

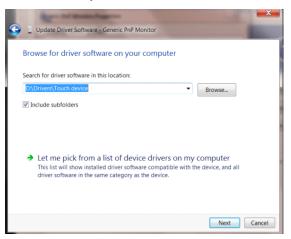

• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

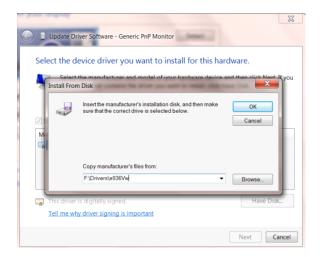

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk

drive.

•

- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

### Windows 8

- Start Windows® 8
- Right click and click **All apps** at the bottom-right of the screen.



- Click on the "Control Panel" icon
- Set the "View by" to "Large icons" or "Small icons".

		All Control Pane	i Items		- 0
🕘 🐘 🕈 🦉 ד Control Panel 🛛	All Control Panel Items			v 6 Se	earch Control Panel
djust your computer's setting	5			View	w by: Large icons *
Action Center	Administrative Tools	AutoPlay	RitLocker Drive Encryption	Color Management	Category     Large icons     Small icons
Credential Manager	Date and Time	Default Programs	🍶 Device Manager	Devices and Printers	
Display	🚱 Ease of Access Center	🚯 Family Safety	File History	Flash Player (32-bit)	
Folder Options	🗼 Fonts	🦓 HomeGroup	lndexing Options	nternet Options	
Keyboard	👷 Language	Docation Settings	I Mouse	Network and Sharing Center	
Notification Area Icons	NVIDIA Control Panel	Performance Information and Tools	Personalization	Phone and Modem	
Power Options	Programs and Features	Recovery	Region	RemoteApp and Desktop Connections	
Sound	Speech Recognition	Storage Spaces	Sync Center	🎉 System	
Taskbar	Troubleshooting	Ser Accounts	😻 Windows 7 File Recovery	Windows Defender	
Windows Firewall	Windows Update				

e 📋 📴	12:16 PM 12/25/2012

Click on the "Display" icon.

•

•

Action Center	C Administrative Tools	AutoPlay	Backup and Restore	
Color Management	Credential Manager	Date and Time	🕐 Default Programs	
Desktop Gadgets	Jevice Manager	we Devices and Printers	💐 Display	
Ease of Access Center	Polder Options	A Fonts	Getting Started	
	A Indexing Options	C Internet Options	- Keyboard	
Location and Other Sensors	J Mouse	E Network and Sharing Center	Notification Area Icons	
NVIDIA Control Panel	MVIDIA PhysX	🍓 Parental Controls	/ Pen and Touch	
Performance Information and Tools	Sersonalization	4 Phone and Modern	Power Options	
Programs and Features	Realtek HD Audio Manager	📽 Recovery	Region and Language	
RemoteApp and Desktop Connections	Sound .	Ø Speech Recognition	Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu.	Troubleshooting	
User Accounts	🗸 Windows Anytime Upgrade	Windows CardSpace	Re Windows Defender	
Windows Firewall	R Windows Update			


Click on the "Change display settings" button.

Control Panel	All Control Panel Items      Display		Search Control Panel
Control Panel Home Adjust resolution Calibrate color	Make it easier to read what's or You can change the size of text and othe temporarily enlarge just part of the scree	items on your screen by choosing one of these options. To	
Change display settings Adjust ClearType text	Smaller - 100%	Préview	
Set custom text size (DPI)	Medium - 125% (default)		
	Carger - 150%		
		Арру	
See also			
Personalization Devices and Printers			

• Click the "Advanced Settings" button.

😋 🌍 = 🔍 + Control Panel + All Control Panel Ite	ns       Display     Screen Resolution	- + Search Control Panel
	Change the appearance of your display	
	Draplay: L. Neidau Defaut Ha Panel    Resolution: 1920 = 1980 (recommended)     Orientation: Landicape     Advanced actings    Mate toot and other. Heres larger or wratter   What display settings hould I choose?	
	OK Cancel Apply	

Click the "Monitor" tab and then click the "Properties" button.

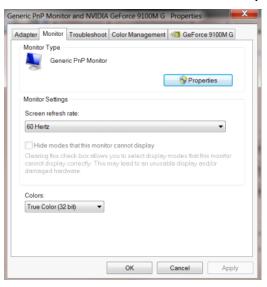


• Click the "Driver" tab.

•


Generic PnP Monitor Properties					
General	General Driver Details				
	Generic PnP Mor	nitor			
	Driver Provider:	Microsoft			
	Driver Date:	6/21/2006			
	Driver Version:	6.1.7600.16385			
	Digital Signer:	Microsoft Windows			
Driv	ver Details	To view details about the driver files.			
Update Driver		To update the driver software for this device.			
Roll I	Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.			
[	Disable	Disables the selected device.			
ι	Jninstall	To uninstall the driver (Advanced).			
		OK Cancel			

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver..." and

then click the "Browse my computer for driver software" button.

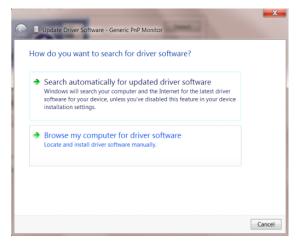

• Select "Let me pick from a list of device drivers on my computer".

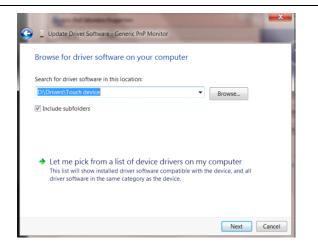

• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

	Coloct	evice driver you want to install for this har	
<ul> <li>✓</li> <li>✓</li></ul>	Install From	In DISK Insert the manufacturer's installation disk, and then make sure that the correct drive is selected below.	OK Cancel
		Copy manufacturer's files from: F:\Drivers\e936Vw  -	Browse


- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk

drive.

- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

#### Windows 7

- Start Windows® 7
- Click on the "Start" button and then click on "Control Panel".

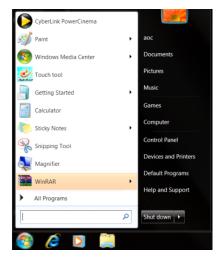

• Click on the "Display" icon.

Action Center	Administrative Tools	AutoPlay	He Backup and Restore	
	Credential Manager	a Date and Time	Default Programs	
	J Device Manager	ma Devices and Printers	Display	
Ease of Access Center	E Folder Options	Fonts	Getting Started	
HomeGroup	A Indexing Options	C Internet Options	<ul> <li>Keyboard</li> </ul>	
Location and Other Sensors	I Mouse	Stewark and Sharing Center	Notification Area Icons	
NVIDIA Control Panel	MVIDIA PhysX	🍂 Parental Controls	/ Pen and Touch	
Performance Information and Tools	Personalization	Phone and Modern	Power Options	
Programs and Features	Prealtek HD Audio Manager	📽 Recovery	Segion and Language	
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting	
User Accounts	🕵 Windows Anytime Upgrade	Windows CardSpace	Net Windows Defender	
Windows Firewall	💐 Windows Update			


• Click on the "Change display settings" button.

Control Near Hone Agent mission Control Near Allies Control Media Control Control Near Control Near Allies Control Near Alli				
Control foreiron     Make it exacts for a control what's on your screen!       Advant mexicinal     Make it exacts for a torbit ensem on your screen!       Control control what's on your screen!     Make it exacts for a torbit ensem on your screen!       Control control what's on your screen!     Make it exacts for a torbit ensem on your screen!       Stream on the transmitter in the screen, use the flagstifter tool.     Image: Torbit ensemptifier in the screen, use the flagstifter tool.       Stream on the transmitter in the screen, use the flagstifter tool.     Image: Torbit ensemptifier in the screen, use the flagstifter tool.       Stream on the transmitter in the screen, use the flagstifter tool.     Image: Torbit ensemptifier in the screen, use the flagstifter tool.       Stream on the transmitter in the screen, use the flagstifter tool.     Image: Torbit ensemptifier in the screen, use the flagstifter tool.       Stream on the transmitter in the screen, use the flagstifter tool.     Image: Torbit ensemptifier in the screen, use the flagstifter tool.       Stream on the transmitter in the screen, use the flagstifter tool.     Image: Torbit ensemptifier in the screen, use the flagstifter tool.       Stream on the screen, use the flagstifter tool.     Image: Torbit ensemptifier in the screen, use the flagstifter tool.       Stream on the screen on the sc	Control Panel I	All Control Panel Items      Display		
Set custom text set (2010)	Adjust resolution Calibrate color Change display settings	You can change the size of text and othe temporarily enlarge just part of the scree	r items on your screen by choosing one of these options. To rn, use the <u>Magnifier</u> tool.	·
See allo Personalization				
Personalization			Apply	
Personalization				
	See also			
	Personalization Devices and Printers			

• Click the "Advanced Settings" button.

Ca So - Control Panel + All Control Panel Its	ma & Dirolau & Eccaro Baschellan	Search Centrol Panel     P
	Change the appearance of your display	•)41 ann constraint
	OK Careet Apply	

Click the **"Monitor"** tab and then click the **"Properties"** button.

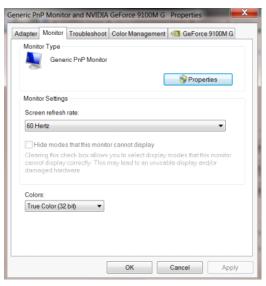

Click the "Driver" tab.


٠

•


Seneric PnP Monitor Properties				
General Driver Details				
Generic PnP Mo	nitor			
Driver Provider:	Microsoft			
Driver Date:	6/21/2006			
Driver Version:	6.1.7600.16385			
Digital Signer:	Microsoft Windows			
Driver Details	To view details about the driver files.			
Update Driver	To update the driver software for this device.			
Roll Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.			
Disable	Disables the selected device.			
Uninstall	To uninstall the driver (Advanced).			
	OK Cancel			

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... " and

then click the "Browse my computer for driver software" button.

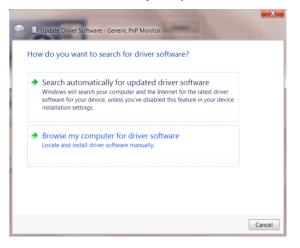


Select "Let me pick from a list of device drivers on my computer".

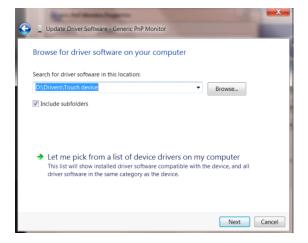

•

• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

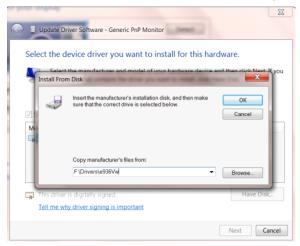

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

### i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

i-Menu	Lumi	nance	98
		×	
🕕 Contrast γ Gamma 📴 DCR	0 37 ∢ Gamma 1 ▶	🔆 Brightness '∲ Eco Mode	0 36 ∢ ♥ ▶
	/10	C	\$

### e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC statuses, you may choose the desired time (in minutes) from the pull-down menu for your monitor to automatically shutdown. The example below illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.




You can click "RESET" to set the e-Saver to its default settings like below.



### Screen+



Welcome to "Screen+" software by AOC. Screen+ software is a desktop screen splitting tool; it splits the desktop into different panels, and each panel displays a different window. You only need to drag the window to a corresponding panel when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it.

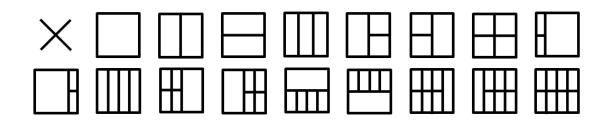

## Troubleshoot

Problem & Question	Possible Solutions		
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.		
No images on the screen	<ul> <li>Is the power cord connected properly? Check the power cord connection and power supply.</li> <li>Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection.</li> <li>* DVI input is not available on every model.</li> <li>If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen. If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/2000) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer.</li> <li>Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Adjust the maximum resolution and frequency that the monitor can handle properly.</li> <li>Make sure the AOC Monitor Drivers are installed.</li> </ul>		
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back.		
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	from the monitor as possible.		

Monitor Is Stuck In Active Off-Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.	
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.	
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).	
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.	
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME shut-down mode to adjust CLOCK and PHASE. Press to auto-adjust.	

# **Specification**


### **General Specification**

	Model name	U4308V		
	Driving system	TFT Color LCD		
	Viewable Image Size	108cm diagonal		
Panel	Pixel pitch	0.2451(H)mm x 0.2451(V)mm		
	Video	R, G, B Analog Interface & Digital Interface		
	Separate Sync.	H/V TTL		
	Display Color	1.07B Colors		
	Harizantal approximate	30k-99kHz(D-SUB)		
	Horizontal scan range	30k-160kHz(HDMI、DP)		
	Horizontal scan Size(Maximum)	941.184 mm		
	Vertical scan range	23Hz ~ 75Hz		
	Vertical scan Size(Maximum)	529.416 mm		
	Optimal preset resolution	1920x1080@60Hz(D-SUB)		
Others		3840x2160@60Hz(HDMI、DP)		
	Plug & Play	VESA DDC2B/CI		
	Speaker	7W x 2		
	Power Source	100-240V AC, 50/60Hz,2.5A		
		Typical (Brightness = 70,Contrast = 50) 70V		
	Power Consumption	Max (Brightness = 100,Contrast = 100) ≤145W		
		Power saving ≤0.5W		
	Off timer	0-24 hrs		
Physical	Connector Type	VGA\HDMI\ DP\ Line in\Earphone out\ USB		
Characteristics	Signal Cable Type	Detachable		
	Temperature:			
	Operating	0° to 40°C		
	Non-Operating	-25° to 55°C		
	Humidity:			
Environmental	Operating	10% to 85% (non-condensing)		
	Non-Operating	5% to 93% (non-condensing)		
	Altitude:			
	Operating	0~ 5000m(0~ 16404 ft)		
	Non-Operating	0~ 12192m (0~ 40000 ft )		

### Preset Display Modes

Standard	Resolution	H. Frequency (kHz)	V. Frequency (Hz)
VGA	640x480@60Hz	31.469	59.94
VGA	640x480@67Hz	35	66.667
VGA	640x480@72Hz	37.861	72.809
VGA	640x480@75Hz	37.5	75
DOS MODE	720x400@70Hz	31.469	70.087
SVGA	800x600@56Hz	35.156	56.25
SVGA	800x600@60Hz	37.879	60.317
SVGA	800x600@72Hz	48.077	72.188
SVGA	800x600@75Hz	46.875	75
MAC MODE	832x624@75Hz	49.725	74.551
XGA	1024x768@60Hz	48.363	60.004
XGA	1024x768@70Hz	56.476	70.069
XGA	1024x768@75Hz	60.023	75.029
SXGA	1280x1024@60Hz	63.981	60.02
SXGA	1280x1024@75Hz	79.976	75.025
WXGA+	1440x900@60Hz	55.935	59.887
WSXGA	1680x1050@60Hz	64.674	59.954
FHD	1920x1080@60Hz	67.5	60
HD	1280x960@60 Hz	60	60
HD	1280x720@60 Hz	44.772	59.885
QHD	2560x1440@60Hz	88.786	59.9
UHD	3840X2160@30Hz	67.5	30
UHD	3840X2160@60Hz	133.32	60

### **Pin Assignments**

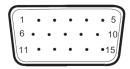


#### 15-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	Video-Red	9	+5V
2	Video-Green	10	Ground
3	Video-Blue	11	N.C.
4	N.C.	12	DDC-Serial data
5	Detect Cable	13	H-sync
6	GND-R	14	V-sync
7	GND-G	15	DDC-Serial clock
8	GND-B		



 Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2+	11	TMDS Clock Shield
2	TMDS Data 2 Shield	12	TMDS Clock
3	TMDS Data 2	13	CEC
4	TMDS Data 1+	14	Reserved (N.C. on device
5	TMDS Data 1Shield	15	SCL
6	TMDS Data 1	16	SDA
7	TMDS Data 0+	17	DDC/CEC Ground
8	TMDS Data 0 Shield	18	+5V Power
9	TMDS Data 0	19	Hot Plug Detect
10	TMDS Clock +		



#### 20-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	Hot Plug Detect
9	ML_Lane 1 (p)	19	Return DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

### **Plug and Play**

#### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

## Regulation

### **FCC Notice**

#### FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

#### NOTICE:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

### **WEEE Declaration**

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### **WEEE Declaration for India**



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste equipment for recycling in India, please visit the below web link.

www.aocindia.com/ewaste.php.

### **RoHS Declaration for India**

his product complies with all implemented RoHS type regulations worldwide, including but not limited to, EU, Korea, Japan, US States (e.g. California), Ukraine, Serbia, Turkey, Vietnam and India.

We continue to monitor, influence and develop our processes to comply with upcoming proposed RoHS type regulations, including but not limited to, Brazil, Argentina, Canada.

#### **Restriction on Hazardous Substances statement (India)**

This product complies with the "India E-waste Rule" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

### **EPA Energy Star**



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) BV and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency. (FOR EPA CERTIFIED MODELS)

## Service

### Warranty Statement for Europe

#### LIMITED THREE-YEAR WARRANTY\*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section on <u>www.aoc-europe.com</u> for the warranty instructions in your country. The freight cost for the warranty is pre-paid by AOC for the delivery and return. Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to
  protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

#### \* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquake and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified or Authorized Service Center will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <a href="http://www.aoc-europe.com">http://www.aoc-europe.com</a>

### Warranty Statement for Middle East and Africa (MEA)

#### And

### The Commonwealth of Independent States (CIS)

#### LIMITED ONE to THREE YEARS WARRANTY\*

For AOC LCD Monitors sold within the Middle East and Africa (MEA) and the Commonwealth of Independent States (CIS), AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of One (1) to Three (3) years from the manufacture date depending on sale country. During this period, AOC International (Europe) B.V. offers a Carry-In (return to Service Center) Warranty Support at an AOC's Authorized Service Center or Dealer and at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. As a Standard Policy, the warranty will be calculated from the manufacture date identified from the product ID serial number, but the total warranty will be Fifteen (15) months to Thirty Nine (39) months from MFD (manufacture date) depending on sale country. Warranty will be considered for exceptional cases that are out of warranty as per the product ID serial number and for such exceptional cases; Original Invoice/Proof Of Purchase Receipt is mandatory.

If the product appears to be defective, please contact your AOC authorized dealer or refer to the service and support section on AOC's website for the warranty instructions in your country:

- Egypt: <u>http://aocmonitorap.com/egypt\_eng</u>
- CIS Central Asia: <u>http://aocmonitorap.com/ciscentral</u>
- Middle East: <u>http://aocmonitorap.com/middleeast</u>
- South Africa: <u>http://aocmonitorap.com/southafrica</u>
- Saudi Arabia: <u>http://aocmonitorap.com/saudiarabia</u>

Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Authorized Service Center or Dealer under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

#### \* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source

- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquakes and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified, Authorized Service Center or dealer will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF ONE (1) to THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <a href="http://www.aocmonitorap.com">http://www.aocmonitorap.com</a>



### AOC International (Europe) B.V.

Prins Bernhardplein 200 / 6th floor, Amsterdam, The Netherlands Tel: +31 (0)20 504 6962 • Fax: +31 (0)20 5046933


## AOC Pixel Policy ISO 9241-307 Class 1

July 25th, 2013

AOC strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but AOC guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This Pixel Policy explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels.

#### **Pixels and Sub Pixel Definition**

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. When all sub pixels of pixel are lit, the three colored sub pixel together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel.

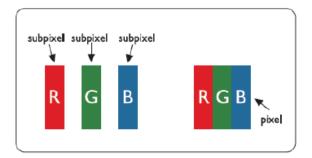

#### **Types of Pixel Defects**

- Bright Dot Defects: the monitor displays a dark pattern, sub pixels or pixels are always lit or "on"
- Black Dot Defects: the monitor displays a light pattern, sub pixels or pixels are always dark or "off".

ISO 9241-307	Defect Type 1	Defect Type 2	Defect Type 3	Defect Type 4 Black
Pixel Defect Class	Bright Pixel	Black Pixel	Bright Sub pixel	Sub pixel
			2	+ 1
Class 1	1	1	1	+ 3
			0	+ 5

AOC International (Europe) B.V.

#### Warranty Statement for North & South America (excluding Brazil)

WARRANTY STATEMENT

for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as \*stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

\* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- \* Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/find\_service\_center ARGENTINA: http://ar.aoc.com/support/find\_service\_center BOLIVIA: http://bo.aoc.com/support/find\_service\_center CHILE: http://cl.aoc.com/support/find\_service\_center **COLOMBIA:** http://co.aoc.com/support/find\_service\_center COSTA RICA: http://cr.aoc.com/support/find\_service\_center DOMINICAN REPUBLIC: http://do.aoc.com/support/find\_service\_center ECUADOR: http://ec.aoc.com/support/find\_service\_center EL SALVADOR: http://sv.aoc.com/support/find\_service\_center GUATEMALA: http://gt.aoc.com/support/find\_service\_center HONDURAS: http://hn.aoc.com/support/find\_service\_center NICARAGUA: http://ni.aoc.com/support/find\_service\_center PANAMA: http://pa.aoc.com/support/find\_service\_center PARAGUAY: http://py.aoc.com/support/find\_service\_center PERU: http://pe.aoc.com/support/find\_service\_center URUGUAY: http://pe.aoc.com/support/find\_service\_center VENEZUELA: http://ve.aoc.com/support/find\_service\_center IF COUNTRY NOT LISTED: http://latin.aoc.com/support/find\_service\_center

### EASE PROGRAME



Only for AOC branded monitors sold within the continental United States.

All AOC branded monitors are now covered by the EASE Program. If your monitor malfunctions at any time during the first three months, AOC will provide a replacement monitor within 72 hours after you are approved for our program. If your monitor qualifies for the EASE program, AOC will pay for freight both

ways.

Step 1: Phone our TECH Department at 888.662.9888.

Step 2: Fill out and return EASE registration forms by mail or fax.

Step 3: We will issue a Return Authorization Number upon verification into the program.

Step 4: A monitor will be advance shipped to your location.

Step 5: We will issue a UPS Call Tag to pick up the defective unit.

Step 6: Please review the following chart to see your EASE program qualifications.

WARRANTY	COVERAGE AT	CUSTOMER
PERIOD	NO CHARGE	CHARGES
Within the first three months of	- New AOC monitor - Call tag	- None*
purchase: Covered by EASE	dispatched and return freight	
	charges via UPS	
Between 4 months – 1 Year	- All Parts & Labor Including CRT	- UPS Return Freight to AOC
	Tube & LCD Panel	
Between 1 Year - 3 Years: Covered	- Parts & Labor (excluding CRT	- UPS Return Freight to AOC
by standard limited warranty	Tube & LCD Panel)	

\*AOC will need to obtain a credit card number if you would like to get a new AOC monitor advanced shipped to your location, prior to the defective unit arriving at AOC's service center. If you do not wish to supply a credit card, AOC will only ship the new monitor, once the defective unit arrives at the AOC service center.



### **TCO DOCUMENT**



#### Congratulations!

#### This product is TCO Certified – for Sustainable IT



TCO Certified is an international third party sustainability certification for IT products. TCO Certified ensures that the manufacture, use and recycling of IT products reflect environmental, social and economic responsibility. Every TCO Certified product model is verified by an accredited independent test laboratory.

This product has been verified to meet all the criteria in TCO Certified, including:

Corporate Social Responsibility Socially responsible production - working conditions and labor law in manufacturing country Energy Efficiency Energy efficiency of product and power supply. Energy Star compliant, where applicable Environmental Management System Manufacturer must be certified according to either ISO 14001 or EMAS Minimization of Hazardous Substances Limits on cadmium, mercury, lead & hexavalent chromium including requirements for mercury-free products, halogenated substances and hazardous flame retardants Design for Recycling Coding of plastics for easy recycling. Limit on the number of different plastics used. Product Lifetime, Product Take Back Minimum one-year product warranty. Minimum three-year availability of spare parts. Product takeback Packaging Limits on hazardous substances in product packaging. Packaging prepared for recycling Ergonomic, User-centered design Visual ergonomics in products with a display. Adjustability for user comfort (displays, headsets) Acoustic performance - protection against sound spikes (headsets) and fan noise (projectors, computers) Ergonomically designed keyboard (notebooks) Electrical Safety, minimal electro-magnetic Emissions Third Party Testing All certified product models have been tested in an independent, accredited laboratory.

A detailed criteria set is available for download at <u>www.tcodevelopment.com</u>, where you can also find a searchable database of all TCO Certified IT products.

TCO Development, the organization behind TCO Certified, has been an international driver in the field of Sustainable IT for 20 years. Criteria in TCO Certified are developed in collaboration with scientists, experts, users and manufacturers. Organizations around the world rely on TCO Certified as a tool to help them reach their sustainable IT goals. We are owned by TCO, a non-profit organization representing office workers. TCO Development is headquartered in Stockholm, Sweden, with regional presence in North America and Asia.

For more information, please visit www.tcodevelopment.com

(FOR TCO CERTIFIED MODELS)