ЛОС

LCD Monitor User Manual 60S / 60P (LED Backlight)

Safety	4
National Conventions	4
Power	5
Installation	6
Cleaning	7
Other	8
Setup	9
Contents of the Box	9
Setup Stand & Base	10
Adjusting Viewing Angle	12
Connecting the Monitor	14
Wall Mounting	16
Adjusting	17
Setting Optimal Resolution	17
Windows 10	
Windows 8	19
Windows 7	
Hotkeys	23
OSD Setting	
Luminance	
Color Setup	
Picture Boost	
OSD Setup	
Extra	
Exit	
LED Indicator	
Driver	
Monitor Driver	
Windows 10	
Windows 10	
Windows 8	
i-Menu	
e-Saver	
Screen+	
Troubleshoot	
Specification	
General Specification	
Preset Display Modes	
Pin Assignments	
Plug and Play	
Regulation	
WEEE Declaration	
Reduction in the use of hazardous substances (India)	
E-Waste Declaration for India	71

EPA Energy Star	72
TCO DOCUMENT	73
EPEAT Declaration	.74
AOC Pixel Policy ISO 9241-307 Class 1	.79
Warranty Statement for North & South America (excluding Brazil)	80

Safety

National Conventions

The following subsections describe notational conventions used in this document.

Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V ~, Min. 5A

A The wall socket shall be installed near the equipment and shall be easily accessible.

For use only with the attached power adapter (Output 12Vdc) which have UL,CSA listed license (Only for monitors with power adapter).

Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.


Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Do not place the front of the product on the floor.

If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

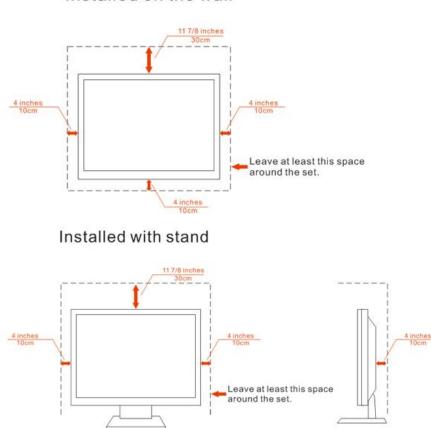


Installed on the wall

Cleaning


Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

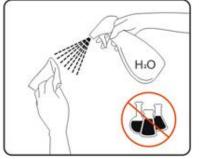



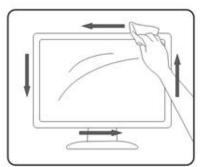

Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.


Amake sure that the ventilating openings are not blocked by a table or curtain.

LOD not engage the LCD monitor in severe vibration or high impact conditions during operation.

L Do not knock or drop the monitor during operation or transportation.

Setup


Contents of the Box

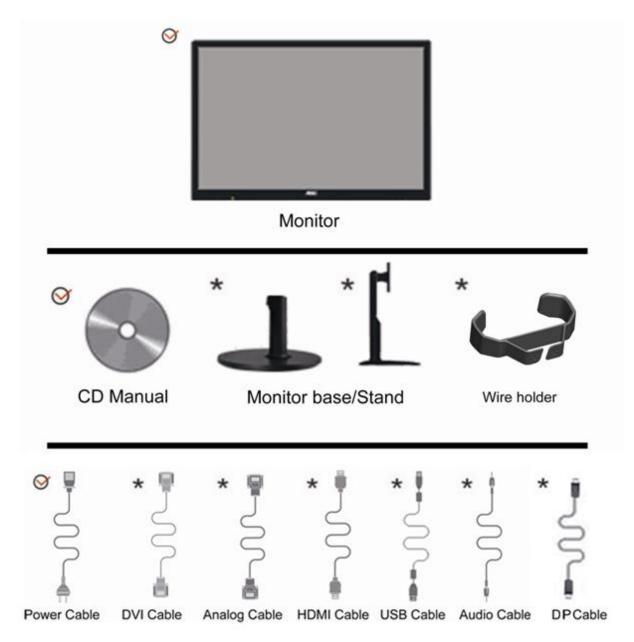

*Not all signal cables (Analog , Audio, DVI,USB 、 DP and HDMI cables) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.

Setup Stand & Base

Please setup or remove the base following the steps as below. 1>.Setup:

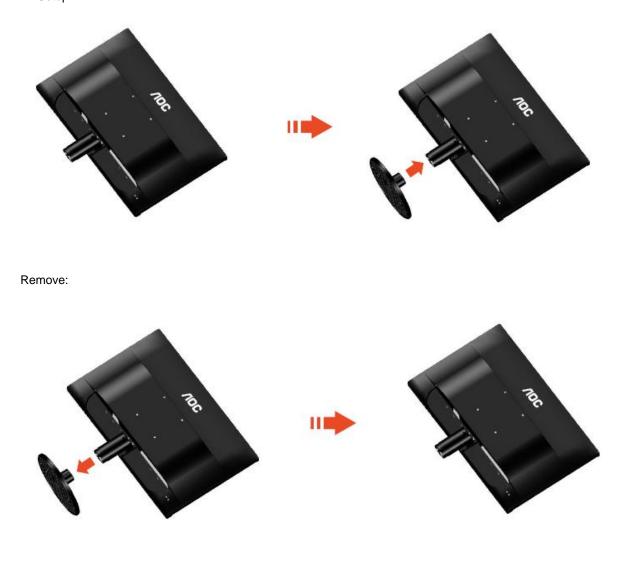





Remove:




Adjusting Viewing Angle


For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

1> You are able to adjust the monitor's angle from -5° to 22 °.

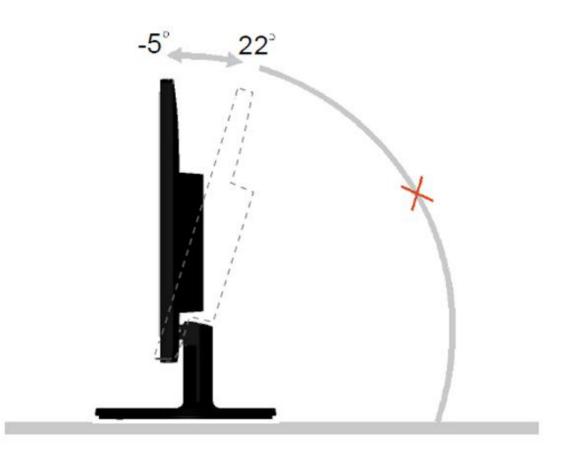


2> You are able to adjust the monitor's angle from -5° to 22 °.

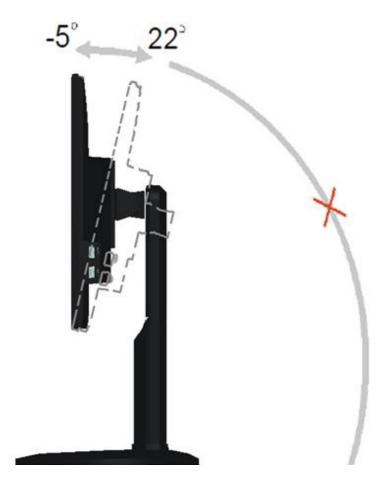


Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.

Connecting the Monitor

Cable Connections In Back of Monitor and Computer:

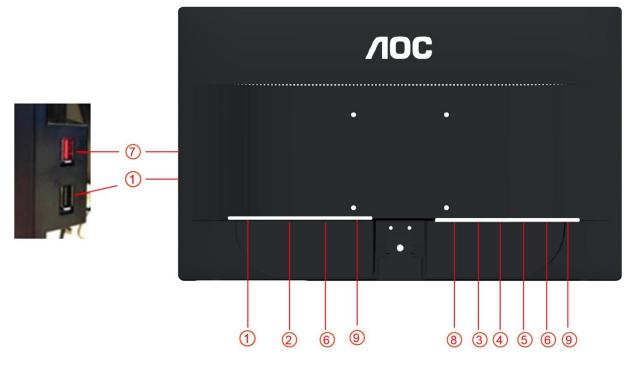

E2060SL

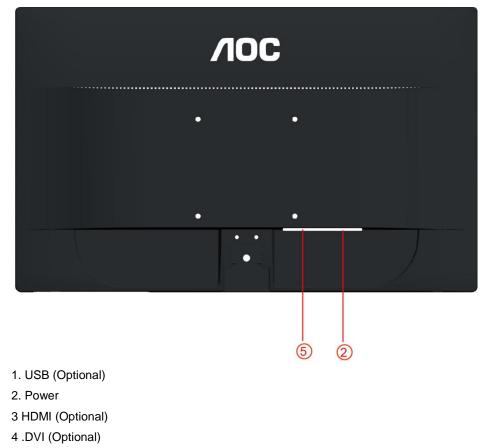

- 5. Analog (DB-15 VGA cable)
- 6. Line in (Optional)

7. USB fast charging port (Optional)

8. Display port (Optional)

9. Earphone out(Optional)

To protect equipment, always turn off the PC and LCD monitor before connecting.

1.Connect the power cable to the AC port on the back of the monitor.

2.Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.

3.(Optional –Requires a video card with DVI port)Connect one end of the DVI cable to the back of the monitor and connect the other end to the computer"s DVI port.

4.(Optional – Requires a video card with HDMI port) - Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.

5. (Optional – Requires a video card with DP port) - Connect one end of the DP cable to the back of the monitor and connect the other end to the computer's DP port.

6. (Optional)Connect the audio cable to audio in port on the back of the monitor

7 .Turn on your monitor and computer.

8. USB fast charging port (Optional).

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

Wall Mounting

Preparing to Install An Optional Wall Mounting Arm.



This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

- 1 Remove the base.
- 2 Follow the manufacturer's instructions to assemble the wall mounting arm.
- 3 Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.
- 4 Insert the 4 screws into the holes and tighten.
- 5 Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted : VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.


Adjusting

Setting Optimal Resolution

Windows 10


For Windows 10:

- Right click START.
- Click "CONTROL PANEL".

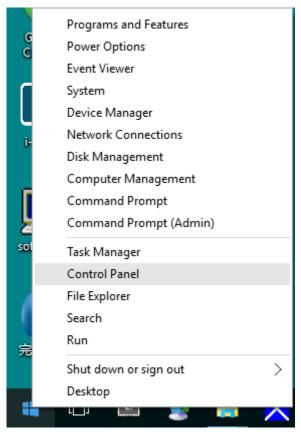

Click "DISPLAY".

٠

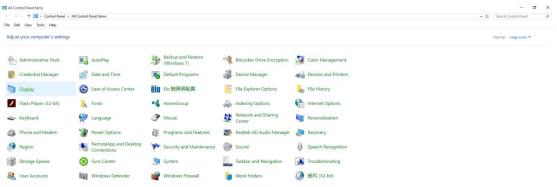

Click on the "Change display settings" button.

💷 Display		-	×
← → × ↑ 🚍 > Contr	ol Panel > All Control Panel Items > Display 🗸 🗟	Search Control Panel	P
File Edit View Tools He	lp		
Control Panel Home	Change size of items		?
Adjust resolution Calibrate color	To change the size of text, apps, and other items, <u>use these display settings</u> . If you want to temporarily enlarge a portion of your screen, use <u>Magnifier</u> . If neither of these makes the changes you want, you can <u>set a custom</u> <u>scaling level</u> (not recommended). Setting custom levels can lead to unexpected behavior on some displays.		
Change display settings Adjust ClearType text	Change only the text size Instead of changing the size of everything on the desktop, change only the text size for a specific item.		
	Title bars V 9 V Bold		
	Apply		
See also			
Personalization Devices and Printers			

• Set the resolution **SLIDE-BAR** to Optimal preset resolution.

Screen Resolution					
🚽 🔶 🔺 🗖 > Control	I Panel → All Control Pa	nel Items > Display > Screen Resolution	ڻ ~	Search Control Panel	م
e Edit View Tools Help	þ				
	Change the	appearance of your display			
		1	Detect Identify		
	Display: Resolution:	1. 824 ~ 1920 × 1080 (Recommended) ~			
	Orientation:	Landscape \vee	Advanced settings		
		ther items larger or smaller ttings should I choose?			
			OK Cancel Apply		

Windows 8

For Windows 8:

• Right click and click **All apps** at the bottom-right of the screen.



Apps				
ing Bing	Reader		WordPad	Computer
Galendar	skyCrive	Calculator	XPS Viewer	Control Panel
Camera	Sports	Character Map		Default Programs
Desitop	Store 58	Math Input Panel	Magnifier	The Explorer
Finance	Travel	Motepad	Savator	Help and Support
Games	Wideo	and Paint	On-Screen Keyboard	Run 🔁
internet Explorer	Weather	Remote Desitop Connection	Windows Speech Recognition	Insk Manager
Mai		Shipping Tool		Windows Defender
🔛 Maps		Sound Recorder	GPUNIew	S Windows Lay Tansfer
Messaging		Steps Recorder	GPUNiew Help	Windows Easy Transfer Reports
n Music		Sticky Notes	Windows Performance	Windows PowerShell
E News		Windows Fax and Scan	Windows Performance	
People		Windows Journal		
Photos		Windows Media Player	Command Prompt	

- Set the "View by" to "Category".
- Click "Appearance and Personalization".



Click "DISPLAY".

٠

5	Appearance and Personalization		-	×
🛞 🌛 🍷 🕈 😼 > Control Panel > A	Appearance and Personalization >	~ C	Search Control Panel	Q
Control Panel Home System and Security Network and Internet Hardware and Sound Programs User Accounts and Family Safety Clock, Language, and Region Ease of Access	Personalization Change the theme Change desktop background Change the color of your taskbar and window borders Change sound effects Change screen saver Display Make text and other items larger or smaller Adjust screen resolution Taskbar Customize icons on the taskbar Ease of Access Center Access Center Accommodate low vision Use screen reader Turn on easy access keys Turn High Contrast on or off Folder Options Specify single- or double-click to open Show hidden files and folders Fonts Preview, delete, or show and hide fonts Change Font Settings Adjust ClearType text			


Set the resolution SLIDE-BAR to Optimal preset resolution

	Screen Resolution			-	
(⊕) → ↑ ■ + Control Panel + Appearance and Personalization	tion + Display + Screen Resolution		v ¢	Search Control Panel	Q
Change th	appearance of your display				
	1	Detect Identify			
Display: Resolution:	1. PLX2780H v 1920 × 1080 (Recommended) v	1			
Orientation: Make text and	and a second	Advanced settings			
What display	etting	OK Cancel Apply			
	1024 × 768 Low				
		-			

Windows 7

For Windows 7:

- Click START.
- Click "CONTROL PANEL".

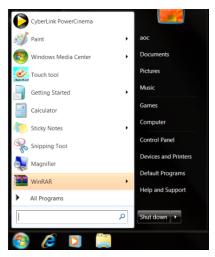


• Click "Appearance".


Action Center	C Administrative Tools	AutoPlay	Backup and Restore	
Color Management	Credential Manager	Date and Time	Default Programs	
Desktop Gadgets	Jevice Manager	and Devices and Printers	💐 Display	
Ease of Access Center	E Folder Options	A Fonts	Getting Started	
& HomeGroup	A Indexing Options	nternet Options	- Keyboard	
Location and Other Sensors	J Mouse	Stewark and Sharing Center	Diffication Area loons	
NVIDIA Control Panel	4 NVIDIA PhysX	🍓 Parental Controls	/ Pen and Touch	
Performance Information and Tools	Series Personalization	A Phone and Modern	Power Options	
Programs and Features	Prealtek HD Audio Manager	📽 Recovery	Region and Language	
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	🛞 Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting	
& User Accounts	a Windows Anytime Upgrade	Windows CardSpace	Windows Defender	
Windows Firewall	a Windows Update			

Click "DISPLAY".

•

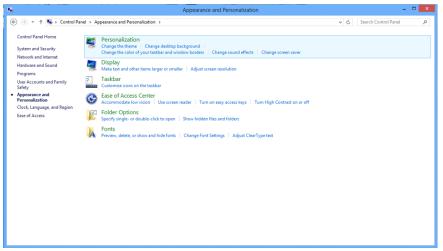


• Click on the "Change display settings" button.

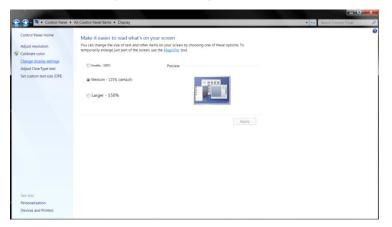

• Set the resolution SLIDE-BAR to Optimal preset resolution

	Screen Resolution				
Display:	Display + Screen Resolution earance of your display	Defect Identify	~ C	Search Control Panel	× ۵ -
Resolution: Orientation: Make text and other What display setting	1920 × 1080 (Recommended) v High 1920 × 1080 (Recommended) 1600 × 900 1600 × 900	Advanced settings OK Cancel Apply			
	1024 × 768 Low	UK Lancei appy			

Hotkeys

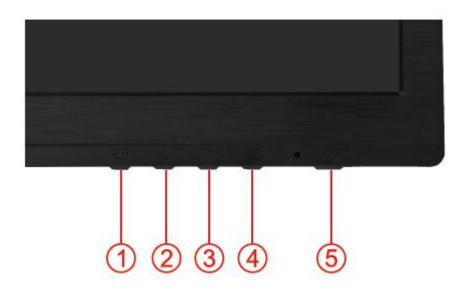

Е2260Рни/Е2260Sни /Е2460Рwни/Е2460Swнu/Е2460Sнu/Е2460Рни

1	Source/Auto/Exit
2	ECO(DCR/I-Care)/<
3	Volume / >
4	Menu/Enter
5	Power

I960SRDA/I960SRDA+/I960PRDA/I960PRDAS/I960PRDA+/E2060Swdu/E2060Swdan/E960Srda/ E960PRDA/E960PRDAS /E2060Swda/E2060Pwda / E2260Sda/ E2260PDA/E2260PDAS

1	Source/Auto/Exit
2	ECO(DCR)/<
3	Volume / >
4	Menu/Enter
5	Power

E2060SWDN /E2060SWD// E2260SD/M2060SWD

1	Source/Auto/Exit
2	ECO(DCR)/<
3	4:3 or Wide / >
4	Menu/Enter
5	Power

E2060Swn /E2060Sw/M2060SW

1	Auto/Exit
2	ECO(DCR)/<
3	4:3 or Wide / >
4	Menu/Enter
5	Power

E960Srd

1	Source/Auto/Exit			
2	ECO(DCR)/<			
3	>			
4	Menu/Enter			
5	Power			

E2060SL

1	Auto/Exit
2	Clear Vision /<
3	4:3 or Wide / >
4	Menu/Enter
5	Power

M2060SWDA2/M2060PWDA2/ M2060PWQ/M2060SWQ/E2260PQ

1	Source/Auto/Exit
2	Clear Vision /<
3	Volume / >
4	Menu/Enter
5	Power

M2060SWD2

1	Source/Auto/Exit
2	Clear Vision /<
3	4:3 or Wide / >
4	Menu/Enter
5	Power

Power

Press the Power button to turn on/off the monitor.

Eco (DCR/I-Care)/ <

Press the Eco key continuously to select the Eco mode of brightness and DCR/I-Care on when there is no OSD. (Eco mode hot key may not be available in all models).

Volume / >

When there is no OSD, Press Volume button to active volume adjustment bar, Press <or + to adjust volume (Only for the models with speakers)

Auto / Exit


When there is no OSD, press Auto/Source button continuously about 3 second to do auto configure .

Source hot key

When the OSD is closed, press Source button will be Source hot key function. Press Source button continuously to select the input source showed in the message bar, press Menu/Enter button to change to the source selected

Clear Vision

- 1. When there is no OSD, Press the "-" button to activate Clear Vision.
- Use the "-" or "+" buttons to select between weak, medium, strong, or off settings. Default setting is always "off".

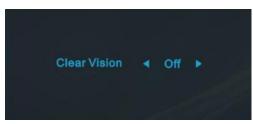

3. Press and hold "-" button for 5 seconds to activate the Clear Vision Demo, and a message of "Clear Vision Demo: on" will be display on the screen for a duration of 5 seconds. Press Menu or Exit button, the message will disappear. Press and hold "-" button for 5 seconds again, Clear Vision Demo will be off.



Clear Vision function provides the best image viewing experience by converting low resolution and blurry images into clear and vivid images.

OSD Setting

Basic and simple instruction on the control keys.

< **>	Z÷ Image Setup	Color Setup	Picture	Boost	CSD Setup		× Extra		Exit
Contrast	50	Gamma		Gamma 1		i-Care		off	×
Brightness	50	DCR		011		DPS		On	
Eco mode	◄ Standard ►	Overdrive		Medium					
1) Press the MENU-button to activate the OSD window.									
.,	to navigate through				inction is hi	nhliahtad	nross th		
				uesileu lu		Jilligineu	, piess ii		
MENU-	button to activate it .	press< or >to r	navigat	e through	the sub-me	nu functi	ons. On	e the de	sired
function is high	nlighted, press	MENU-button t	to activ	ate it.					
3) Press< or >	to change the setting	gs of the selected	functio	n. Press	AUT	O to exit.	lf you	want to a	adjust
any other funct	tion, repeat steps 2-3								
4) OSD Lock F	4) OSD Lock Function: To lock the OSD, press and hold the MENU button while the monitor is off and then								
press U power button to turn the monitor on. To un-lock the OSD - press and hold the III MENU button									
while the monitor is off and then press $\upsilon_{power \ button}$ to turn the monitor on.									
Notes:									

Notes:

1) If the product has only one signal input, the item of "Input Select" is disable to adjust.

2) If the product screen size is 4:3 or input signal resolution is wide format, the item of "Image Ratio" is disable to adjust.

3) One of DCR, Color Boost, and Picture Boost functions is active, the other two function is turned off accordingly.

Luminance

< 🔅 > -	74	÷.			¢,		×	4	1
Luminance	Image Setup	ColorSetup	Pictur	e Boost	OSD Setup		Extra	Ð	dt
Contrast	50	Gamma		Gamma 1		I-Care		Off	
Brightness	50	DCR		orr		DPS		On	
Eco mode	 Standard 	Overdrive		Medium					
 1 Press (Menu) to display menu. 2 Press < or > to select (Luminance), and press to enter. 3 Press < or > to select submenu, and press to enter. 									
4 Press < or > to adjust.									
5 ress									

	Brightness	0-100		Backlight Adjustment		
	Contrast	0-100		Contrast from Digital-register.		
		Standard	>	Standard Mode		
	Eco mode	Text	T	Text Mode		
		Internet	e	Internet Mode		
		Game	نفن الم	Game Mode		
		Movie	0	Movie Mode		
		Sports		Sports Mode		
		Gamma1	1620	Adjust to Gamma1		
	Gamma	Gamma2		Adjust to Gamma 2		
		Gamma3		Adjust to Gamma 3		
		Off		Disable dynamic contrast ratio		
	DCR	On		Enable dynamic contrast ratio		
		We	eak	Adjust the response time		
		Medium		(only for E2260Pнu/E2260Sнu/ E2460Pwнu/E2460Swнu/E2460Sнu/E2460Pнu/E226		
	Overdrive	Strong		0PQ/M2060SWDA2/M2060PWDA2/ M2060SWD2/		
				M2060PWQ/M2060SWQ)		
		Off				
	i-Care	C	n	adjusts the brightness according to light intensity (only for E2260Pнu/E2260Sнu/		
		C	Off	E2460PWнu/E2460SWнu/E2460Sнu/E2460Pнu)		
		C	n	(only for		
	DPS	C	Off	M2060SWD/M2060SWDA2/M2060PWDA2)		
L	1			1		

Image Setup

< 🛃 > 👘	÷.		Q,	*	- I	×
Image Solup	Color Setup	Picture Boost	OSD Setup	Extra	Exit	Luminance
Clock	50					
Phase	50					
Sharpness 📃	50					
-						
1 Press	U to displa	ay menu.				
2 Press <	or > to sel	ect 4	(Image Se	etup), and p	oress	to enter.
3 Press <	or > to sel	ect submeni	u, and pre	ss 🛄 ta	o enter.	
4 Press <	or > to a	djust.				
5 Press	to ex	kit.				

Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise
Sharpness	0-100	Adjust picture sharpness
 H.Position	0-100	Adjust the horizontal position of the picture.
V.Position	0-100	Adjust the vertical position of the picture.

Color Setup

Color Setup		Picture B	loost	C) OSD Setup	X Extra	Exit	Luminance	Z., Image Setup
Color Temp.								
DCB Made								
DCB Demo								
 1 Press (Menu) to display menu. 2 Press < or > to select (Color Setup), and press to enter. 3 Press < or > to select submenu, and press to enter. 								
4 Press < or > to adjust.								
5 Press	Þ	₽ t	o exit.					

	Color setup.	Warm		Recall Warm Color Temperature from EEPROM.
		Normal		Recall Normal Color Temperature from EEPROM.
		Cool		Recall Cool Color Temperature from EEPROM.
		sRGB		Recall SRGB Color Temperature from EEPROM.
			Red	Red Gain from Digital-register
		User	Green	Green Gain Digital-register.
			Blue	Blue Gain from Digital-register
	DCB Mode	Full Enhance	on or off	Disable or Enable Full Enhance Mode
		Nature Skin	on or off	Disable or Enable Nature Skin Mode
		Green Field	on or off	Disable or Enable Green Field Mode
		Sky-blue	on or off	Disable or Enable Sky-blue Mode
		AutoDetect	on or off	Disable or Enable AutoDetect Mode
	DCB Demo		On or off	Disable or Enable Demo

Picture Boost

- < <mark></mark> >	Q,	×	- T	۲	4	å
Ficture Boos!	OSD Setup	Extra	Exit	Luminance	Image Sotup	Color Setup
Bright Frame 🖪					H. Position	50
Frame Size	14				V. Position	50
1 Press 🛄	(Menu) to d	isplay menu				
2 Press < or	to select	(Pic	cture Boos	st), and pr	ess 🔟 to er	nter.
3 Press < or	r > to sele	ct submenu,	and press	s 🛄 to	o enter.	
4 Press < or	r > to adj	ust.				
5 Press	to exit.					

Frame Size	14-100	Adjust Frame Size
Brightness	0-100	Adjust Frame Brightness
Contrast	0-100	Adjust Frame Contrast
H. position	0-100	Adjust Frame horizontal Position
V.position	0-100	Adjust Frame vertical Position
Bright Frame	on or off	Disable or Enable Bright Frame

OSD Setup

< Cosp setup	X Extre	Fi ll	پې Luminance	Z∔ Image Setup	Color Setup	Picture Boost
Language < Timeout	English P 120		sition		апярателов	
1 Press	(Menu) to a	display me	enu.			
2Press < or	> to select	Q, (C	SD Setup), ar	nd press	to enter.	
3 Press <	or > to select	submenu	, and press	to enter.		
4 Press <	or > to adjust					
5 Press	to exit.					

H.Position	0-100	Adjust the horizontal position of OSD
V.Position	0-100	Adjust the vertical position of OSD
Timeout	5-120	Adjust the OSD Timeout
Transparence	0-100	Adjust the transparence of OSD
Language		Select the OSD language

Extra

×X×	Exit	Luminance	Ima	ge Set	qu	Color Setup	Picture Boost	C, OSD Setup
Input Select			Image Ratio				Resolution : 1024 (H) X7	768 (V)
Auto Config.			DDC/CI				H. Frequency: 60KHz	
Off Timer	00		Reset		No	•	V. Frequency: 60Hz	

1 Press IIIII (Menu) to display menu.
2 Press < or >to select X (Extra), and press to enter.
3 Press < or > to select submenu, and press to enter.
4 Press < or > to adjust.
5 Press to exit.

*	Input Select	Auto / Analog / DVI / HDMI	Select input signal source. (E2260Pнu/E2260Sнu/ E2460Pwнu/E2460Swнu/E2460Sнu/E2460Pнu)		
	Input Select Auto / Analog / DVI		Select input signal source. (E2060Swdn/E2060Swdan) /E960SRda/E960PRDA/E960PRDAS/I960SRDA/I960SRDA+/ I960PRDA/I960PRDAS/I960PRDAS/I960SRDA/I960SRDA+/ I960PRDA/I960PRDAS/I960PRDA+/E960SRd/E2060Swda/E 2060Pwda/E2060Swd/E2260Sda/E2260PDA/E226 0PDAS/E2060Swdu/M2060SWD/M2060SWDA2/M2060PWD A2/ M2060SWD2)		
	Input Select Analog		Select input signal source. (E2060Sw /E2060SwN /E2060SL/M2060SW)		
	Input Select	Auto / Analog / DVI /DP	Select input signal source. (E2260PQ)		
	Input Select	Auto / Analog /DP	Select input signal source. (M2060PWQ/M2060SWQ)		
	Auto Config	yes or no	Auto adjust the picture to default.		
	Off timer	0-24hrs	Select DC off time.		
	Image Ratio	wide or 4:3	Select wide or 4:3 format for display.		
	DDC-CI	yes or no	Turn ON/OFF DDC-CI Support.		
	Reset	yes or no	Reset the menu to default.		
	Information		Show the information of the main image and sub-image source.		

Exit

1 Press (Menu) to display menu.	
2 Press < or > to select (Exit), and press 1 to enter.	
3 Press to exit	
Exit Exit the ma	ain OSE

LED Indicator

Status	LED Color
Full Power Mode	Green or Blue
Active-off Mode	Orange or red




Driver

Monitor Driver


Windows 10

- Start Windows® 10
- Right click START.
- Click "Control Panel".

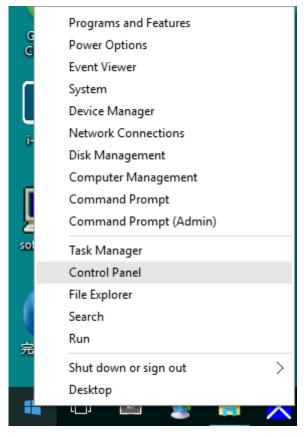


Click on the "Display" icon.

•

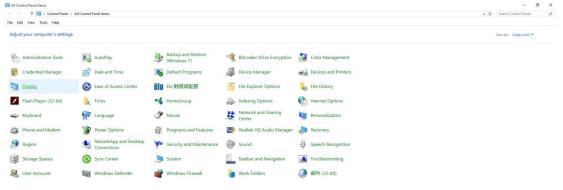


• Click on the "Change display settings" button

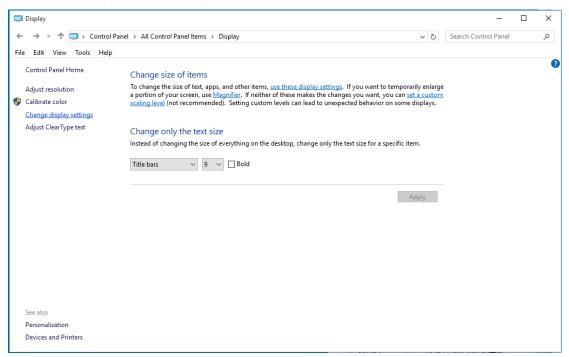

• Click the "Advanced Settings" button.

Screen Resolution		-	×
← → → ↑ 💷 > Control Panel > All Control Panel Items > Display > Screen Resolution > √	ڻ ~	Search Control Panel	P
File Edit View Tools Help			
Change the appearance of your display			
Detect			
Display: 1. B24 V			
Resolution: 1920 × 1080 (Recommended) V			
Orientation: Landscape ~			
Advanced st	etting	s	
Make text and other items larger or smaller			
What display settings should I choose?			
OK Cancel App	ply		

Click the "Monitor" tab and then click the "Properties" button.

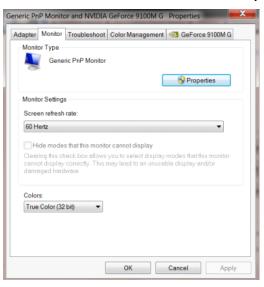

• Click the "Driver" tab.

•


Generic PnP	Monitor Proper	ties
General	Driver Details	
	Generic PnP Mo	nitor
	Driver Provider:	Microsoft
	Driver Date:	6/21/2006
	Driver Version:	6.1.7600.16385
	Digital Signer:	Microsoft Windows
Driv	ver Details	To view details about the driver files.
Upd	ate Driver	To update the driver software for this device.
Roll	Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.
[Disable	Disables the selected device.
L	Ininstall	To uninstall the driver (Advanced).
		OK Cancel

• Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... "and then


click the "Browse my computer for driver software" button.

	w do you want to search for driver software?	
•	Search automatically for updated driver software Windows will search your computer and the linemet for the latest driver software for your device, unless you've disabled this feature in your device installation settings.	
•	Browse my computer for driver software Locate and install driver software manually.	

Select "Let me pick from a list of device drivers on my computer".

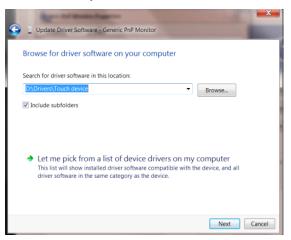

• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

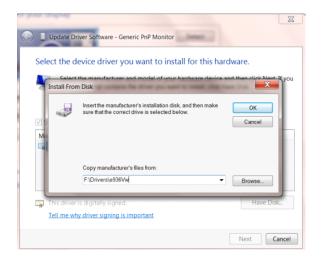

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk

drive.

•

- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Windows 8

- Start Windows® 8
- Right click and click **All apps** at the bottom-right of the screen.



- Click on the "Control Panel" icon
- Set the "View by" to "Large icons" or "Small icons".

just your computer's setti	igs			View by:	Large icons * Category
Action Center	Administrative Tools	AutoPlay	🍕 BitLocker Drive Encryption	🛐 Color Management	Large icons Small icons
Credential Manager	Date and Time	Default Programs	bevice Manager	Devices and Printers	
Display	🚱 Ease of Access Center	鶲 Family Safety	File History	Flash Player (32-bit)	
Folder Options	Konts	🝓 HomeGroup	lindexing Options	nternet Options	
Keyboard	📌 Language	Docation Settings	J Mouse	Network and Sharing Center	
Notification Area Icon	NVIDIA Control Panel	Performance Information and Tools	Personalization	Phone and Modem	
Power Options	Programs and Features	Recovery	👧 Region	RemoteApp and Desktop Connections	
Sound	Speech Recognition	Storage Spaces	Sync Center	🙀 System	
Taskbar	Troubleshooting	Ser Accounts	😻 Windows 7 File Recovery	Windows Defender	
Windows Firewall	Windows Update				

C 🚍 🕎

Click on the "Display" icon.

•

•

Action Center	C Administrative Tools	AutoPlay	Backup and Restore	
Color Management	Credential Manager	Date and Time	Programs	
Desktop Gadgets	Jevice Manager	we Devices and Printers	💐 Display	
Ease of Access Center	E Folder Options	A Fonts	Getting Started	
	A Indexing Options	Internet Options	- Keyboard	
Location and Other Sensors	J Mouse	Stevensor And Sharing Center	Diffication Area loons	
NVIDIA Control Panel	MVIDIA PhysX	🍓 Parental Controls	/ Pen and Touch	
Performance Information and Tools	Sersonalization	A Phone and Modern	Power Options	
Programs and Features	B Realtek HD Audio Manager	📽 Recovery	Region and Language	
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting	
& User Accounts	a Windows Anytime Upgrade	Windows CardSpace	Windows Defender	
Windows Firewall	Twindows Update			


Click on the "Change display settings" button.

🕒 😜 – 🔍 🕻 Control Panel 🛚	All Control Panel Items Display		• • Search Control Panel
Control Panel Home Adjust resolution Calibrate color	Make it easier to read what's or You can change the size of text and other temporarily enlarge just part of the scree	items on your screen by choosing one of these options. To	9
Change display settings Adjust ClearType text	🕐 Smaller - 200%	Preview	
Set custom text size (DPI)	 Medium - 125% (default) 		
	© Larger - 150%		
		Apply	
See also Personalization			
Devices and Printers			

• Click the "Advanced Settings" button.

Control Parent I All Control Parent II	Its + Daplay + Screen Resolution Change the appearance of your display Change the appearance of your display Deptay Duplay Libroids Default Rat Panel + Resolution: 1520 = 1580 (economended) + Orientation Chanted appearance of smaller Make test and other items larger or smaller Make test and other items larger or smaller	
	OK Genet App	9

Click the "Monitor" tab and then click the "Properties" button.

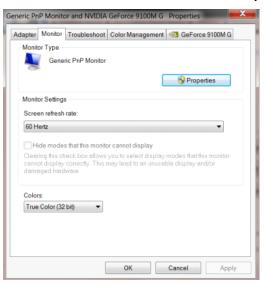

• Click the "Driver" tab.

•

٠


Generic PnF	P Monitor Proper	ties
General	Driver Details	
	Generic PnP Mo	nitor
	Driver Provider:	Microsoft
	Driver Date:	6/21/2006
	Driver Version:	6.1.7600.16385
	Digital Signer:	Microsoft Windows
Driv	ver Details	To view details about the driver files.
Upd	ate Driver	To update the driver software for this device.
Roll	Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.
[Disable	Disables the selected device.
ι	Jninstall	To uninstall the driver (Advanced).
		OK Cancel

Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver..." and

then click the "Browse my computer for driver software" button.

•	Search automatically for updated driver software Windows will search your computer and the Internet for the latest driver	
	software for your device, unless you've disabled this feature in your device installation settings.	
*	Browse my computer for driver software Locate and install driver software manually.	

Select "Let me pick from a list of device drivers on my computer".

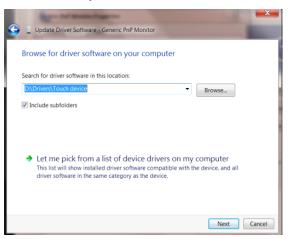

•

• Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:

X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).

		X
🕒 🛽 Upd	date Driver Software - Generic PnP Monitor	
Select	the device driver you want to install for this hardware.	
	Select the manufacturer and model of your hardware device and then click New	ut you
	Insert the manufacturer's installation disk, and then make OK sure that the correct drive is selected below. Cancel	
	Copy manufacturer's files from: F\Drivers\e936Vw	
This	driver is digitally signed. Have Dis	sk
Tell	me why driver signing is important	
	Next	Cancel

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Windows 7

- Start Windows® 7
- Click on the "Start" button and then click on "Control Panel".



Click on the "Display" icon.

•

Action Center	C Administrative Tools	AutoPlay	Backup and Restore	
Color Management	Credential Manager	Date and Time	🕐 Default Programs	
Desktop Gadgets	Jevice Manager	and Devices and Printers	💐 Display	
Ease of Access Center	E Folder Options	A Fonts	Getting Started	
	A Indexing Options	C Internet Options	- Keyboard	
Location and Other Sensors	J Mouse	Setwork and Sharing Center	Diffication Area Icons	
NVIDIA Control Panel	4 NVIDIA PhysX	🍓 Parental Controls	/ Pen and Touch	
Performance Information and Tools	Serionalization	A Phone and Modern	Power Options	
Programs and Features	Bealtek HD Audio Manager	📽 Recovery	Aregion and Language	
RemoteApp and Desktop Connections	Sound	Ø Speech Recognition	Sync Center	
System	Tablet PC Settings	Taskbar and Start Menu	Troubleshooting	
User Accounts	a Windows Anytime Upgrade	Windows CardSpace	Net Windows Defender	
Windows Firewall	🖉 Windows Update			


• Click on the "Change display settings" button.

Control Panel	All Control Panel Items Display		Ap Search Cont	
Control Panel Home Adjust resolution Calibrate color	Make it easier to read what's or You can change the size of text and other temporarily enlarge just part of the screen	items on your screen by choosing one of these options. To		•
Change display settings Adjust ClearType text	🕐 Smaller - 100%	Preview		
Set custom text size (DPI)	Medium - 125% (default)			
	Clarger - 150%			
		Apply		
See also				
Personalization				

• Click the "Advanced Settings" button.

📀 🏐 🗸 🔍 🕨 Control Panel 🕨 All Control Pane	Items + Display + Screen Resolution		Search Control Panel
	Change the appearance of your display	Detect Identify	and compared
	Display: <u>1. Nedia Default Flat Panel</u> Pesolution: <u>1920 + 1080 (recommended)</u> Orientation: <u>Landsape</u>		
	Make text and other items larger or smaller	Advanced settings	
	What display settings should I choose?		
	OK	Cancel Apply	

• Click the "Monitor" tab and then click the "Properties" button.

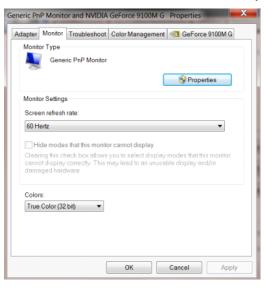


Click the "Driver" tab.

٠

Seneric PnP Monitor Properties				
General Driver Details				
Generic PnP Mo	nitor			
Driver Provider:	Microsoft			
Driver Date:	6/21/2006			
Driver Version:	6.1.7600.16385			
Digital Signer:	Microsoft Windows			
Driver Details	To view details about the driver files.			
Update Driver	To update the driver software for this device.			
Roll Back Driver	If the device fails after updating the driver, roll back to the previously installed driver.			
Disable	Disables the selected device.			
Uninstall	To uninstall the driver (Advanced).			
	OK Cancel			


Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "Update Driver... " and

then click the "Browse my computer for driver software" button.

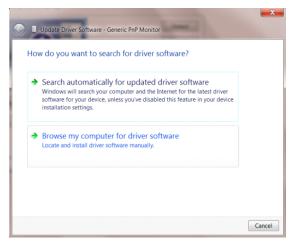


•

Select "Let me pick from a list of device drivers on my computer".

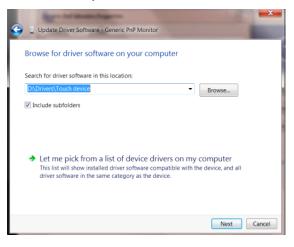

• Click the **"Have Disk"** button. Click on the **"Browse"** button and navigate to the following directory: X:\Driver\module name(where X is the drive letter designator for the CD-ROM drive).

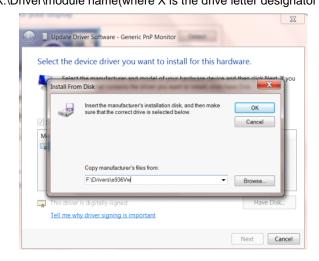

- Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.
- Select your monitor model and click the "Next" button. The files will be copied from the CD to your hard disk drive.
- Close all open windows and remove the CD.
- Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

i-Men	U		umina.	ance	9		e	8
	*							
(×		6	
) c	ontrast 🗕	<u> </u>	50	*	Brightness		-	50
γg	amma 4	Gamma 1	•	-	Eco Mode	4	2	Þ
D 📷	CR	3						
								۲
C			/100	C				- 2

e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC status, you may choose from the pull-down menu the desired time (in minutes) for your monitor to automatically shutdown. The example above illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.




You can click "RESET" to set the e-Saver to its default settings like below.

/IOC	100			- 2 🗙
				C
When PC	On	Off	Sleep	Screen Saver
Monitor Off	Never	After 5 minutes	After 10 minutes	After 20 minutes
		Csave	ai	RESET

Screen+



Welcome to "Screen+" software by AOC, Screen+ software is a desktop screen splitting tool, it splits the desktop into different panes, each pane displays a different window. You only need to drag the window to a corresponding pane, when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it.

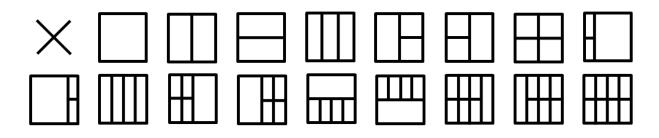

Troubleshoot

Problem & Question	Possible Solutions
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.
No images on the screen	 Is the power cord connected properly? Check the power cord connection and power supply. Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection. * DVI input is not available on every model. If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen. If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer. Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Make sure the AOC Monitor Drivers are installed.
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back .
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution your are using.

Monitor Is Stuck In Active Off-Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME/XP shut-down mode Adjust CLOCK and FOCUS. Press to auto-adjust.

Specification

General Specification

	Model name	I960SRDA/I960SRDA+/I960PRDA/I960PRDAS/I960PRDA+/E960Srda/			
	model name	E960PRDA/E960PRDAS/E960Srd			
	Driving system	TFT Color LCD			
	Viewable	48.2cm diagonal/			
	Image Size	48.0cm diagonal (I960SRDA/I960SRDA+/I960PRDA/I960PRDAS/I960PRDA+)			
Panel	Dival nitah	0.294mm(H)X0.294mm(V)/			
	Pixel pitch	0.0976mm(H)X0.2928mm(V)(I960SRDA/I960SRDA+/I960PRDA/I960PRDAS/I960PRDA+)			
	Video	R, G, B Analog Interface & Digital Interface			
	Separate Sync.	H/V TTL			
	Display Color	16.7M Colors			
	Dot Clock	108MHz			
	Horizontal scan range	30 kHz - 83 kHz			
	Horizontal scan Size(Maximum)	376.32mm/374.784mm (I960SRDA/I960SRDA+/I960PRDA/I960PRDAS/I960PRDA+)			
	Vertical scan range	50 Hz - 76 Hz			
	Vertical scan Size(Maximum)	301.056mm/299.827mm(I960SRDA/I960SRDA+/I960PRDA/I960PRDAS/I960PRDA+)			
	Optimal preset resolution	1280x 1024 (60 Hz)			
	Plug & Play	VESA DDC2B/CI			
Resolution	Input	D-Sub 15pin; DVI 24pin			
	Connector				
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, TMDS			
	Power Source	100-240V~, 50/60Hz			
	Typical power consumption	18W(Test condition: set Contrast = 50, Brightness = 90)			
	Power Consumption	23W(Test condition: Set Brightness and Contrast to maximum)			
	Power consumption @power-saving	≦0.5W			
	Off timer	0-24 hrs			
	Speakers	2WX2(I960SRDA/I960SRDA+/I960PRDA/I960PRDAS/I960PRDA+/E960Srda/			
	opeareis	E960PRDA/E960PRDAS)			
Physical	Connector Type	15-pin D-Sub ; DVI-D			
Characteristics	Signal Cable	Detachable			

	Туре	
	Temperature:	
	Operating	0° to 40°
	Non-Operating	-25° to 55°
Environmental	Humidity:	
	Operating	10% to 85% (non-condensing)
	Non-Operating	5% to 93% (non-condensing)

	Model name	E2060Swn/E2060Swdn/E2060Swdan /E2060Swda/ E2060Pwda/E2060Sw/E2060Swd/E2060Swdu/E 2060SL/M2060SWD/M2060SWDA2/M2060PW DA2/M2060SW/M2060SWD2/M2060PWQ/M206 0SWQ
	Driving system	TFT Color LCD
	Viewable Image Size	49.5cm diagonal
	Viewable Image Size (M2060SWD/M2060SWDA2/M2060PWDA2/M206 0SW/M2060SWD2/M2060PWQ/M2060SWQ)	49.6cm diagonal
	Pixel pitch	0.27mm(H)X0.27mm(V)
	Pixel pitch (E2060SL)	0.3177mm(H) x 0.307mm(V)
Panel	Pixel pitch (M2060SWD/M2060SWDA2/M2060PWDA2/M206 0SW/M2060SWD2/M2060PWQ/M2060SWQ)	0.2265 mm(H) x 0.221mm(V)
	Video (E2060Swdu/E2060Swdn/E2060Swdan /E2060Swda/E2060Pwda/E2060Swd/M2060SWD/ M2060SWDA2/M2060PWDA2/M2060SWD2)	R, G, B Analog Interface & Digital Interface
	Video (E2060Sw/ E2060Swn /E2060SL/M2060SW)	R, G, B Analog Interface
	Video (M2060PWQ/M2060SWQ)	R, G, B Analog Interface & DP Interface
	Separate Sync.	H/V TTL
	Display Color	16.7M Colors
	Dot Clock	108MHz
	Dot Clock (E2060SL)	90MHz
	Dot Clock (M2060SWD/M2060SWDA2/M2060PWDA2/M206 0SW/M2060SWD2/ M2060PWQ/M2060SWQ)	148.5MHz
	Horizontal scan range	30 kHz - 83 kHz
	Horizontal scan range (E2060SL)	30 kHz - 60 kHz
D .	Horizontal scan Size(Maximum)	432mm
Resolu	Horizontal scan Size(Maximum) (E2060SL)	434mm
tion	Horizontal scan Size(Maximum) (M2060SWD/M2060SWDA2/M2060PWDA2/M206 0SW/M2060SWD2/ M2060PWQ/M2060SWQ)	434.88mm

Vertical scan range50 Hz - 76 HzVertical scan Size(Maximum)239.76mmVertical scan Size(Maximum) (E2060SL)235.8mmVertical scan Size(Maximum)238.68mm(M2060SWD/M2060SWDA2/M2060PWDA2/M206238.68mm0SW/M2060SWD2)Optimal preset resolution(M2060SWD/M2060SWDA2/M2060PWDA2/M2061920×1080@60Hz0SW/M2060SWD2/ M2060PWQ/M2060SWQ)1920×1080@60Hz	
Vertical scan Size(Maximum) (E2060SL) 235.8mm Vertical scan Size(Maximum) 235.8mm (M2060SWD/M2060SWDA2/M2060PWDA2/M206 238.68mm 0SW/M2060SWD2) 0 Optimal preset resolution 1920×1080@60Hz	
(M2060SWD/M2060SWDA2/M2060PWDA2/M206 238.68mm 0SW/M2060SWD2) Optimal preset resolution (M2060SWD/M2060SWDA2/M2060PWDA2/M206 1920×1080@60Hz	
(M2060SWD/M2060SWDA2/M2060PWDA2/M206 1920×1080@60Hz	
Optimal preset resolution 1600×900@60Hz	
Optimal preset resolution (E2060SL) 1366×768@60Hz	
Plug & Play VESA DDC2B/CI	
Input Connector D-Sub 15pin; DVI 24pin (E2060Swdu/E2060Swdav/	
Input Connector(E2060Sw/E2060Sw/E2060SL/M2060S W)	
Input Connector(M2060PWQ/M2060SWQ) D-Sub 15pin;DP	
Input Video Signal Analog: 0.7Vp-p(standard), 75 OHM,	, TMDS
Power Source 100-240V~, 50/60Hz	
Typical power consumption 23W Typical power consumption 13W(E2060SL) 35W(E2060Swpu) (Test condition: set Contrast = 50, E 90) 90	Brightness =
Power Consumption Power Consumption (Test condition: Set Brightness and C maximum)	Contrast to
Power consumption @power-saving $\leq 0.5W$	
I ower consumption e power-saving $\leq 1W(E2060S_{WDU})$ Off timer0-24 hrs	
Speakers(E2060Swbu/E2060Swba/ E2060Pwba 2WX2 /M2060PWQ/M2060SWQ) 2WX2	
Connector TypeConnector Type(E2060Swdu/E2060Swdav/E2060S	
Chara cteristiConnector Type (E2060Sw /E2060SwN E2060SL/M2060SW)15-pin D-Sub	
cs Connector Type (M2060PWQ/M2060SWQ) 15-pin D-Sub ,DP	
Signal Cable Type Detachable	
Enviro Temperature:	

nment	Operating	0° to 40°
al	Non-Operating	-25° to 55°
	Humidity:	
	Operating	10% to 85% (non-condensing)
	Non-Operating	5% to 93% (non-condensing)

Panel	Model name	E2260PHu/E2260SHu/E2260PDA/E2260PDAS/E22
		60Sda/E2260Sd/E2260Pq
	Driving system	TFT Color LCD
	Viewable Image Size	55.86 cm diagonal
	Pixel pitch	0.282mm(H) x 0.282mm(V)
	Video (E2260Pa)	R, G, B Analog Interface & Digital Interface & DP
		Interface
	Video (E2260Рнџ/E2260Sнџ)	R, G, B Analog Interface & Digital Interface & HDMI
		Interface
	Video	R, G, B Analog Interface & Digital Interface
	(E2260PDA/E2260PDAS/E2260SDA/E	
	2260Sd)	
	Separate Sync.	H/V TTL
	Display Color	16.7M Colors
	Dot Clock	146 MHz
Resolution	Horizontal scan range	30 kHz - 83 kHz
	Horizontal scan Size(Maximum)	473.76mm
	Vertical scan range	50Hz - 76 Hz
	Vertical scan Size(Maximum)	296.1mm
	Optimal preset resolution	1680 x 1050@60Hz
	Plug & Play	VESA DDC2B/CI
	Input connector (E2260Pa)	D-Sub 15pin DVI 24pin,DP
	Input connector	D-Sub 15pin DVI 24pin,HDMI
	(Е2260Рнџ/Е2260Ѕнџ)	
	Input connector	D-Sub 15pin DVI 24pin
	(E2260PDA/E2260PDAS/E2260Sda/E	
	2260Sd)	
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, TMDS
	Power Source	100-240V~, 50/60Hz
	Typical power consumption	38W(Test condition: set Contrast = 50, Brightness = 90)
	Power Consumption	43W(Test condition: Set Brightness and Contrast to maximum)
	Power consumption @power-saving	≦0.5W
	Off timer	0-24 hrs
	Speakers(E2260PDA/E2260PDAS/E2	2W x 2
	260Sda	
	2603DA	
	E2260Phu/E2260Shu/E2260Pa)	
		15-pin D-Sub DVI-D,HDMI
	Е2260Рни/Е2260Ѕни/Е2260Ра)	15-pin D-Sub DVI-D,HDMI 15-pin D-Sub DVI-D,DP
Physical	E2260Pнu/E2260Sнu/E2260Pa) Connector type(E2260Pнu/E2260Sнu)	•
Physical Characteristics	E2260Pнu/E2260Sнu/E2260Pa) Connector type(E2260Pнu/E2260Sнu) Connector type (E2260Pa)	15-pin D-Sub DVI-D,DP
-	E2260PHU/E2260SHU/E2260Pa) Connector type(E2260PHU/E2260SHU) Connector type (E2260Pa) Connector type	15-pin D-Sub DVI-D,DP

Environmental	Temperature:		
	Operating	0° to 40°	
	Non-Operating	-25°to 55°	
	Humidity:		
	Operating	10% to 85% (non-condensing)	
	Non-Operating	5% to 93% (non-condensing)	

	Model name	Е2460РWнu / Е2460SWнu		
Panel	Driving system	TFT Color LCD		
	Viewable Image Size	59.8 cm diagonal		
	Pixel pitch	0. 2715 mm(H) x 0. 2715 mm(V)		
	Video	R, G, B Analog Interface & Digital Interface & HDMI Interface		
	Separate Sync	H/V TTL		
	Display Color	16.7M Colors		
	Dot Clock	170 MHz		
	Horizontal scan range	30 kHz - 83 kHz		
	Horizontal scan Size(Maximum)	521.28 mm		
	Vertical scan range	50 Hz - 76 Hz		
	Vertical scan Size(Maximum)	293.22 mm		
	Optimal preset resolution	1920 x 1080 (60 Hz)		
	Plug & Play	VESA DDC2B/CI		
	Input Connector	D-Sub 15pin DVI 24pin,HDMI		
Resolution	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, TMDS		
	Power Source	100-240V~, 50/60Hz		
	Typical power consumption	42W(Test condition: set Contrast = 50, Brightness = 90)		
	Power Consumption	47W(Test condition: Set Brightness and Contrast to maximum)		
	Power consumption @power-saving	≦0.5W		
	Off timer	0~24 hrs		
	Speakers	2W x 2		
Physical	Connector Type	15-pin D-Sub DV	(I-D,HDMI	
Characteristics	Signal Cable Type	Detachable		
	Tomporatura	Operating	0° to 40°	
Environmentel	Temperature	Non-Operating	-25°to 55°	
Environmental	Humidity	Operating	10% to 85% (non-condensing)	
	Humidity	Non-Operating	5% to 93% (non-condensing)	

Preset Display Modes

19R

STANDARD	RESOLUTION	HORIZONTAL	VERTICAL
		FREQUENCY(kHZ)	FREQUENCY(Hz)
VGA	640×480@60Hz	31.469	59.940
VGA	640×480@67Hz	35.000	66.667
VGA	640×480@72Hz	37.861	72.809
VGA	640×480@75Hz	37.500	75.000
Dos-mode	720×400@70Hz	31.469	70.087
SVGA	800×600@56Hz	35.156	56.250
SVGA	800×600@60Hz	37.879	60.317
SVGA	800×600@72Hz	48.077	72.188
SVGA	800×600@75Hz	46.875	75.000
SVGA	832×624@75Hz	49.725	74.551
XGA	1024×768@60Hz	48.363	60.004
XGA	1024×768@70Hz	56.476	70.069
XGA	1024×768@75Hz	60.023	75.029
SXGA	1280×1024@60Hz	63.981	60.020
SXGA	1280×1024@75Hz	79.976	75.025

5w

STAND	RESOLUTION	HORIZONTAL	VERTICAL
		FREQUENCY(kHZ)	FREQUENCY(Hz)
VGA	640×480 @60Hz	31.469	59.940
VGA	640×480 @67Hz	35.000	66.667
VGA	640×480 @72Hz	37.861	72.809
VGA	640×480 @75Hz	37.500	75.000
Dos-mode	720×400 @70Hz	31.469	70.087
SVGA	800×600 @56Hz	35.156	56.250
SVGA	800×600 @60Hz	37.879	60.317
SVGA	800×600 @72Hz	48.077	72.188
SVGA	800×600@75Hz	46.875	75.000
SVGA	832×624 @75Hz	49.725	74.500
XGA	1024×768 @60Hz	48.363	60.004
XGA	1024×768 @70Hz	56.476	70.069
XGA	1024×768 @75Hz	60.023	75.029
SXGA	1280×1024@60Hz	63.981	60.020
SXGA	1280×1024@75Hz	79.976	75.025
WSXGA	1600×900 @60Hz	55.540	59.978

19.5w(E2060SL)

Standard	Resolution	H. Frequency (kHz)	V. Frequency (Hz)
VGA	640×480 @60Hz	31.469	59.940
VGA	640×480 @67Hz	35.000	66.667
VGA	640×480 @72Hz	37.861	72.809
VGA	640×480 @75Hz	37.500	75.000
Dos-mode	720×400 @70Hz	31.469	70.087
SVGA	800×600 @56Hz	35.156	56.250
SVGA	800×600 @60Hz	37.879	60.317
SVGA	800×600 @72Hz	48.077	72.188
SVGA	800×600@75Hz	46.875	75.000
SVGA	832×624 @75Hz	49.725	74.500
XGA	1024×768 @60Hz	48.363	60.004
XGA	1024×768 @70Hz	56.476	70.069
XGA	1024×768 @75Hz	60.023	75.029
***	1280×720 @60Hz	44.772	59.855
WXGA	1360×768 @60Hz	47.712	60.015
WXGA	1366×768 @60Hz	47.712	59.790

STANDARD	RESOLUTION	HORIZONTAL	VERTICAL
CIANDARD	RECOLOTION	FREQUENCY(kHZ)	FREQUENCY(Hz)
		. ,	
VGA	640×480 @60Hz	31.469	59.940
VGA	640×480 @67Hz	35.000	66.667
VGA	640×480 @72Hz	37.861	72.809
VGA	640×480 @75Hz	37.500	75.000
Dos-mode	720×400 @70Hz	31.469	70.087
SVGA	800×600 @56Hz	35.156	56.250
SVGA	800×600 @60Hz	37.879	60.317
SVGA	800×600 @72Hz	48.077	72.188
SVGA	800×600 @75Hz	46.875	75.000
SVGA	832×624 @75Hz	49.725	74.551
XGA	1024×768 @60Hz	48.363	60.004
XGA	1024×768 @70Hz	56.476	70.069
XGA	1024×768 @75Hz	60.023	75.029
***	1280×960 @60Hz	60.000	60.000
SXGA	1280×1024	63.981	60.02
	@60Hz		
SXGA	1280×1024	79.976	75.025
	@75Hz		
WXGA+	1440×900 @60Hz	55.935	59.887
WSXGA	1680X1050	65.290	59.954
	@60Hz		
HD	1920×1080@60Hz	67.500	60.000

19.53w

22w


STANDARD	RESOLUTION	HORIZONTAL	VERTICAL
		FREQUENCY(kHZ)	FREQUENCY(Hz)
VGA	640×480@60Hz	31.469	59.940
VGA	640×480@72Hz	37.861	72.809
VGA	640×480@75Hz	37.500	75.000
SVGA	800×600@56Hz	35.156	56.250
SVGA	800×600@60Hz	37.879	60.317
SVGA	800×600@72Hz	48.077	72.188
SVGA	800×600@75Hz	46.875	75.000
XGA	1024×768@60Hz	48.363	60.004
XGA	1024×768@75Hz	60.023	75.029
SXGA	1280×1024@60Hz	63.981	60.020
SXGA	1280×1024@75Hz	79.976	75.025
WXGA	1440×900@60Hz	55.935	59.887
WSXGA	1680×1050@60Hz	65.290	59.954
IBM-MODE DOS	720×400@70Hz	31.469	70.087
MAC MODE VGA	640×480@67Hz	35.000	66.667
MAC MODE SVGA	832×624@75Hz	49.725	74.551

STANDARD	RESOLUTION	HORIZONTAL	VERTICAL
		FREQUENCY(kHZ)	FREQUENCY(Hz)
VGA	640×480 @60Hz	31.469	59.940
VGA	640×480 @67Hz	35.000	66.667
VGA	640×480 @72Hz	37.861	72.809
VGA	640×480 @75Hz	37.500	75.000
Dos-mode	720×400 @70Hz	31.469	70.087
SVGA	800×600 @56Hz	35.156	56.250
SVGA	800×600 @60Hz	37.879	60.317
SVGA	800×600 @72Hz	48.077	72.188
SVGA	800×600 @75Hz	46.875	75.000
SVGA	832×624 @75Hz	49.725	74.551
XGA	1024×768 @60Hz	48.363	60.004
XGA	1024×768 @70Hz	56.476	70.069
XGA	1024×768 @75Hz	60.023	75.029
XGA	1024×768 @75Hz	60.241	74.927
***	1280×960 @60Hz	60.000	60.000
SXGA	1280×1024 @60Hz	63.981	60.02
SXGA	1280×1024 @75Hz	79.976	75.025
WXGA+	1440×900 @60Hz	55.935	59.887
WSXGA	1680X1050 @60Hz	65.290	59.954
HD	1920×1080@60Hz	67.500	60.000

24w

STAND	RESOLUTION	Horizontal	Vertical
	640×480@60Hz	31.469	59.94
VGA	640×480@72Hz	37.861	72.809
	640×480@75Hz	37.5	75
	800×600@56Hz	35.156	56.25
	800×600@60Hz	37.879	60.317
SVGA	800×600@72Hz	48.077	72.188
	800×600@75Hz	46.875	75
	1024×768@60Hz	48.363	60.004
XGA	1024×768@70Hz	56.476	70.069
	1024×768@75Hz	60.023	75.029
SXGA	1280x1024@60Hz	63.981	60.02
SXGA	1280x1024@75Hz	79.976	75.025
WXGA	1440x900@60Hz	55.935	59.887
WSXGA+	1680x1050@60Hz	65.29	59.954
HDTV	1920x1080@60Hz	67.5	60
DOS	720×400@70Hz	31.469	70.087
VGA	640×480@67Hz	35	66.667
SVGA	832×624@75Hz	49.725	74.551


Pin Assignments

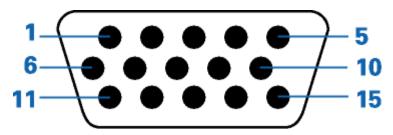


Pin Number	15-Pin Side of the Signal Cable		
1	Video-Red		
2	Video-Green		
3	Video-Blue		
s	N.C.		
5	Detect Cable		
6	GND-R		
7	GND-G		
8	GND-B		
9	+5V		
10	Ground		
11	N.C.		
12	DDC-Serial data		
13	H-sync		
14	V-sync		
15	DDC-Serial clock		



Pin Number	24-Pin Color Display Signal Cable	Pin Number	24-Pin Color Display Signal Cable
1	TMDS data 2-	13	TMDS data 3+
2	TMDS data 2+	14	+5V Power
3	TMDS data 2/4 Shield	15	Ground (for+5V)
4	TMDS data 4-	16	Hot Plug Detect
5	TMDS data 4+	17	TMDS data 0-
6	DDC Clock	18	TMDS data 0+
7	DDC Data	19	TMDS data 0/5 Shield
8	N.C.	20	TMDS data 5-
9	TMDS data 1-	21	TMDS data 5+
10	TMDS data 1+	22	TMDS Clock Shield
11	TMDS data 1/3 Shield	23	TMDS Clock +
12	TMDS data 3-	24	TMDS Clock —

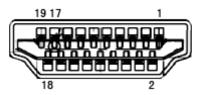

Pin No.	Signal Name	Pin No.	Signal Name	Pin	Signal Name
				No.	
1	TMDS Data 2+	9	TMDS Data 0	17	DDC/CEC Ground
2	TMDS Data 2 Shield	10	TMDS Clock +	18	+5V Power
3	TMDS Data 2	11	TMDS Clock Shield	19	Hot Plug Detect
4	TMDS Data 1+	12	TMDS Clock		
5	TMDS Data 1Shield	13	CEC		
6	TMDS Data 1	14	Reserved (N.C. on device		
7	TMDS Data 0+	15	SCL		
8	TMDS Data 0 Shield	16	SDA		

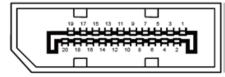

Pin No.	Signal Name	Pin No.	Signal Name
1	ML_Lane 3 (n)	11	GND
2	GND	12	ML_Lane 0 (p)
3	ML_Lane 3 (p)	13	CONFIG1
4	ML_Lane 2 (n)	14	CONFIG2
5	GND	15	AUX_CH(p)
6	ML_Lane 2 (p)	16	GND
7	ML_Lane 1 (n)	17	AUX_CH(n)
8	GND	18	Hot Plug Detect
9	ML_Lane 1 (p)	19	Return DP_PWR
10	ML_Lane 0 (n)	20	DP_PWR

Plug and Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

Regulation

FCC Notice

FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

WEEE Declaration

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste.Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product .

Reduction in the use of hazardous substances (India)

This product complies with the "E-Waste (Management) Rules, 2016" CHAPTER V, rule 16, sub-rule (1). Whereas New Electrical and Electronic Equipment and their components or consumables or parts or spares do not contain Lead, Mercury, Cadmium, Hexavalent Chromium, polybrominated biphenyls and polybrominated diphenyl ethers beyond a maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers and of 0.01% by weight in homogenous materials for cadmium. except of exemptions set in Schedule 2 of the Rule.

E-Waste Declaration for India



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about E -waste please visit

<u>http://www.aocindia.com/ewaste.php</u> and to know where you can drop off your waste equipment for recycling in India please contact on below given contact details.

Helpline number: 080-6788-6788 / 080-3323-1313 (Monday to Saturday, 10 a.m. to 6 p.m.)

Centralized E-waste collection center

Address: *TPV Technology India Private Limited*, 59, Maheswari Nagar, 1st Main Road, Mahadevapura Post, Whitefield Road, Bangalore, Karnataka, PIN: 560048, Tel: 080-3023-1000

E-mail: <u>serviceindia@aoc.com</u>

EPA Energy Star



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® Partner, AOC International (Europe) BV and Envision Peripherals, Inc. have determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

(FOR EPA CERTIFIED MODELS)

TCO DOCUMENT



Congratulations!

This product is TCO Certified – for Sustainable IT



TCO Certified is an international third party sustainability certification for IT products. TCO Certified ensures that the manufacture, use and recycling of IT products reflect environmental, social and economic responsibility. Every TCO Certified product model is verified by an accredited independent test laboratory.

This product has been verified to meet all the criteria in TCO Certified, including:

Corporate Social Responsibility

Socially responsible production - working conditions and labor law in manufacturing country Energy Efficiency

Energy efficiency of product and power supply. Energy Star compliant, where applicable **Environmental Management System**

Manufacturer must be certified according to either ISO 14001 or EMAS

Minimization of Hazardous Substances

Limits on cadmium, mercury, lead & hexavalent chromium including requirements for mercury-free products, halogenated substances and hazardous flame retardants

Design for Recycling

Coding of plastics for easy recycling. Limit on the number of different plastics used. **Product Lifetime, Product Take Back**

Minimum one-year product warranty. Minimum three-year availability of spare parts. Product takeback **Packaging**

Limits on hazardous substances in product packaging. Packaging prepared for recycling Ergonomic, User-centered design

Visual ergonomics in products with a display. Adjustability for user comfort (displays, headsets) Acoustic performance – protection against sound spikes (headsets) and fan noise (projectors, computers) Ergonomically designed keyboard (notebooks)

Electrical Safety, minimal electro-magnetic Emissions

Third Party Testing

All certified product models have been tested in an independent, accredited laboratory.

A detailed criteria set is available for download at <u>www.tcodevelopment.com</u>, where you can also find a searchable database of all TCO Certified IT products.

TCO Development, the organization behind TCO Certified, has been an international driver in the field of Sustainable IT for 20 years. Criteria in TCO Certified are developed in collaboration with scientists, experts, users and manufacturers. Organizations around the world rely on TCO Certified as a tool to help them reach their sustainable IT goals. We are owned by TCO, a non-profit organization representing office workers. TCO Development is headquartered in Stockholm, Sweden, with regional presence in North America and Asia.

For more information, please visit www.tcodevelopment.com

(FOR TCO CERTIFIED MODELS)

EPEAT Declaration



EPEAT is a system to help purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products.

AOC believes in protecting the environment.

With a key concern for the conservation of natural resources, as well as landfill protection, AOC announces the launch of AOC monitor's packaging recycling program. This program is designed to help you discard of your monitor carton and filler materials properly. If a local recycling center is not available, AOC will recycle the packaging material for you, including foam filler and carton. AOC Display solution will only recycle AOC monitor packaging. Please refer to the following website address:

For North America: http://us.aoc.com/aoc-corporation/?page=environmental-impact For Germany: http://aoc-europe.com/de/content/environment For Brazil: http://www.aoc.com.br/pg/embalagem-verde

(FOR EPEAT GOLD CERTIFIED MODELS)

Service

Warranty Statement for Europe

LIMITED THREE-YEAR WARRANTY*

For AOC LCD Monitors sold within Europe, AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) B.V. will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. In the absent of the proof of purchase, the warranty will start 3 months after the date of manufacturing indicated on the product.

If the product appears to be defective, please contact your local dealer or refer to the service and support section on <u>www.aoc-europe.com</u> for the warranty instructions in your country. The freight cost for the warranty is pre-paid by AOC for the delivery and return. Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Certified or Authorized Service Center under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

AOC International (Europe) B.V. will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) B.V. is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union. If the LCD Monitor is not available for collection when the currier attends, you will be charged a collection fee.

* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquake and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified or Authorized Service Center will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <u>http://www.aoc-europe.com</u>

Warranty Statement for Middle East and Africa (MEA)

And

The Commonwealth of Independent States (CIS)

LIMITED ONE to THREE YEARS WARRANTY*

For AOC LCD Monitors sold within the Middle East and Africa (MEA) and the Commonwealth of Independent States (CIS), AOC International (Europe) B.V. warrants this product to be free from defects in material and workmanship for a period of One (1) to Three (3) years from the manufacture date depending on sale country. During this period, AOC International (Europe) B.V. offers a Carry-In (return to Service Center) Warranty Support at an AOC's Authorized Service Center or Dealer and at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. As a Standard Policy, the warranty will be calculated from the manufacture date identified from the product ID serial number, but the total warranty will be Fifteen (15) months to Thirty Nine (39) months from MFD (manufacture date) depending on sale country. Warranty will be considered for exceptional cases that are out of warranty as per the product ID serial number and for such exceptional cases; Original Invoice/Proof Of Purchase Receipt is mandatory.

If the product appears to be defective, please contact your AOC authorized dealer or refer to the service and support section on AOC's website for the warranty instructions in your country:

- Egypt: <u>http://aocmonitorap.com/egypt_eng</u>
- CIS Central Asia: <u>http://aocmonitorap.com/ciscentral</u>
- Middle East: <u>http://aocmonitorap.com/middleeast</u>
- South Africa: http://aocmonitorap.com/southafrica
- Saudi Arabia: <u>http://aocmonitorap.com/saudiarabia</u>

Please ensure you provide a dated proof of purchase along with the product and deliver to the AOC Authorized Service Center or Dealer under the following condition:

- Make sure the LCD Monitor is packed in a proper carton box (AOC prefers the original carton box to
 protects your monitor well enough during transport).
- Put the RMA number on the address label
- Put the RMA number on the shipping carton

* This limited warranty does not cover any losses or damages that occur as a result of:

- Damages during transport due to improper packaging
- Improper installation or maintenance other then in accordance with AOC's user manual
- Misuse
- Neglect

- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Certified or Authorized Service Center
- Improper environments like humidity, water damage and dusts
- Damaged by violence, earthquakes and terrorist attacks
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modifications or alteration.

All AOC LCD Monitors are produced according to the ISO 9241-307 Class 1 pixel policy standards.

If your warranty has expired, you still have access to all available service options, but you will be responsible for the cost of service, including parts, labor, shipping (if any) and applicable taxes. AOC Certified, Authorized Service Center or dealer will provide you with an estimate of service costs before receiving your authorization to perform service.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF ONE (1) to THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. AOC INTERNATIONAL (EUROPE) B.V. OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCULSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) B.V. LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) B.V. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more information, please visit: <u>http://www.aocmonitorap.com</u>

AOC Pixel Policy ISO 9241-307 Class 1

ЛОС

AOC International (Europe) B.V. Prins Bernhardplein 200 / 6th floor, Amsterdam, The Netherlands Tel: +31 (0)20 504 6962 • Fax: +31 (0)20 5046933


AOC Pixel Policy ISO 9241-307 Class 1

July 25th, 2013

AOC strives to deliver the highest quality products. We use some of the industry's most advanced manufacturing processes and practice stringent quality control. However, pixel or sub pixel defects on the TFT monitor panels used in flat panel monitors are sometimes unavoidable. No manufacturer can guarantee that all panels will be free from pixel defects, but AOC guarantees that any monitor with an unacceptable number of defects will be repaired or replaced under warranty. This Pixel Policy explains the different types of pixel defects and defines acceptable defect levels for each type. In order to qualify for repair or replacement under warranty, the number of pixel defects on a TFT monitor panel must exceed these acceptable levels.

Pixels and Sub Pixel Definition

A pixel, or picture element, is composed of three sub pixels in the primary colors of red, green and blue. When all sub pixels of pixel are lit, the three colored sub pixel together appear as a single white pixel. When all are dark, the three colored sub pixels together appear as a single black pixel.

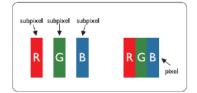

Types of Pixel Defects

- Bright Dot Defects: the monitor displays a dark pattern, sub pixels or pixels are always lit or "on"
- · Black Dot Defects: the monitor displays a light pattern, sub pixels or pixels are always dark or "off"

ISO 9241-307 Pixel Defect Class	Defect Type 1 Bright Pixel	Defect Type 2 Black Pixel	Defect Type 3 Bright Sub pixel	Defect Type 4 Black Sub pixel
			2 -	+ 1
Class 1	1	1	1 .	+ 3
			0 -	+ 5

AOC International (Europe) B.V.

Warranty Statement for North & South America (excluding Brazil)

WARRANTY STATEMENT for AOC Color Monitors Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- PRepair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/warranty

ARGENTINA: http://ar.aoc.com/support/warranty_ BOLIVIA: http://bo.aoc.com/support/warranty____ CHILE: http://cl.aoc.com/support/warranty COLOMBIA: http://co.aoc.com/warranty COSTA RICA: http://cr.aoc.com/support/warranty DOMINICAN REPUBLIC: http://do.aoc.com/support/warranty ECUADOR: http://ec.aoc.com/support/warranty EL SALVADOR: http://sv.aoc.com/support/warranty____ GUATEMALA: http://gt.aoc.com/support/warranty HONDURAS: http://hn.aoc.com/support/warranty NICARAGUA: http://ni.aoc.com/support/warranty PANAMA: http://pa.aoc.com/support/warranty PARAGUAY: http://py.aoc.com/support/warranty_ PERU: http://pe.aoc.com/support/warranty URUGUAY: http://pe.aoc.com/warranty VENEZUELA: http://ve.aoc.com/support/warranty IF COUNTRY NOT LISTED: http://latin.aoc.com/warranty