

# LCD Monitor User Manual 24G2E/27G2E/24G2E5/27G2E5

LED backlight



WWW.AOC.COM ©2019 AOC. All Rights Reserved.

Safety
National Conventions
Power
Installation
Cleaning
Other7
Setup
Contents in Box
Setup Base
Adjusting the monitor
Connecting the Monitor11
Adaptive-Sync function
Adjusting13
Hotkeys13
OSD Setting14
Luminance
Image Setup16
Color Setup17
Picture Boost18
OSD Setup19
Game Setting
Extra21
Exit22
LED Indicator
Troubleshoot24
Specification
General Specification
Preset Display Modes
Pin Assignments
Plug and Play

## Safety

## **National Conventions**

The following subsections describe notational conventions used in this document.

#### Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.



**CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**WARNING:** A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

#### Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V ~, Min. 5A

A The wall socket shall be installed near the equipment and shall be easily accessible.

### Installation


Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.

Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

Do not place the front of the product on the floor.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or with the stand:

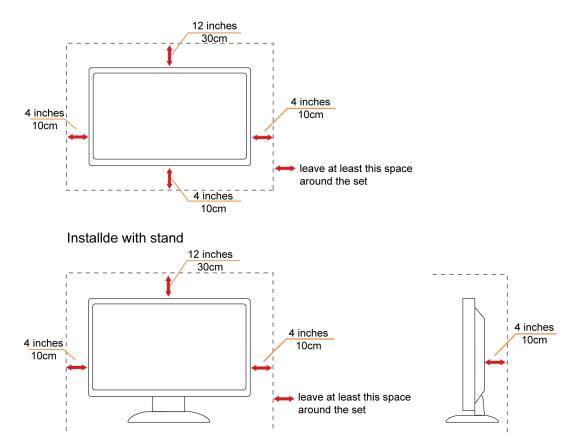


#### Installde on the wall

## Cleaning

Clean the cabinet regularly with cloth. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

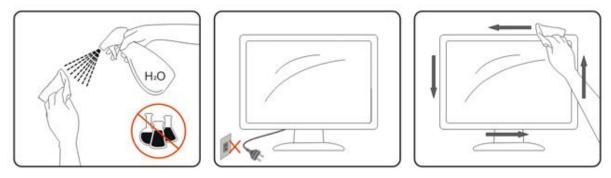

### Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.

All Make sure that the ventilating openings are not blocked by a table or curtain.


L Do not engage the LCD monitor in severe vibration or high impact conditions during operation.

L Do not knock or drop the monitor during operation or transportation.

For display with glossy bezel the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.

## Setup

## **Contents in Box**

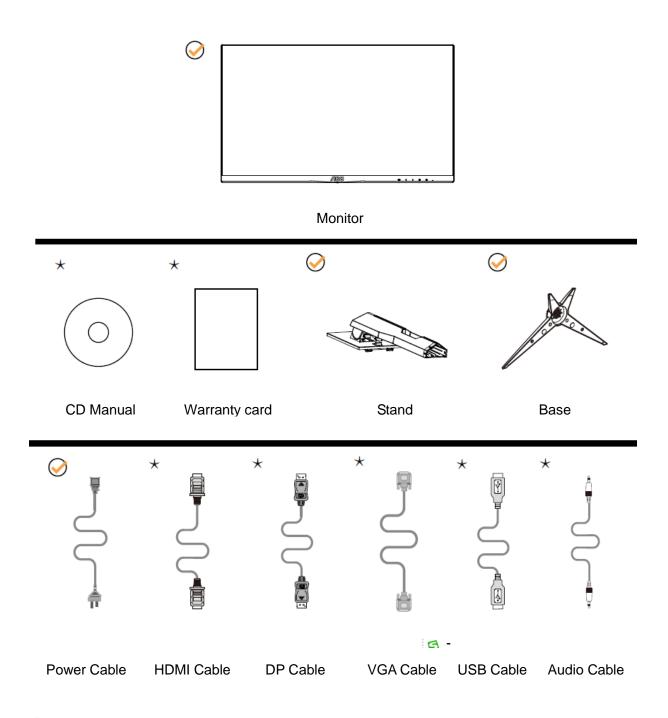


Not all signal cables (HDMI / DP / VGA / USB /Audio cables), CD manual will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.


## Setup Base

Please setup or remove the base following the steps as below. Please place the monitor on a soft and flat surface to prevent the scratch.

### Setup:

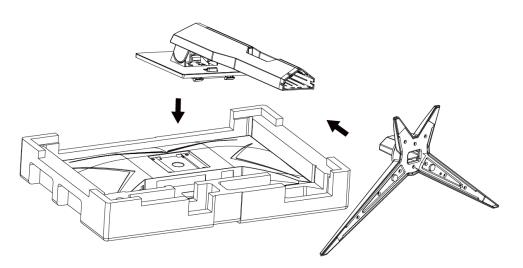


#### Remove:

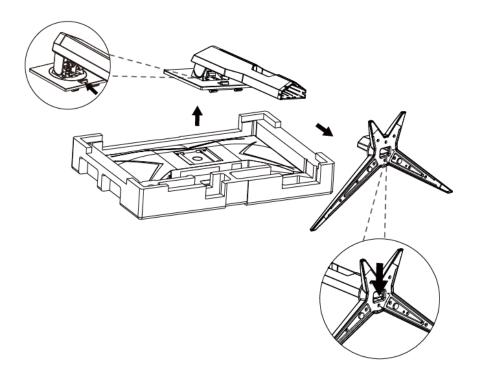

## Adjusting the monitor

For optimal viewing, it is recommended to look at the full face of the monitor, and then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

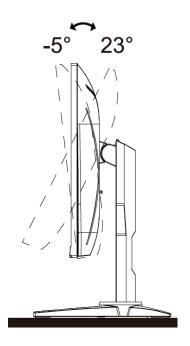




Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.

## **Connecting the Monitor**

Cable Connections In Back of Monitor and Computer:

#### 24G2E/27G2E

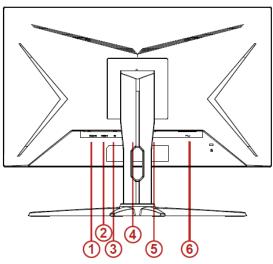

24G2E5/27G2E5

- 1 HDMI 2
- 2 HDMI 1
- 3 DP
- 4 Analog (D-Sub 15-Pin VGA cable)
- 5 Earphone out
- 6 Power

To protect equipment, always turn off the PC and LCD monitor before connecting.

- 1. Connect the power cable to the AC port on the back of the monitor.
- 2. Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.
- (Optional Requires a video card with HDMI port) Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.
- 4. (Optional Requires a video card with DP port) Connect one end of the DP cable to the back of the monitor and connect the other end to the computer's DP port.
- 5. Turn on your monitor and computer.


If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

## Adaptive-Sync function

- 1. Adaptive-Sync function is working with DP/HDMI1/HDMI2
- 2. Compatible Graphics Card: Recommend list is as the below, also could be checked by visiting www.AMD.com
- AMD Radeon™ RX 480
- AMD Radeon™ RX 470
- AMD Radeon™ RX 460
- Radeon Pro Duo
- AMD Radeon R9 300 Series
- AMD Radeon R9 Fury X
- AMD Radeon R9 360
- AMD Radeon R7 360
- AMD Radeon R9 295X2
- AMD Radeon R9 290X
- AMD Radeon R9 290
- AMD Radeon R9 285
- AMD Radeon R7 260X
- AMD Radeon R7 260

## Adjusting

## Hotkeys

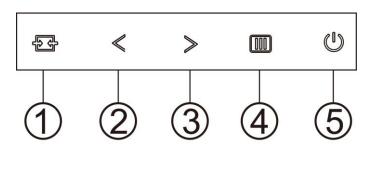

1	Source/Auto/Exit
2	Game Mode/<
3	Dial Point/>
4	Menu/Enter
5	Power

#### Source/Auto/Exit

When the OSD is closed, press "the "button will be Source hot key function. When the OSD is closed, press "the "button continuously about 2 seconds to do auto configure (Only for the models with D-Sub).

#### Game Mode/<

When there is no OSD, press "<" key to open game mode function, then press "<" or ">" key to select game mode (FPS, RTS, Racing, Gamer 1, Gamer 2 or Gamer 3) basing on the different game types.

#### **Dial Point**

When there is no OSD, press Dial Point button to active Dial Point menu, and then press "<" or ">" to set Dial Point on or off.

#### Menu/Enter

When there is no OSD, Press to display the OSD or confirm the selection.

#### Power

Turn on/off the monitor.

## **OSD Setting**

Basic and simple instruction on the control keys.

< <u>\$</u> >	Image Setup	Color Setup	Picture Boost	SSD Setup	Game Setting	X Extra	Exit
Contrast							
Brightness							
Eco mode				Off 🕨			
	Z. Image Setup	Color Setup	Picture Boost	OSD Setup	Game Setting	X Extra	<b>T</b> Exit
Contrast	Image Setup	Color Setup		OSD Setup Gamma 1	Game Setting		
Contrast Brightness	Image Setup		Picture Boost		Game Setting		

- 1. Press the **III MENU-button** to activate the OSD window.
- 2. Press **< or >** to navigate through the functions. Once the desired function is highlighted,

press the  $\blacksquare$  to activate it. If there is a sub-menu, press < or > to navigate through the sub-menu functions.

- 3. Press < or > to change the settings of the selected function. Press to exit. If you want to adjust any other function, repeat steps 2-3.
- 4. OSD Lock Function: To lock the OSD, press and hold the MENU-button while the monitor is off and then press U power button to turn the monitor on. To un-lock the OSD press and hold the MENU-button while the monitor is off and then press U power button to turn the monitor on.

#### Notes:

- 1. If the product has only one signal input, the item of "Input Select" is disabled.
- 2. If the product screen size is 4:3 or input signal resolution is native resolution, the item of "Image Ratio" is disabled.
- 3. One of DCR, Color Boost and Picture Boost functions is activated; the other two functions are turned off accordingly.

#### Luminance

< <u>.</u> >	Image Setup	C	color Setup	Picture	e Boost	Se OSD S	etup	Game Setting	× Extra	Exit
Contrast Brightness		50 90		Gamma DCR		Gamma 1 Off				
Eco mode	Standard			HDR Effect	3	Off				
< <u>*</u> >	Tak Image Setup	С	Color Setup	Picture		OSD S	) etup	Game Setting	× Extra	Exit
Contrast	Image Setup	C 50	color Setup			OSD S Gamma 1	etup	Game Setting		
Contrast Brightness	Image Setup		color Setup	Picture	Boost			Game Setting		

	Contrast	0-100		Contrast from Digital-register.		
	Brightness	0-100		Backlight Adjustment		
		Standard		Standard Mode		
		Text	T	Text Mode		
		Internet		Internet Mode		
	Eco mode	Game	-	Game Mode		
		Movie	0	Movie Mode		
-0-		Sports	R	Sports Mode		
1		Reading	R	Reading Mode		
		Gamma1		Adjust to Gamma 1		
	Gamma	Gamma2		Adjust to Gamma 2		
		Gamma3		Adjust to Gamma 3		
		Off		Disable dynamic contrast ratio		
	DCR	On		Enable dynamic contrast ratio		
		OFF				
	HDR	HDR Picture		Adjust HDR Effect/Mode		
	Effect/Mode	HDR Movie		Adjust HDR Effect/Mode		
		HDR Game				

#### Image Setup



Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
 Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise.
Sharpness	0-100	Adjust picture sharpness.
H. Position	0-100	Adjust the horizontal position of the picture.
V. Position	0-100	Adjust the vertical position of the picture.

### **Color Setup**

	Picture Boo	ost	CSD Setup	Game Setting	) Extra	Exit	Luminance	Image Setup
					50			
DCB Mode	Off			en 📃	50			
DCB Demo	Off				50			

	Warm		Recall Warm Color Temperature from EEPROM.
	Normal		Recall Normal Color Temperature from EEPROM.
Color Temp.	Cool		Recall Cool Color Temperature from EEPROM.
	sRGB		Recall SRGB Color Temperature from EEPROM.
	User		Recall User Color Temperature from EEPROM
	Full Enhance	ON/OFF	Disable or Enable Full Enhance Mode.
	Nature Skin	ON/OFF	Disable or Enable Nature Skin Mode.
DCB Mode	Green Field	ON/OFF	Disable or Enable Green Field Mode.
	Sky-blue	ON/OFF	Disable or Enable Sky-blue Mode.
	AutoDetect	ON/OFF	Disable or Enable AutoDetect Mode.
DCB Demo		ON/OFF	Disable or Enable Demo.
Red		0-100	Red gain from Digital-register.
Green		0-100	Green gain from Digital-register.
Blue		0-100	Blue gain from Digital-register.

#### **Picture Boost**



	Bright Frame	ON/OFF	Enable/Disable Bright Frame
	Frame Size	14-100	Adjust the Size of the Frame
	Brightness	0-100	Brightness Adjustment for Enhance Area
<b>N</b> 1	Contrast	0-100	Contrast Adjustment for Enhance Area
	H. position	0-100	Adjust the horizontal position of the Frame
	V. position	0-100	Adjust the vertical position of the Frame

#### Note:

Adjust the brightness, contrast, and position of the Bright Frame for better viewing experience.

#### **OSD Setup**

< 💫 >	Game Se	) Extra	Exit	- XX- Luminance	Image Setup	Color Setup	Picture Boost
				_		Transparence	
							Off 🕨
DP Capability				-			

Language		Select the OSD language.
Timeout	5-120	Adjust the OSD timeout.
DP Capability	1.1/1.2	please be noted that only DP1.2 support free sync function
H. Position	0-100	Adjust the horizontal position of the OSD.
V. Position	0-100	Adjust the vertical position of the OSD.
Volume	0-100	Volume Adjustment.
Transparence	0-100	Adjust the OSD.
Break Reminder	ON/OFF	Break reminder if the user continuously work for more than 1hrs.

#### Notes:

If the DP video content supports DP1.2, please select DP1.2 for DP Capability; otherwise, please select DP1.1

### Game Setting

< 🖗 > Game Batting	Extra Exit		Luminance	The Image Setup		Color Setup	Picture Boost		OSD Setup		
Game Mode	•	Off	×	Game Color			10	Adaptive-Sync	•	Off	
						Off					
		Off				Off					

			For playing FPS (first Person Shooters) games.		
		FPS	Improves dark theme black level details.		
		RTS	For playing RTS (Real Time Strategy). Improves the		
	Game Mode	RIS	image quality.		
		Racing	For playing Racing games, Provides fastest response time and high color saturation.		
		Gamer 1	User's preference settings saved as Gamer 1.		
		Gamer 2	User's preference settings saved as Gamer 2.		
		Gamer 3	User's preference settings saved as Gamer 3.		
		off	No optimization by Smart image game		
	Shadow Control	0-100	<ul> <li>Shadow Control Default is 50, then end-user can adjust from 50 to 100 or 0 to increase contrast for clear picture.</li> <li>1. If picture is too dark to be saw the detail clearly, adjusting from 50 to100 for clear picture</li> <li>2. If picture is too white to be saw the detail clearly, adjusting from 50 to0 for clear picture</li> </ul>		
	Low input Lag (24G2E/27G2E)	ON/OFF	Turn off frame buffer to decrease input lag		
بخوه)	Game Color	0-20	Game Color will provide 0-20 level for adjusting saturation to get better picture.		
V	LowBlue Mode	Reading / Office / Internet / Multimedia / Off	Decrease blue light wave by controlling color temperature.		
		Weak			
		Medium			
		Strong			
	Overdrive	Boost (Motion	Adjust the response time.		
		picture response			
		time 1ms)			
		Off			
	Adaptive-Sync	ON/OFF	Adjust the Adaptive-Sync.		
	Frame Counter	Off / Right-Up / Right-Down / Left-Down / Left-Up	Display vertical scanning frequency		
	MBR	0-20	MBR (Motion Blur Reduction) will provide 0 – 20 levels for adjusting visible motion blur.		

#### Note:

Boost or MBR must be above 75Hz refresh rate to start.

Extra

< 🔆 >	·	Exit	Luminance	Z. Image Setup	Color Setup	Picture Boost	OSD Setup	Game Setting
							ion : 1920(H)X108	0(V)
				DDC/CI			uency : 67KHz	
Off Timer								

	Input Select	Auto/D-SUB/HDMI1/HDMI2/DP	Select input signal source.		
	Auto Config.	Yes / No	Auto adjust the picture to default.		
	Off Timer	0-24 hrs	Select DC off time.		
	Image Ratio (24G2E5/27G2E5)	Wide/4:3	Select image ratio for display.		
		Wide			
		4:3			
	Image Ratio (24G2E/27G2E)	1:1	-		
-		17" (4:3)			
		19" (4:3)			
		19" (5:4) (27G2E)			
		19"W (16:10)	<ul> <li>Select image ratio for display.</li> </ul>		
		21.5"W (16:9)			
		22"W (16:10) (27G2E)			
		23"W (16:9)			
		23.6"W (16:9)			
		24"W (16:9) (27G2E)			
	DDC/CI	Yes / No	Turn on or off DDC/CI Support.		
	Reset	Yes / No	Reset the menu to default.		

Exit							
$< \bigvee_{min} > 1$	Luminance	Image Setup	Color Setup	Picture Boost	CSD Setup	Game Setting	) Extra

1 Press **IMENU** (Menu) to display menu.



## **LED Indicator**

Status	LED Color
Full Power Mode	White
Power Saving	Orange

## Troubleshoot

Problem & Question	Possible Solutions			
	Make sure the power button is ON and the Power Cord is properly connected			
Power LED Is Not ON	to a grounded power outlet and to the monitor.			
	Is the power cord connected properly?			
	Check the power cord connection and power supply.			
	Is the cable connected correctly?			
	(Connected using the D-sub cable)			
	Check the DB-15 cable connection.			
	(Connected using the DVI cable)			
	Check the DVI cable connection.			
	(Connected using the HDMI cable)			
	Check the HDMI cable connection.			
	(Connected using the DP cable)			
	Check the DP cable connection.			
	* DVI/HDMI/DP input is not available on every model.			
	• If the power is on, reboot the computer to see the initial screen (the login			
No images on the screen	screen), which can be seen.			
	If the initial screen (the login screen) appears, boot the computer in the			
	applicable mode (the safe mode for Windows 7/8/10) and then change			
	the frequency of the video card.			
	(Refer to the Setting the Optimal Resolution)			
	If the initial screen (the login screen) does not appear, contact the			
	Service Center or your dealer.			
	Can you see "Input Not Supported" on the screen?			
	You can see this message when the signal from the video card exceeds			
	the maximum resolution and frequency that the monitor can handle			
	properly.			
	Adjust the maximum resolution and frequency that the monitor can			
	handle properly.			
	Make sure the AOC Monitor Drivers are installed.			
	Adjust the Contrast and Brightness Controls.			
	Press to auto adjust.			
Picture Is Fuzzy & Has	Make sure you are not using an extension cable or switch box. We			
Ghosting Shadowing Problem	recommend plugging the monitor directly to the video card output connector			
	on the back.			
	Move electrical devices that may cause electrical interference as far away			
Picture Bounces, Flickers Or	from the monitor as possible.			
Wave Pattern Appears In The	Use the maximum refresh rate your monitor is capable of at the resolution			
Picture	you are using.			
	you are doing.			

Monitor Is Stuck In Active Off-Mode"	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.
Horizontal or vertical disturbances on the screen	Use Windows7/8/10 shut-down mode to adjust CLOCK and PHASE. Press to auto-adjust.

## **Specification**

## **General Specification**


	Model name	24G2E/24G2E5				
	Driving system	TFT Color LCD				
	Viewable Image Size	60.5 cm diagonal				
Panel	Pixel pitch	0.2745(H)mm x 0.2745(V)mm				
	Video	R, G, B Analog Interface & HDMI Interface & DP Interface				
	Separate Sync.	H/V TTL				
	Horizontal scan range	30~160KHz				
	Horizontal scan Size(Maximum)	527.04mm				
	Vertical scan range	48~144Hz (24G2E) 48~75Hz (24G2E5)				
	Vertical scan Size(Maximum)	296.46mm				
	Optimal preset resolution	1920x1080@60Hz				
Others	Max resolution	1920x1080@60Hz(D-SUB) 1920x1080@144Hz(HDMI、DP) (24G2E) 1920x1080@75Hz(HDMI、DP) (24G2E5)				
	Plug & Play	VESA DDC2B/CI				
	Power Source	100-240V~,50/60Hz				
		Typical (default brightness and contrast)		21W		
	Power Consumption	Max. (Brightness = 100,Contrast = 100)		≤ 30W		
		Power saving	≤0.3W			
Physical	Connector Type	D-Sub/ HDMI/DP/Earp	hone out	·		
Characteristics	Signal Cable Type	Detachable				
	Temperature:	Operating	0° to 40°C			
		Non-Operating	-25° to 55°C			
Environmental	Humidity:	Operating	10% to 85% (non-	condensing)		
Livioimentai		Non-Operating	5% to 93% (non-c	ondensing)		
	Altitude:	Operating 0~ 5000m(0~ 16404 ft)		04 ft)		
		Non-Operating	0~ 12192m (0~ 40	0000 ft )		

	Model name	27G2E/27G2E5			
	Driving system	TFT Color LCD			
Panel	Viewable Image Size	68.6 cm diagonal			
ranei	Pixel pitch	0.3114(H)mm x 0.3114(V)mm			
	Video	R, G, B Analog Interface & HDMI Interface & DP Interface			
	Separate Sync.	H/V TTL			
	Horizontal scan range	30~160KHz			
	Horizontal scan Size(Maximum)	597.888mm			
	Vertical scan range	48~144Hz (27G2E) 48~75Hz (27G2E5)			
	Vertical scan Size(Maximum)	336.312mm			
	Optimal preset resolution	1920x1080@60Hz			
Others		1920x1080@60Hz(D-SUB)			
	Max resolution	1920x1080@144Hz(HDMI、DP) (27G2E)			
		1920x1080@75Hz(HDMI、DP) (27G2E5)			
	Plug & Play	VESA DDC2B/CI			
	Power Source	100-240V~,50/60Hz			
		Typical (default brightness and contrast)		28W	
	Power Consumption	Max.(Brightness = 100,Contrast = 100)		≤ 36W	
		Power saving ≤0.3W			
Physical	Connector Type	D-Sub/ HDMI/DP/Earp	hone out		
Characteristics	Signal Cable Type	Detachable			
	Temperature:	Operating	0° to 40°C		
		Non-Operating	-25° to 55°C		
Environmental	Humidity:	Operating	10% to 85% (non-c	condensing)	
		Non-Operating	5% to 93% (non-co	ondensing)	
	Altitude:	Operating 0~ 5000m(0~ 16404 ft)			
		Non-Operating	0~ 12192m (0~ 400	000 ft )	

## Preset Display Modes


Standard	Resolution	H. Frequency (kHz)	V. Frequency (Hz)
VGA	640x480@60Hz	31.469	59.94
VGA	640x480@67Hz	35	66.667
VGA	640x480@72Hz	37.861	72.809
VGA	640x480@75Hz	37.5	75
VGA	640x480@100Hz	51.08	99.769
VGA	640x480@120Hz	61.91	119.518
DOS MODE	720x400@70Hz	31.469	70.087
DOS MODE	720x480@60Hz	29.855	59.710
SD	720x576@50Hz	31.25	50
SVGA	800x600@56Hz	35.156	56.25
SVGA	800x600@60Hz	37.879	60.317
SVGA	800x600@72Hz	48.077	72.188
SVGA	800x600@75Hz	46.875	75
SVGA	800x600@100Hz	63.684	99.662
SVGA	800x600@120Hz	76.302	119.97
SVGA	832x624@75Hz	49.725	74.551
XGA	1024x768@60Hz	48.363	60.004
XGA	1024x768@70Hz	56.476	70.069
XGA	1024x768@75Hz	60.023	75.029
XGA	1024x768@100Hz	81.577	99.972
XGA	1024x768@120Hz	97.551	119.989
WXGA+	1440x900@60Hz	55.935	59.887
SXGA	1280x1024@60Hz	63.981	60.02
SXGA	1280x1024@75Hz	79.975	75.025
HD	1280x720@50HZ	37.071	49.827
HD	1280x720@60HZ	45	60
HD	1280x1080@60Hz	67.173	59.976
Full HD	1920x1080@60Hz	67.5	60
Full HD (24G2E/27G2E)	1920x1080@100Hz	113.21	99.93
Full HD (24G2E/27G2E)	1920x1080@120Hz	137.26	119.982
Full HD (24G2E/27G2E)	1920×1080@144Hz	158.1	144
Full HD (24G2E5/27G2E5)	1920×1080@75Hz	83.909	74.986

## **Pin Assignments**

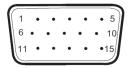


#### 15-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	Video-Red	9	+5V
2	Video-Green	10	Ground
3	Video-Blue	11	N.C.
4	N.C.	12	DDC-Serial data
5	Detect Cable	13	H-sync
6	GND-R	14	V-sync
7	GND-G	15	DDC-Serial clock
8	GND-B		

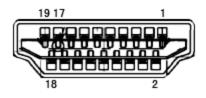

#### **19-Pin Color Display Signal Cable**

Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2+	11	TMDS Clock Shield
2	TMDS Data 2 Shield	12	TMDS Clock
3	TMDS Data 2	13	CEC
4	TMDS Data 1+	14	Reserved (N.C. on device
5	TMDS Data 1Shield	15	SCL
6	TMDS Data 1	16	SDA
7	TMDS Data 0+	17	DDC/CEC Ground
8	TMDS Data 0 Shield	18	+5V Power
9	TMDS Data 0	19	Hot Plug Detect
10	TMDS Clock +		

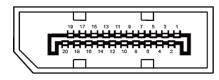

#### 20-Pin Color Display Signal Cable

Pin No.	Signal Name	Pin No.	Signal Name
1	ML Lane 3(n)	11	GND
2	GND	12	ML Lane 0(p)
3	ML Lane 3(p)	13	CONFIG1
4	ML Lane 2(n)	14	CONFIG2
5	GND	15	AUX CH(p)
6	ML Lane 2(p)	16	GND
7	ML Lane 1(n)	17	AUX CH(n)
8	GND	18	Hot Plug Detect
9	ML Lane 1(p)	19	Return OP PWR
10	ML Lane 0(n)	20	DP PWR

## **Plug and Play**

#### Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.